

Manuals.plus /

› [Korona](#) /

› [Korona 46222 Electric Barbecue User Manual](#)

## Korona 46222

# Korona 46222 Electric Barbecue User Manual

Model: 46222 | Brand: Korona

## PRODUCT OVERVIEW

---

The Korona 46222 Electric Barbecue is designed for fast and clean grilling, perfect for a variety of foods from vegetables and steaks to vegan cutlets. It heats up quickly, making grilling simple and enjoyable. A key advantage is its low smoke production, making it ideal for terraces or balconies. The grilling surface is easy to clean, ensuring convenience for your next barbecue session.



Image: The Korona 46222 Electric Barbecue in its assembled form, featuring a closed lid and extended side tables, ready for use.

## IMPORTANT SAFETY INFORMATION

---

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the barbecue is placed on a stable, level, and heat-resistant surface.
- Do not immerse the electrical components, cord, or plug in water or other liquids.
- Keep children and pets away from the hot barbecue.
- Use only the provided power cord and ensure it is not damaged. The power supply can be immediately switched off via a large safety lever on the cable connector.
- The lid handle is heat-insulated; however, always use oven mitts or gloves when handling hot surfaces.
- Unplug the barbecue from the power outlet when not in use and before cleaning.
- Allow the barbecue to cool completely before cleaning or storing.
- Do not use abrasive cleaners or scouring pads on the non-stick surface.

## COMPONENTS

---

Before assembly, ensure all parts are present and undamaged. The main components include:

- Grill Unit with Lid and Integrated Thermometer

- Grilling Plate (divided, grooved and smooth sections)
- Removable Drip Tray
- Stand Frame with Wheels
- Side Shelves (2)
- Power Cord with Safety Lever
- Assembly Hardware (screws, nuts, etc.)



Image: An overhead view of the Korona 46222 Electric Barbecue, emphasizing its XXL grilling surface (46x34 cm) and the two large side shelves.

## SETUP AND ASSEMBLY

---

The Korona 46222 Electric Barbecue is designed for flexible use, functioning as both a floor-standing unit and a tabletop device. Follow these steps for assembly:

1. Unpack all components and verify against the components list.
2. Assemble the stand frame according to the diagrams in the separate assembly guide. Ensure all screws are tightened securely for a stable position.
3. Attach the wheels to the designated axle on the stand frame.
4. Mount the grill unit onto the assembled stand. Ensure it clicks securely into place.
5. Attach the two large side shelves to the left and right of the grill unit. These provide ample space for food preparation and utensils.
6. Insert the removable drip tray into its designated slot beneath the grilling plate.



Image: The Korona 46222 Electric Barbecue being easily moved across a patio surface, demonstrating its portability thanks to integrated wheels.

## OPERATING INSTRUCTIONS

---

### Powering On and Temperature Control

1. Ensure the barbecue is fully assembled and the drip tray is in place.
2. Plug the power cord into a suitable electrical outlet.
3. Adjust the temperature control dial to your desired setting. The barbecue heats up very quickly.
4. The robust lid helps maintain a stable cooking temperature, allowing for both direct and indirect grilling. The integrated thermometer on the lid displays the current temperature within the barbecue area.

 


Image: A close-up view of the temperature gauge on the lid of the Korona 46222 Electric Barbecue, indicating fast heating and quick cooling capabilities.

### Grilling Tips

- Preheat the grill for 5-10 minutes before placing food on the surface to ensure even cooking.
- The extra-large grilling surface is divided into two sections, allowing you to cook different types of food simultaneously.
- The closed lid ensures low smoke development, making this barbecue ideal for use on terraces or balconies without disturbing neighbors.
- For best results, avoid overcrowding the grilling surface.



Image: The Korona 46222 Electric Barbecue's grilling surface, showing both grooved and smooth sections, with various foods like corn, vegetables, shrimp, and steak being cooked, highlighting its 230°C fast and precise heating.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and optimal performance of your Korona 46222 Electric Barbecue. Always ensure the unit is unplugged and completely cool before cleaning.

- The non-stick surface allows for easy preparation of various foods without excessive fat.
- The removable drip tray inside the grill body collects excess oil and grease.
- Both the grilling plate and the drip tray can be easily cleaned with mild commercial cleaning agents and a soft cloth or sponge. Do not use abrasive materials.
- Wipe down the exterior of the barbecue with a damp cloth. Do not use harsh chemicals.
- Ensure all parts are thoroughly dry before reassembling or storing the barbecue.

## STORAGE

---

The Korona 46222 Electric Barbecue is designed for convenient storage.

- To store the barbecue, release the fuse and easily fold the barbecue. This allows for small, vertical, and safe storage.
- The foldable design makes it space-saving, ideal for garages or small storage areas during off-season.



Image: The Korona 46222 Electric Barbecue folded into a compact form, illustrating its small vertical storage capability.



Image: The Korona 46222 Electric Barbecue stored upright in a narrow space, demonstrating its easy-to-store design.

## TROUBLESHOOTING GUIDE

---

If you encounter any issues with your Korona 46222 Electric Barbecue, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Barbecue does not heat up.	Not plugged in; power outlet malfunction; safety lever disengaged.	Ensure power cord is securely plugged in. Test outlet with another appliance. Check and engage the safety lever on the cable connector.
Uneven heating.	Grill surface not preheated; too much food on the grill.	Allow adequate preheating time. Avoid overcrowding the grilling surface.
Excessive smoke.	Accumulated grease/food residue; high-fat foods.	Clean the grilling surface and drip tray regularly. Use the lid to minimize smoke.
Food sticking to the grill.	Insufficient preheating; non-stick coating wear; no oil/marinade.	Ensure grill is fully preheated. Lightly brush food or grill surface with cooking oil if needed.

## TECHNICAL SPECIFICATIONS

---

Specification	Value
Product Dimensions	50 x 94.5 x 126.5 cm
Weight	12.4 kg
Model Number	46222
Material Type	Metal
Power Source Type	Corded Electric
Fuel Type	Electric
Special Feature	Removable Drip Tray
Color	Black
Manufacturer	Korona electric GmbH

## WARRANTY AND CUSTOMER SUPPORT

---

Korona products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Korona website. If you require technical assistance, have questions about your product, or need to report a defect, please contact Korona customer support through the contact information provided on the product packaging or the official website. Please have your model number (46222) and proof of purchase ready when contacting support.