

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Philips](#) /

› [Philips Multigroom Series 7000, 17-in-1 Head to Toe Trimmer, Chrome finish, Precision trimming comb, Self-sharpening metal blades, MG7940/85 User Manual](#)

Philips MG7940/85

Philips Multigroom Series 7000 User Manual

Model: MG7940/85

INTRODUCTION

The Philips Multigroom Series 7000 (Model MG7940/85) is a versatile 17-in-1 head-to-toe trimmer designed for precise styling of face, head, and body hair. This manual provides essential information for safe and effective use, maintenance, and troubleshooting of your device.



Image: The Philips Multigroom Series 7000 trimmer shown alongside its retail packaging, highlighting its 17-in-1 capabilities.

SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in injury or damage to the appliance.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Always ensure the appliance is switched off and unplugged before cleaning or maintenance.
- Do not immerse the charging adapter in water.

PRODUCT FEATURES

The Philips Multigroom Series 7000 is equipped with advanced features for a superior grooming experience:

- **17-in-1 Versatility:** Offers a comprehensive set of tools for styling face, head, and body hair.
- **Precision Trimming Comb:** Delivers consistent and accurate trim lengths.
- **Self-Sharpening Steel Blades:** Designed for long-lasting sharpness and durability.
- **BeardSense Technology:** Adapts motor power to hair density for an even trim.
- **Fast Hair Trimming:** Wide hair clipper and multiple length settings for efficient grooming.
- **Water-Resistant Design:** Allows for convenient use in the shower and easy cleaning under running water.
- **Long Battery Life:** Up to 120 minutes of cordless runtime with a lithium-ion battery.
- **Quick Charge Option:** Provides enough power for one full trim with a short charge.



Image: The Philips Multigroom Series 7000 trimmer displayed with its full array of 17 attachments, including various combs, trimmers, and detailers.

SETUP

1. Initial Charging

Before first use, fully charge your Philips Multigroom Series 7000. This ensures optimal battery performance and longevity.

1. Connect the charging cable to the trimmer's charging port.
2. Plug the adapter into a wall outlet.
3. The battery indicator light will show charging status. A full charge typically takes approximately 1 hour for 120

minutes of runtime.

4. Once fully charged, unplug the device from the power outlet before use.



Image: A close-up of hands connecting the charging cable to the base of the Philips Multigroom trimmer.

2. Attaching and Detaching Trimming Heads/Combs

Ensure the trimmer is switched off before attaching or detaching any accessories.

- **To Attach:** Align the desired trimming head or comb with the trimmer body and press firmly until it clicks into place.
- **To Detach:** Gently pull the trimming head or comb away from the trimmer body. Some attachments may have a release button.

OPERATING INSTRUCTIONS

The Philips Multigroom Series 7000 offers various attachments for different grooming needs. Always ensure your skin and hair are clean and dry before trimming, unless using the device for wet shaving.

1. General Operation

- **Power On/Off:** Press the power button once to turn the trimmer on or off.
- **Trimming Technique:** For best results, move the trimmer against the direction of hair growth. Use light pressure and smooth, even strokes.



Image: A hand pressing the green power button located on the front of the Philips Multigroom trimmer.

2. Face Grooming (Beard & Stubble)

Use the precision trimming comb or various beard combs for desired length.

- Attach the desired beard comb.
- Select the desired length setting on the comb, if adjustable.
- Trim your beard or stubble by moving the trimmer in smooth strokes against the direction of hair growth.
- For precise lines and edges, remove the comb and use the bare trimmer blade.



Image: A man using the Philips Multigroom trimmer to shape his beard, demonstrating a common use case.



Image: An illustrative diagram showing the BeardSense technology, with waves indicating the trimmer adapting to beard density.

3. Head Grooming (Hair Clipping)

Use the wide hair clipper and appropriate hair combs for cutting hair on your head.

- Attach the desired hair comb.
- Start with a longer comb setting if unsure, and gradually reduce the length.
- Move the trimmer slowly and evenly over your head, ensuring all hair is cut to the desired length.



Image: A man using the Philips Multigroom trimmer with a comb attachment to trim the hair on the back of his head.

4. Body Grooming

Use the body shaver or body combs for comfortable and safe body hair trimming.

- Attach the body shaver or desired body comb.
- For sensitive areas, use the skin protector attachment.
- Move the trimmer gently over the skin, stretching the skin taut in sensitive areas.

5. Nose & Ear Trimming

Use the dedicated nose and ear trimmer attachment for safe removal of unwanted hair.

- Attach the nose and ear trimmer.
- Gently insert the trimmer tip into the nostril or ear canal.
- Rotate the trimmer slowly to cut hair. Do not insert too deeply.



Image: A man using the specialized nose and ear trimmer attachment to remove unwanted hair from his nose.

MAINTENANCE & CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your trimmer.

1. Cleaning the Trimmer

- **After Each Use:** Switch off the trimmer and detach the trimming head.
- Rinse the trimming head and combs under running tap water. The trimmer body is water-resistant and can also be rinsed.
- Shake off excess water and allow all parts to air dry completely before reattaching or storing.
- Do not use abrasive cleaning agents or harsh chemicals.



Image: The Philips Multigroom trimmer being held under running water, demonstrating its water-resistant design for easy cleaning.

2. Blade Lubrication (If Necessary)

The self-sharpening blades generally do not require lubrication. However, if you notice reduced performance or increased noise, a drop of light machine oil (e.g., sewing machine oil) on the blades may help. Consult the Philips support website for specific recommendations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully. Ensure the charging cable is properly connected and the power outlet is active.
Trimmer pulls hair or cuts unevenly.	Blades are dirty or clogged with hair. / Attachment is not properly secured. / Battery is low.	Clean the trimming head and blades thoroughly. Ensure the attachment is securely clicked into place. Charge the trimmer.
Reduced trimming performance.	Blades may require lubrication (rare for self-sharpening). / Excessive hair density.	Clean the blades. If problem persists, apply a small drop of light machine oil to the blades. Move the trimmer slower and use multiple passes for dense hair.
Trimmer makes unusual noise.	Hair caught in the mechanism. / Blades need cleaning/lubrication.	Clean the trimmer head thoroughly. If noise persists, apply a drop of oil to the blades.

If the problem persists after trying these solutions, please contact Philips customer support.

SPECIFICATIONS

- **Model Number:** MG7940/85
- **Brand:** Philips
- **Power Source:** Rechargeable Lithium-ion Battery
- **Runtime:** Up to 120 minutes
- **Charging Time:** Approximately 1 hour
- **Water Resistance:** Fully washable (Wet & Dry)
- **Blades:** Self-sharpening metal blades
- **Weight:** Approximately 550 grams
- **Country of Origin:** Indonesia

WARRANTY & SUPPORT

Your Philips Multigroom Series 7000 comes with a manufacturer's warranty.

- **Warranty Period:** Typically 1 year from the date of purchase. Please refer to your purchase documentation or the official Philips website for exact warranty terms and conditions in your region.
- **Customer Support:** For product registration, technical assistance, or to find authorized service centers, please visit the official Philips support website or contact their customer service hotline.
- **Online Resources:** [Visit the Philips Store on Amazon](#) for more product information and accessories.

© 2025 Philips. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.