

PRITOM M10

PRITOM M10 Android Tablet User Manual

Model: M10

INTRODUCTION

This manual provides comprehensive instructions for the PRITOM M10 Android Tablet. Please read this guide thoroughly before using your device to ensure proper operation and to maximize its features. Keep this manual for future reference.

1. SETUP

1.1 Package Contents

Verify that all items are present in the package:

- PRITOM M10 Android Tablet
- Keyboard
- Wireless Mouse
- Flat Protective Cover
- Power Adapter
- Data Cable (USB-C)

6000mAh Ultra Long Life Battery



6H VIDEO



10H MUSIC



12H BROWSING

Type-C Port

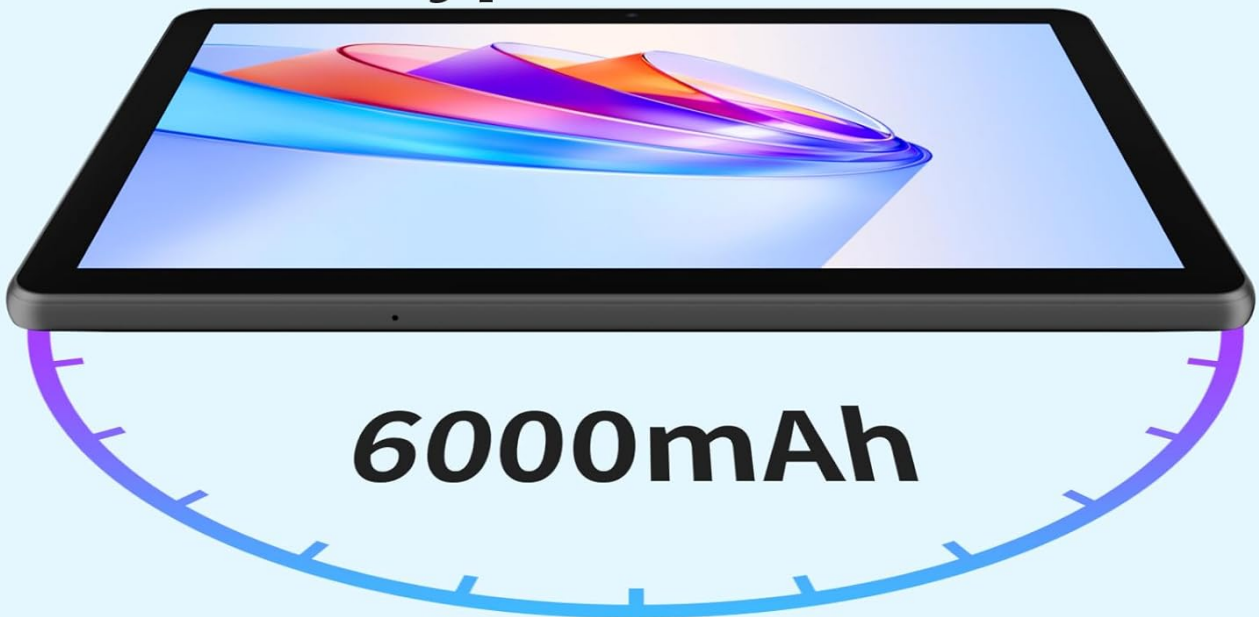


Image 1.1: Included accessories with the PRITOM M10 Tablet.

1.2 Initial Charging

Before first use, fully charge the tablet. Connect the provided USB-C data cable to the tablet's Type-C port and the power adapter. Plug the adapter into a wall outlet. The charging indicator will illuminate.

1.3 Power On/Off

- **To Power On:** Press and hold the Power Button located on the side of the tablet until the screen lights up.
- **To Power Off:** Press and hold the Power Button, then select 'Power Off' from the options displayed on the screen.
- **To Restart:** Press and hold the Power Button, then select 'Restart' from the options.



Image 1.2: Hardware overview of the PRITOM M10 Tablet, indicating button and port locations.

1.4 Network Connection (Wi-Fi)

1. Go to 'Settings' > 'Network & internet' > 'Wi-Fi'.
2. Toggle Wi-Fi 'On'.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted, then tap 'Connect'.

2. OPERATING INSTRUCTIONS

2.1 User Interface and Navigation

The PRITOM M10 Tablet runs on Android 13, providing an intuitive user experience. Navigate by tapping, swiping, and pinching on the 10-inch HD IPS display.



Flat Protective Cover



Keyboard



Android Tablet



Wireless Mouse



Power Adapter



Data Cable

Image 2.1: The PRITOM M10 Tablet's 1280x800 HD IPS display in use.

2.2 Camera Usage

The tablet is equipped with a 2.0 MP front camera and an 8.0 MP rear camera.

- Open the 'Camera' application.
- Tap the camera icon to switch between front and rear cameras.
- Tap the shutter button to take photos or start/stop video recording.

2.3 Audio Features

The PRITOM M10 features dual speakers for enhanced audio output. A 3.5mm headphone jack is also available for private listening.

2.4 Storage Management

The tablet comes with 64GB of internal storage and supports Micro SD card expansion up to 1TB. To insert a Micro

SD card, locate the dual card slot as shown in Image 1.2.

Plenty of room for files and media

Ample storage capacity for all your work and leisure needs.

 **8GB**
RAM
8GB (4G+4G Expand)

 **64GB**
ROM

 **1TB Expansion**
(Micro SD)

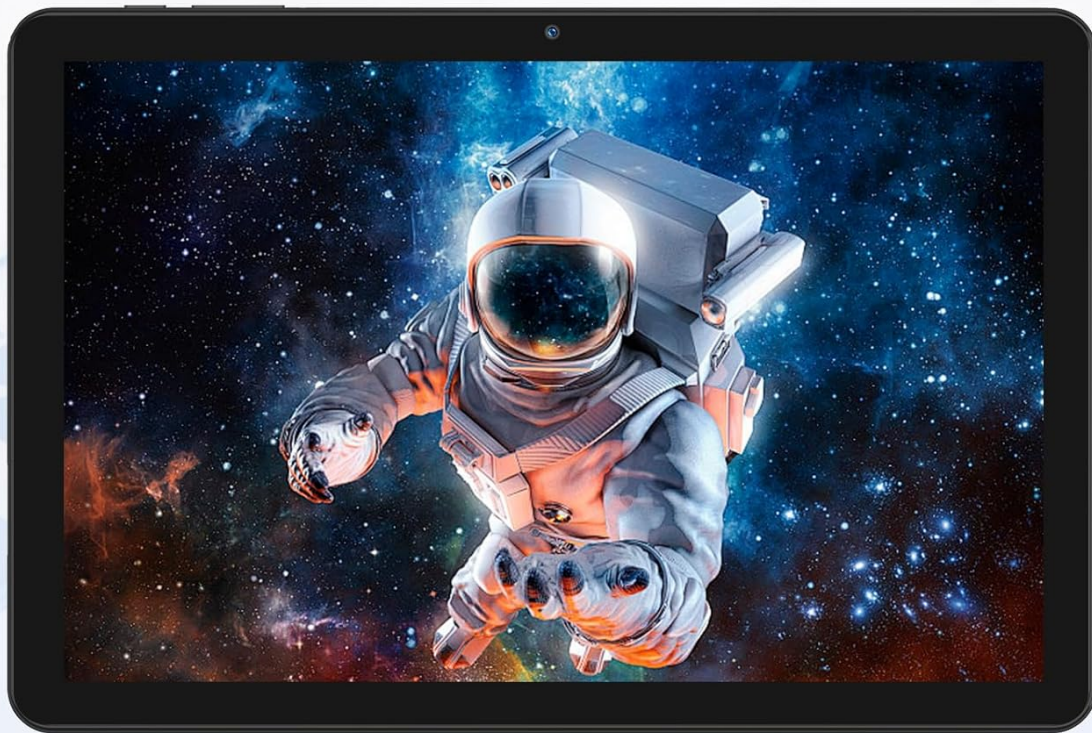


Image 2.2: Storage and RAM specifications of the PRITOM M10 Tablet.

2.5 Versatile Use Cases

The PRITOM M10 tablet is designed for various activities, including learning, reading, watching videos, listening to music, making video calls, and productivity tasks.



Image 2.3: Examples of how the PRITOM M10 Tablet can be utilized.

3. MAINTENANCE

3.1 Battery Care

The tablet is equipped with a 6000mAh lithium battery. To prolong battery life:

- Avoid extreme temperatures.
- Do not let the battery fully discharge frequently.
- Use the original charger and cable.

6000mAh High Capacity Battery

8  hours video

12  hours daily use

20  hours reading



Image 3.1: PRITOM M10 Tablet 6000mAh battery performance estimates.

3.2 Cleaning

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials.

3.3 Software Updates

Regularly check for and install software updates to ensure optimal performance and security. Go to 'Settings' > 'System' > 'System update'.

4. TROUBLESHOOTING

4.1 Common Issues

- **Tablet not turning on:** Ensure the battery is charged. Connect to the charger for at least 30 minutes before attempting to power on.
- **Screen unresponsive:** Try restarting the tablet. If unresponsive, press and hold the power button for 10-15

seconds to force a shutdown, then power on again.

- **Wi-Fi connection issues:** Check if Wi-Fi is enabled. Restart your router and the tablet. Ensure you are entering the correct password.
- **Slow performance:** Close unused applications. Clear cache regularly. Consider uninstalling unnecessary apps.

4.2 Factory Reset

A factory reset will erase all data from your tablet and restore it to its original factory settings. Back up important data before proceeding.

1. Go to 'Settings' > 'System' > 'Reset options'.
2. Select 'Erase all data (factory reset)'.
3. Confirm your choice and follow the on-screen prompts.






5. SPECIFICATIONS

Feature	Specification
Brand	PRITOM
Model Name	M10
Operating System	Android 13
Screen Size	10 Inches
Display Resolution	1280 x 800 pixels (HD IPS)
Processor	Octa-Core (Qualcomm)
RAM	8 GB (4GB + 4GB Expansion)
Internal Storage	64 GB
Expandable Storage	Up to 1 TB (Micro SD, not included)
Rear Camera	8.0 MP
Front Camera	2.0 MP
Battery Capacity	6000 mAh
Connectivity	Wi-Fi (802.11n)
Ports	Type-C, 3.5mm Headphone Jack, Dual Card Slot
Color	Black

6. WARRANTY AND SUPPORT

Your PRITOM M10 Tablet is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support or warranty claims, please contact PRITOM customer service through their official website or the retailer where the product was purchased.

Related Documents - M10

	<p>PRITOM IRA T1029 User Guide</p> <p>User guide for the PRITOM IRA T1029 tablet, covering function overview, getting started, home screen, settings, network connection, app management, multimedia, troubleshooting, and specifications.</p>
	<p>M10 TWS Earphones User Manual and Specifications</p> <p>Comprehensive guide for M10 TWS earphones, covering specifications, pairing, operation, maintenance, safety, and warranty information.</p>
	<p>M10 Wireless Headset User Manual and Specifications</p> <p>Comprehensive guide for the M10 Wireless Headset, covering product features, operation, pairing, troubleshooting, and FCC compliance. Includes detailed instructions for use and maintenance.</p>
	<p>M10 Self-Cleaning Robot Vacuum and Mop Owner's Manual</p> <p>Owner's manual for the M10 Self-Cleaning Robot Vacuum and Mop, providing safety information, product introductions, usage instructions, routine maintenance, troubleshooting, and FAQs.</p>
	<p>Benton M10 Tablet PC User Guide, Specifications, and FCC Compliance</p> <p>Comprehensive user guide for the Benton M10 Tablet PC, covering setup, features, network connection, app management, troubleshooting, and FCC compliance information.</p>
	<p>VASTKING KingPad M10 User Manual</p> <p>Official user manual for the VASTKING KingPad M10 tablet, providing detailed instructions on setup, features, and operation of your Android device.</p>