

Bennett Read 2.0 Grill Boss

Bennett Read 2.0 Grill Boss Instruction Manual

Model: 2.0 Grill Boss

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use the appliance for other than intended use.

2. PRODUCT OVERVIEW

The Bennett Read 2.0 Grill Boss is a versatile electric grill designed for indoor use, functioning as both a contact grill/sandwich press and an open griddle. It features non-stick cooking plates and an integrated oil catchment system for convenient and healthier cooking.

Key Features:

- **180-Degree Opening:** The grill opens completely flat to create a double griddle cooking surface.
- **Floating Hinge:** Ensures even downward pressure on food, accommodating various thicknesses.
- **Non-Stick Plates:** Facilitates easy food release and cleaning.
- **Oil Catchment Tray:** Collects excess oils and fats for healthier meals and easier disposal.
- **Variable Heat Control:** Adjustable temperature settings for precise cooking.



Image: The Bennett Read 2.0 Grill Boss in its open position, displaying the upper and lower non-stick grill plates.



Image: Front view of the closed Bennett Read 2.0 Grill Boss, highlighting the temperature control knob and power/ready indicator lights.

3. SETUP

1. **Unpacking:** Carefully remove the grill and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the non-stick cooking plates with a damp cloth or sponge. Dry thoroughly. Wipe the exterior of the appliance with a damp cloth. Do not immerse the appliance in water.
3. **Placement:** Place the grill on a stable, flat, heat-resistant surface, away from walls or cabinets, ensuring adequate ventilation.
4. **Oil Tray:** Ensure the oil catchment tray is correctly inserted into its designated slot at the front or side of the grill.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. The power indicator light will illuminate.

4. OPERATING INSTRUCTIONS

4.1 Preheating

1. Close the grill plates.
2. Turn the temperature control knob to the desired setting (e.g., 'Max' for most grilling).
3. Allow the grill to preheat. The 'Ready' indicator light will illuminate when the grill has reached the set temperature. This typically takes 5-10 minutes.

4.2 Using as a Contact Grill / Sandwich Press

This mode is ideal for sandwiches, paninis, chicken breasts, and other items that benefit from cooking on both sides simultaneously.

1. Preheat the grill as described above.
2. Carefully place food onto the bottom grill plate. Do not overload the grill.
3. Gently lower the top grill plate onto the food. The floating hinge will adjust to the thickness of the food.
4. Cook for the recommended time or until desired doneness is achieved.
5. Use heat-resistant plastic or wooden utensils to remove food. Avoid metal utensils, which can damage the non-stick coating.

4.3 Using as a 180-Degree Open Griddle

To use the grill as an open griddle, suitable for larger quantities or items like pancakes, eggs, or multiple sausages:

1. Ensure the grill is unplugged and cool.
2. Locate the hinge release button or lever (refer to diagram in product overview if available).
3. Press the release and carefully open the top plate until it lies flat, creating a continuous cooking surface.
4. Plug in the grill and preheat as described in section 4.1.
5. Place food on the open griddle plates and cook, turning as necessary.
6. Use heat-resistant plastic or wooden utensils to remove food.

GRILL BOSS 2.0

THE ULTIMATE 180° GRILLER & SANDWICH PRESS



Image: The Bennett Read 2.0 Grill Boss fully open to 180 degrees, functioning as a double griddle with sausages and steak cooking.



Image: Visual representation of the floating hinge mechanism, ceramic non-stick coating, and the oil catchment tray for healthier cooking.



Image: A close-up view of two grilled chicken breasts on the non-stick cooking plates, demonstrating the grill's cooking capability.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your grill.

1. **Cool Down:** Always unplug the grill from the power outlet and allow it to cool completely before cleaning.
2. **Oil Tray:** Remove the oil catchment tray and empty any collected fats. Wash the tray in warm, soapy water, then rinse and dry thoroughly.
3. **Cooking Plates:** Wipe the non-stick cooking plates with a soft, damp cloth or sponge. For stubborn residue, dampen a cloth with warm, soapy water and gently scrub. Avoid abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
4. **Exterior:** Wipe the exterior surfaces with a damp cloth. Do not use harsh chemicals or abrasive materials.
5. **Storage:** Once clean and dry, the grill can be stored in a cool, dry place.

6. TROUBLESHOOTING

- **Grill not heating:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check if the temperature control knob is set to a desired heat level.
- Verify that the power indicator light is on. If not, check the circuit breaker.

- **Food sticking to plates:**

- Ensure the grill plates were clean before use.

- Lightly brush or spray cooking oil on the plates before preheating, especially for foods prone to sticking.
- Avoid using metal utensils that can scratch and damage the non-stick coating over time.

• **Uneven cooking:**

- Allow the grill to fully preheat until the 'Ready' light illuminates.
- Ensure food is evenly distributed on the cooking surface.
- For contact grilling, ensure the floating hinge is properly engaged to apply even pressure.

7. SPECIFICATIONS

Feature	Detail
Brand	Bennett Read
Model	2.0 Grill Boss
Special Feature	Non Stick Coating
Colour	Silver/Black
Material	Stainless Steel
Product Dimensions	39.2D x 17.5W x 40H centimetres
Wattage	1000 watts
Item Weight	4.18 Kilograms
Included Components	1 x Bennett Read 2.0 Grill Boss
Manufacturer	Tevo

8. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty terms, conditions, and duration, please refer to the warranty card included with your purchase or contact Bennett Read customer support directly.

For technical assistance, troubleshooting not covered in this manual, or spare parts, please contact the authorized service center or the retailer from whom the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question