

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Peski](#) /
- › [Peski Karaoke Machine User Manual](#)

Peski MI047AR

Peski Karaoke Machine User Manual

Model: MI047AR

INTRODUCTION

Thank you for choosing the Peski Portable Bluetooth Mini Karaoke Machine. This device is designed to provide an astonishing sound experience with exceptional clarity and zero distortion, perfect for home parties, outdoor events, and family gatherings. It features two wireless microphones, dynamic colorful lights, and multiple connectivity options for endless fun.



The Peski Portable Bluetooth Mini Karaoke Machine in pink, accompanied by its two wireless microphones.

WHAT'S IN THE BOX

Upon opening your package, please ensure all the following items are present:

- Mini Karaoke Machine x1
- Wireless Microphone x2
- USB Cable x2
- User Manual x1

What's In The Package



Charging Cable x2

User Manual x1

Wireless Mic x2

Mini Karoike Machine x1

All components included in the Peski Karaoke Machine package: the main unit, two microphones, two charging cables, and the user manual.

SETUP GUIDE

1. Charging the Device

Before first use, fully charge the karaoke machine and both microphones. Use the provided USB Type-C cables. The main unit features a long-life rechargeable battery, offering 6-10 hours of playtime and doubling as a power bank for your smartphone/tablet.

Up to 10H Playtime

Non-stop music on the road




The image illustrates the charging process and battery life of the karaoke machine, indicating 6-10 hours of playtime and a 2-3 hour charge time for its 1500mAh battery.

2. Bluetooth Pairing

1. Turn on the karaoke machine by pressing the power button.
2. Activate Bluetooth on your smartphone, tablet, or other compatible device.
3. Search for "Peski Karaoke" (or similar name) in your device's Bluetooth settings and select it to pair.
4. The microphones will automatically connect to the main unit once powered on.

OPERATING INSTRUCTIONS

Controls Overview

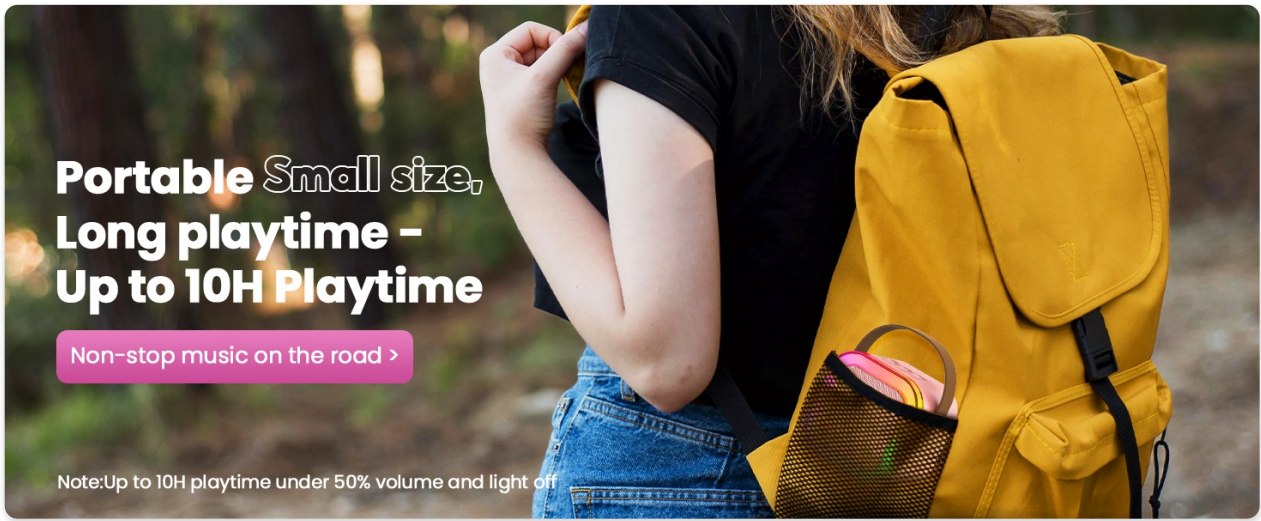

This diagram labels the various buttons and ports on both the karaoke machine and its microphones, detailing their functions such as volume control, play mode, echo, and magic sound effects.

Voice Effects

The PA karaoke system includes 5 magic voice effects to enhance your singing experience:

- Monster Voice
- Baby Voice
- Female Voice
- Male Voice
- Original/Accompaniment (to remove/restore music vocals)



An illustration showcasing the five different magic voice effects available on the karaoke machine: Monster, Baby, Female, Male, and Original Voice.

Dynamic Colorful Lights

The karaoke machine is equipped with colorful disco lights that can be switched on/off with an independent button, adding a vibrant atmosphere to your party.

Dynamic Colorful Light Show

6 dynamic LED lighting effects for your party show



The karaoke machine displaying its dynamic colorful light show, with six different lighting effects for party ambiance.

Connectivity Options

Beyond Bluetooth 5.0, the karaoke machine supports various input connections:

- **TF Card:** Insert a TF (Micro SD) card with your favorite music.
- **USB:** Connect a USB drive for audio playback.
- **AUX Input:** Use the AUX port to connect external audio devices.

Connect & Wide Compatibility

UP to 50FT Wireless Range



The image highlights the karaoke machine's wide compatibility, showing connections for Bluetooth, TF card, USB, and AUX, compatible with various devices like smartphones, tablets, and PCs.

Long-lasting Performance Non-stop Karaoke

-  2-3H Charge Time
-  6-10H Play Time
-  1500mAh



A detailed view of the karaoke machine's rear panel, showing the Headphone Connector, Micro SD Slot, USB Port, and Type-C Charging (5V/1A) port.

MAINTENANCE

To ensure the longevity and optimal performance of your Peski Karaoke Machine, please follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the machine and microphones. Do not use abrasive cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For extended periods of non-use, charge the battery at least once every three months to maintain its health.
- **Handle with Care:** Avoid dropping the machine or microphones, as this can damage internal components.

TROUBLESHOOTING

If you encounter any issues with your Peski Karaoke Machine, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound from speaker	Volume too low; Device not paired; Incorrect input mode.	Increase volume on both machine and connected device. Re-pair Bluetooth. Check selected input mode (Bluetooth, TF, USB, AUX).
Microphone not working	Microphone not powered on; Battery low; Not paired with speaker.	Ensure microphone is turned on. Charge microphone. Microphones should auto-pair; if not, restart both speaker and microphones.
Bluetooth connection unstable	Device too far from speaker; Interference.	Keep devices within 50ft range. Avoid obstacles between devices. Turn off other Bluetooth devices nearby.
Lights not working	Lights feature turned off.	Press the dedicated LIGHTS button on the main unit to activate or change light modes.

If the problem persists after trying these solutions, please contact Peski customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	Peski

Feature	Detail
Model Number	MI047AR
Color	Pink
Product Dimensions	5.71 x 3.94 x 4.53 inches
Item Weight	12.7 ounces (360 Grams)
Material	Plastic
Power Source	Battery Powered
Output Wattage	10 Watts
Speaker Count	1
Connectivity Technology	Bluetooth, USB, Wireless, Portable, SD card, TF Card
Bluetooth Version	5.0
Wireless Range	Up to 50 feet (without obstacles)
Compatible Devices	Headphone, Laptop, PA System, Smartphone, Television
Audio Input	Microphone
Mounting Type	Tabletop
Date First Available	March 20, 2024

WARRANTY AND SUPPORT

Peski is committed to providing excellent customer service. Your karaoke machine comes with a **365-day warranty**. We also offer a **LIFETIME AFTERSALES and NO REASON REPLACEMENT service**. If you have any issues during using the singing machine, we are available to assist you and will resolve any issues within 24 hours. Our **24/7 customer support** is ready to help.

For support, please refer to the contact information provided with your purchase or visit the official Peski store online.