

[Manuals.plus](#) /

› [CLEANmaxx](#) /

› CLEANmaxx Cordless Handheld and Stick Vacuum Cleaner User Manual

CLEANmaxx Akku-Zyklon-Staubsauger 22,2V

CLEANmaxx Cordless Handheld and Stick Vacuum Cleaner

MODEL: AKKU-ZYKLON-STAUBSAUGER 22,2V

1. Introduction

Thank you for choosing the CLEANmaxx Cordless Handheld and Stick Vacuum Cleaner. This versatile 2-in-1 appliance is designed for flexible and powerful cleaning of various surfaces in your home. To ensure safe and efficient operation, please read this manual thoroughly before first use and keep it for future reference.

2. Safety Instructions

- Always disconnect the appliance from the power supply before cleaning or maintenance.
- Do not use the vacuum cleaner to pick up water, flammable liquids, hot ashes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the vacuum cleaner if it is damaged or malfunctioning. Contact customer support.
- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Ensure the filter is correctly installed before use to prevent damage to the motor.
- Only use the original power adapter provided for charging.

3. Package Contents

Please check the package for the following components:



Image: All components included with the CLEANmaxx Cordless Vacuum Cleaner, including the main unit, telescopic tube, various nozzles, power adapter, and wall mount.

- 1 x Cordless Cyclonic Vacuum Cleaner (Main Unit)
- 1 x Aluminum Telescopic Tube
- 1 x Floor Nozzle 3000
- 1 x Crevice Tool
- 1 x Combination Nozzle
- 1 x Nozzle Adapter
- 1 x Power Adapter
- 1 x Wall Mount with Fixing Material

4. Setup and Assembly

4.1 Assembling the Stick Vacuum

1. Insert the aluminum telescopic tube into the main vacuum unit until it clicks into place.
2. Attach the Floor Nozzle 3000 to the other end of the telescopic tube, ensuring it is securely fastened.



Image: The CLEANmaxx vacuum cleaner shown in its full stick configuration and as a compact handheld unit.

4.2 Converting to Handheld Vacuum

To use as a handheld vacuum, simply detach the telescopic tube from the main unit. You can then directly attach the Crevice Tool or Combination Nozzle to the main unit for targeted cleaning.



Image: Visual representation of how to convert the stick vacuum into a handheld vacuum by removing the telescopic tube.

4.3 Charging the Battery

Before first use, fully charge the vacuum cleaner's battery. Connect the power adapter to the charging port on the main unit and plug it into a wall outlet. The charging indicator light will show the charging status. A full charge provides up to 35 minutes of runtime.

4.4 Wall Mount Installation

The included wall mount allows for convenient storage. Choose a suitable location near a power outlet. Use the provided fixing material to securely attach the wall mount to the wall. Once installed, the vacuum cleaner can be hung on the mount for storage and charging.



Image: The CLEANmaxx vacuum cleaner conveniently stored on its wall mount in a utility room setting.

5. Operating Instructions

5.1 Power On/Off and Suction Adjustment

Press the power button on the main unit to turn the vacuum cleaner on. The appliance features a 2-stage suction power adjustment. Press the power button again to switch between the two suction levels (standard and high power). Press a third time to turn the vacuum cleaner off.

5.2 Using the Floor Nozzle

The Floor Nozzle 3000 is ideal for cleaning various floor types, including carpets, laminate, and tiles. Glide the nozzle over the surface to effectively pick up dust and debris.



Image: A person demonstrating the use of the CLEANmaxx stick vacuum cleaner on a light-colored carpet.

5.3 Using Handheld Attachments

- **Crevice Tool:** Perfect for reaching tight spaces, corners, and along edges, such as between sofa cushions or car seats.
- **Combination Nozzle:** Features a brush for delicate surfaces like keyboards or upholstery, and a wider opening for general handheld vacuuming.



Image: A person using the CLEANmaxx handheld vacuum cleaner with an attachment to clean dirt from an armchair.

6. Maintenance

6.1 Emptying the Dust Container

The dust container has an 800 ml capacity. For optimal suction performance, empty the dust container regularly, especially when it appears full or suction power decreases. To empty, detach the dust container from the main unit, open the bottom flap, and dispose of the contents.

6.2 Cleaning the EPA Filter

The EPA filter ensures clean air after vacuuming and filters up to 95% of fine dust. It is crucial to clean the filter regularly to maintain suction power and prevent motor damage. Remove the filter from the dust container and tap it gently to remove loose dust. For a more thorough cleaning, the filter can be rinsed under running water. Ensure the filter is completely dry before reinserting it into the vacuum cleaner.

6.3 General Cleaning

Wipe the exterior of the vacuum cleaner and attachments with a damp cloth. Do not use abrasive cleaners or solvents. Ensure all parts are dry before reassembling or storing the appliance.

7. Troubleshooting

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is discharged.	Charge the battery fully.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Weak suction power.	Dust container is full.	Empty the dust container.
	Filter is clogged.	Clean or replace the EPA filter.
	Nozzle or tube is blocked.	Check and clear any blockages in the nozzles or telescopic tube.
Unusual noise during operation.	Blockage in the air path.	Check for and remove any obstructions in the nozzles, tube, or dust container.
	Filter not properly installed.	Ensure the EPA filter is correctly seated.

8. Specifications

Feature	Specification
Brand	CLEANmaxx
Model Number	Akku-Zyklon-Staubsauger 22,2V
Color	Blue/Silver
Product Dimensions (L x W x H)	30 x 12 x 21 cm
Weight	1.4 Kilograms
Power	120 Watts
Voltage	22.2 Volts
Material	ABS, Aluminum, Copper, Polypropylene
Filter Type	EPA Filter
Dust Container Capacity	800 ml
Battery Type	Li-ion 2000 mAh (22.2V)

Feature	Specification
Runtime	Up to 35 minutes
Suction Power	10 kPa

9. Warranty and Support

CLEANmaxx products are manufactured to high-quality standards. In the unlikely event of a defect or malfunction, please refer to your purchase receipt for warranty details. For technical support, spare parts, or further assistance, please contact your retailer or the CLEANmaxx customer service department. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question