

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Indesit](#) /

› [Indesit BWA 71295X WV IT Washing Machine User Manual](#)

Indesit BWA 71295X WV IT

Indesit BWA 71295X WV IT Washing Machine User Manual

MODEL: BWA 71295X WV IT

Introduction

This manual provides essential information for the correct installation, safe use, and maintenance of your Indesit BWA 71295X WV IT washing machine. Please read these instructions carefully before using the appliance and keep them for future reference.

Safety Information

- Ensure the appliance is properly grounded.
- Do not allow children to operate or play with the washing machine.
- Never force the door open during operation.
- Unplug the appliance before any cleaning or maintenance.
- Do not install the appliance in areas exposed to extreme temperatures or humidity.

Setup

1. Unpacking

Remove all packaging materials and transport bolts from the rear of the appliance. Keep packaging materials out of reach of children.

2. Installation

Place the washing machine on a flat, stable surface. Ensure there is adequate space around the appliance for ventilation and access.

3. Water Connection

Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure all connections are tight to prevent leaks. Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.



Image: Rear view of the washing machine, illustrating the water inlet and drain hose connections.

4. Electrical Connection

Plug the power cord into a grounded electrical outlet. Do not use extension cords or adapters. Ensure the voltage and

frequency match the specifications on the appliance rating plate.

5. Leveling

Adjust the appliance's feet to ensure it is perfectly level. A level machine reduces vibration and noise during operation.

Operating Instructions

1. Control Panel Overview

The control panel features a program selector knob, function buttons, and indicator lights. Refer to the diagram below for specific controls.



Image: Close-up of the washing machine's control panel, showing the program dial, function buttons, and detergent dispenser.

2. Loading Laundry

Open the door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to move freely. Close the door firmly.

3. Detergent Dispenser

Pull out the detergent dispenser drawer. Add detergent to the main wash compartment and fabric softener to the designated compartment. Follow detergent manufacturer's recommendations.



Image: Front view of the washing machine with the detergent dispenser drawer open, showing compartments for detergent and softener.

4. Program Selection

Turn the program selector knob to choose the desired wash cycle. Available programs include:

- Cotton 40° Steam
- Shirts 40° Steam
- Dash POD
- Wool
- 20°
- Cotton 40°
- Synthetics
- Mixed
- Eco 40-60
- Whites
- Rapid 20min
- Full Load 45min
- Duvets
- Delicates 30°
- Rinse + Spin
- Spin + Drain



Image: Interior of the washing machine drum, showing a steam effect on clothes, relevant for steam programs.

5. Adjustable Options

Customize your wash cycle using the option buttons. Available options include:

- Anti-stain (Food, Work, Outdoor)
- Extra Rinse
- Easy Iron
- Delayed Start
- Temperature adjustment
- Spin speed adjustment

6. Push & Go Function

The Push & Go function allows you to start a preset wash cycle instantly, even when the machine is off. Simply press and hold the dedicated Push & Go button.

7. Start/Pause

Press the Start/Pause button to begin the selected program. Press again to pause the cycle.

Maintenance

1. Cleaning the Detergent Dispenser

Regularly remove and clean the detergent dispenser drawer under running water to prevent residue buildup.

2. Cleaning the Filter

Periodically clean the pump filter, usually located at the bottom front of the machine. Refer to the diagram in the full

manual for exact location and procedure. This prevents blockages and ensures proper drainage.

3. Cleaning the Exterior

Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners or solvents.

4. Door Seal Care

After each wash, wipe the door seal to remove any lint or residue. Leave the door slightly ajar when not in use to allow the drum to air dry and prevent odors.

Troubleshooting

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, program not selected, Start/Pause button not pressed.	Check power connection, ensure door is latched, select a program, press Start/Pause.
Water not filling	Water tap closed, inlet hose kinked or blocked.	Open water tap, straighten hose, check for blockages.
Water not draining	Drain hose kinked or blocked, pump filter blocked.	Straighten drain hose, clean pump filter.
Excessive vibration/noise	Machine not level, transport bolts not removed, uneven load.	Adjust leveling feet, remove transport bolts, redistribute laundry.
Poor washing results	Incorrect detergent dosage, wrong program selected, overloaded machine.	Adjust detergent, select appropriate program, reduce load size.

If problems persist after attempting these solutions, please contact customer support.

Specifications

- Brand:** Indesit
- Model Number:** BWA 71295X WV IT
- Product Dimensions (DxWxH):** 57.5 cm x 59.5 cm x 84.5 cm
- Weight:** 65 kg
- Capacity:** 7 Kilograms
- Special Features:** Inverter Motor, Water Balance Plus
- Access Position:** Front Load
- Color:** White
- Material:** Stainless steel
- Controls Type:** Button
- Energy Efficiency Class:** B

Warranty Information

Your Indesit washing machine comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, spare parts, or further information, please visit the official Indesit website or contact their customer service department. You can also visit the [Indesit Store on Amazon](#) for additional resources.

© 2024 Indesit. All rights reserved.