

[manuals.plus](#) /› [HORLAT](#) /› [HORLAT Mini Projector Tripod User Manual](#)**HORLAT B0CYNZKB9G**

HORLAT Mini Projector Tripod User Manual

Model: B0CYNZKB9G

Brand: HORLAT

1. INTRODUCTION

Thank you for choosing the HORLAT Mini Projector Tripod. This compact and portable tripod is designed to provide stable support for mini projectors, cameras, and other compatible devices. Its lightweight yet robust construction makes it ideal for various settings, from home entertainment to professional presentations.

Please read this manual carefully before using the product to ensure proper setup, operation, and maintenance. Keep this manual for future reference.

2. SAFETY INFORMATION

- Do not overload the tripod beyond its stated weight capacity. Overloading can cause instability and damage to the tripod or attached device.
- Ensure the tripod is placed on a stable, level surface to prevent tipping.
- Always secure your device firmly to the tripod's mounting screw before use.
- Avoid exposing the tripod to extreme temperatures, direct sunlight for prolonged periods, or corrosive substances.
- Keep out of reach of children to prevent accidents.
- Do not force any adjustments. If a part feels stiff, check for obstructions or consult the troubleshooting section.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- HORLAT Mini Projector Tripod
- HDMI Cable (included as an accessory, though not directly part of the tripod)



Image: The HORLAT Mini Projector Tripod, showing its compact design.

4. PRODUCT OVERVIEW

The HORLAT Mini Projector Tripod features a stable three-leg design with a ball head for flexible positioning. It includes a standard 1/4-inch screw for universal compatibility with various devices.



Image: Close-up of the tripod's ball head and adjustment knob, indicating rotational movement.

The adjustment knob allows you to loosen or tighten the ball head, enabling 360-degree rotation and tilt for precise angle adjustments.

5. SETUP

- 1. Unfold the Legs:** Gently spread the three legs of the tripod outwards until they are fully extended and stable.
- 2. Position the Tripod:** Place the tripod on a flat, stable surface where you intend to use your device.
- 3. Attach Your Device:** Locate the 1/4-inch screw on the top of the tripod's ball head. Carefully screw your mini projector, camera, or other compatible device onto this screw until it is securely fastened. Ensure it is tight enough to prevent wobbling but do not overtighten.



Image: A mini projector securely mounted on the HORLAT tripod, demonstrating a typical setup.



Image: The HORLAT tripod positioned next to a mini projector, illustrating its compact size. Note: The mini projector is not included with the tripod.

6. OPERATING

- 1. Adjusting Angle:** Loosen the adjustment knob on the side of the ball head. This will allow you to freely tilt and rotate your attached device to the desired angle.
- 2. Securing Angle:** Once the desired angle is achieved, tighten the adjustment knob firmly to lock the ball head in place. Ensure the device is stable before releasing it.
- 3. Versatile Use:** The tripod is suitable for various devices with a 1/4-inch screw mount, including mini projectors, digital cameras, and webcams.

Kamera und Beamer nicht enthalten



Image: Diagram showing the tripod's compatibility with both cameras and projectors. Note: Camera and projector are not included.

7. MAINTENANCE

- **Cleaning:** Wipe the tripod with a soft, dry cloth to remove dust and dirt. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying.
- **Storage:** When not in use, fold the tripod legs and store it in a cool, dry place away from direct sunlight and excessive moisture.
- **Inspection:** Periodically check all screws and joints to ensure they are secure. Tighten any loose parts as needed.

8. TROUBLESHOOTING

- **Device wobbles on tripod:** Ensure the device is screwed on tightly to the 1/4-inch mount. Check that the tripod legs are fully extended and placed on a stable, level surface.
- **Ball head does not hold position:** Tighten the adjustment knob firmly. If it still slips, check for any debris or damage around the ball head mechanism.
- **Legs are stiff to unfold/fold:** Check for any obstructions. Do not force the legs. A small amount of

silicone lubricant can be applied to the pivot points if necessary, but avoid getting it on the mounting screw.

9. SPECIFICATIONS

Feature	Detail
Brand	HORLAT
Model Number (ASIN)	B0CYNZKB9G
Dimensions (Folded)	18.3 x 5 x 4 cm (approx. 7.2 x 2 x 1.6 inches)
Weight	88 grams (approx. 0.19 lbs)
Minimum Height	8 inches (approx. 20.3 cm)
Support Height	5.5 inches (approx. 14 cm)
Mounting Screw	Standard 1/4-inch
Color	Cobalt Blue Grey

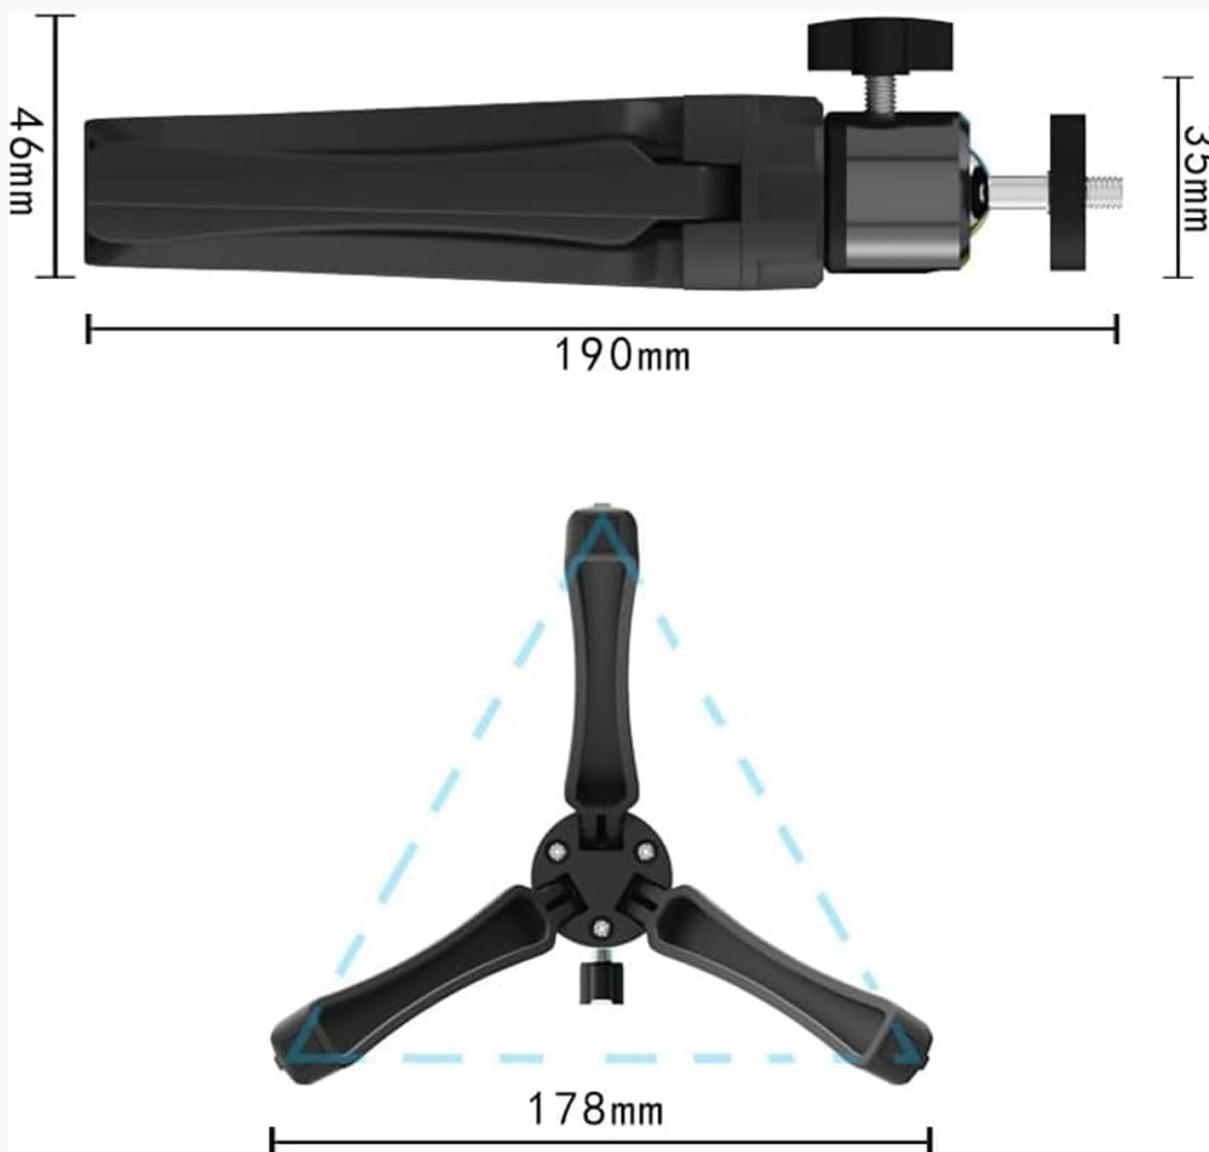


Image: Technical drawing illustrating the dimensions of the HORLAT Mini Projector Tripod.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact HORLAT customer service through the retailer's platform where the product was purchased. Please have your model number (B0CYNZKB9G) ready when contacting support.

For more information about HORLAT products, you may visit the official HORLAT store page on Amazon: [HORLAT Store](#)

© 2024 HORLAT. All rights reserved.