

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Miuscall-C](#) /

› [Miuscall-C SS1021B Sound Bar TV Speaker User Manual](#)

Miuscall-C SS1021B

Miuscall-C SS1021B Sound Bar TV Speaker User Manual

Model: SS1021B

INTRODUCTION

Thank you for purchasing the Miuscall-C SS1021B Sound Bar TV Speaker. This manual provides essential information for setting up, operating, and maintaining your sound bar. Please read it thoroughly before use and retain it for future reference.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Miuscall-C SS1021B Sound Bar
- Remote Control
- Power Adapter
- HDMI (ARC) Cable
- Optical Cable
- AUX Cable (3.5mm to 3.5mm)
- RCA Audio Cable
- User Manual



Image: All components included in the Miuscall-C SS1021B Sound Bar package. This includes the sound bar, remote control, power adapter, HDMI (ARC) cable, optical cable, AUX cable, RCA audio cable, and the user manual.

SAFETY INSTRUCTIONS

- Do not expose the sound bar to rain or moisture.
- Do not block any ventilation openings.
- Do not install near any heat sources.

- Use only attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

PRODUCT OVERVIEW

Sound Bar Front and Side Panel



Image: Front view of the Miuscall-C SS1021B Sound Bar, highlighting the speaker grille and the control buttons located on the right side panel.

Rear Panel Connections

複数の接続方法



HDMI



AUX



DC



光デジタル



USB



Image: Rear panel of the Miuscall-C SS1021B Sound Bar, showing the input ports: HDMI ARC, AUX, OPTI (Optical), USB, and DC IN for power.

Remote Control



Image: The remote control for the Miuscall-C SS1021B Sound Bar, featuring buttons for power, input selection (BT, USB, ARC, OPT, AUX), volume control, playback controls, and EQ modes (Movie, Music, Game).

SETUP

1. Placement

Place the sound bar on a stable, flat surface in front of your TV, ensuring it does not obstruct the TV's remote sensor. Maintain adequate space around the sound bar for proper ventilation.

2. Connecting Power

1. Connect the power adapter to the DC IN port on the rear of the sound bar.
2. Plug the other end of the power adapter into a wall outlet.

3. Connecting to Audio Source

Choose one of the following connection methods:

- **HDMI ARC:** Connect an HDMI cable from the HDMI ARC port on the sound bar to the HDMI ARC port on your TV. This connection supports audio return channel, allowing TV audio to be sent to the sound bar.
- **Optical Digital:** Connect an optical cable from the OPTI port on the sound bar to the Optical Digital Output port on your TV or other audio device.
- **AUX:** Connect a 3.5mm AUX cable from the AUX port on the sound bar to the headphone jack or AUX output on your TV or audio device. Alternatively, use the RCA audio cable for RCA output connections.

- **USB:** Insert a USB flash drive into the USB port for direct audio playback.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the **Power** button on the sound bar's side panel or the remote control to turn the unit on or off.

2. Selecting Input Source

Press the **MODE** button on the sound bar's side panel or the corresponding input button (BT, USB, ARC, OPT, AUX) on the remote control to switch between input sources.

3. Volume Control

Press the **Volume Up (+)** or **Volume Down (-)** buttons on the sound bar or remote control to adjust the volume level.

4. EQ Modes

The sound bar features three equalizer (EQ) modes to optimize audio for different content types:

- **MUSIC:** Enhances audio for music playback.
- **MOVIE:** Optimizes sound for cinematic experiences.
- **GAME:** Provides immersive audio for gaming.

Press the corresponding **MUSIC**, **MOVIE**, or **GAME** button on the remote control to select an EQ mode.

DSP搭載 & 3つのサウンドモード

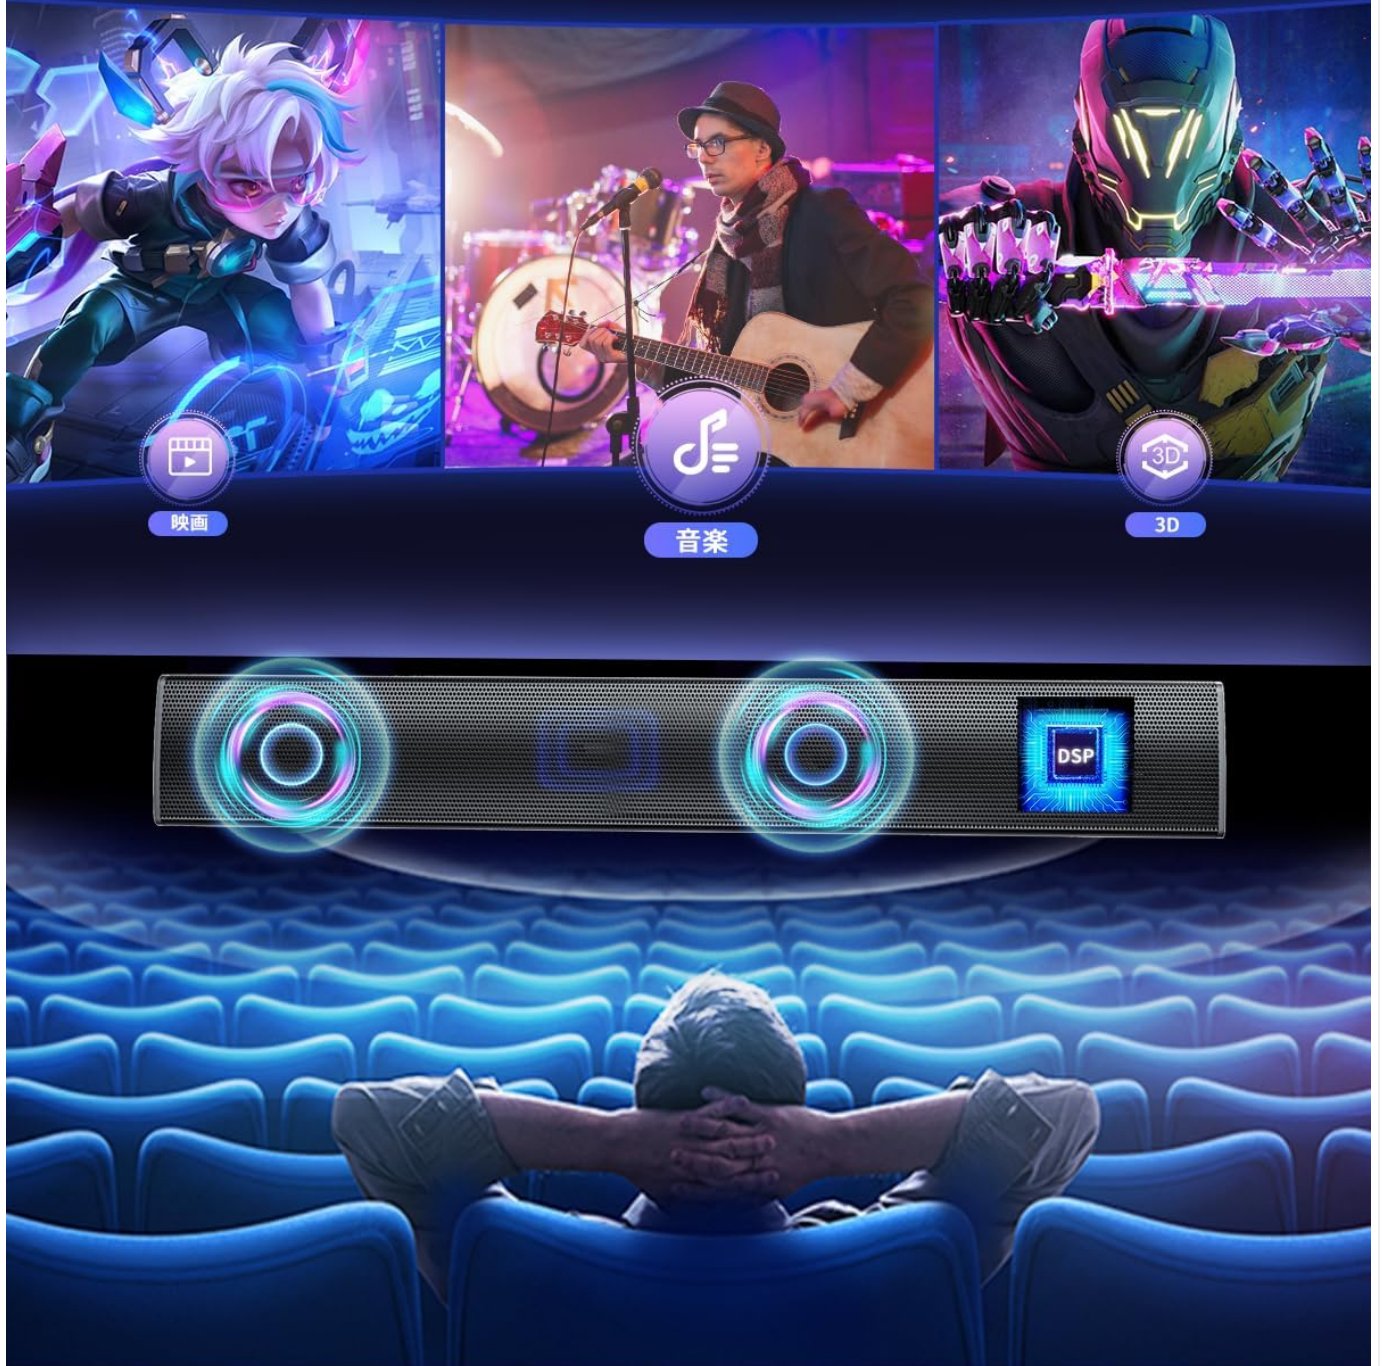


Image: Visual representation of the Miuscall-C SS1021B Sound Bar's Digital Signal Processing (DSP) and its three distinct sound modes: Music, Movie, and Game, designed to enhance various audio experiences.

5. Bluetooth Pairing

1. Press the **BT** button on the remote control or the **MODE** button on the sound bar until "BT" appears on the display.
2. On your Bluetooth-enabled device (e.g., smartphone, tablet), search for available Bluetooth devices.
3. Select "Miuscall-C SS1021B" from the list.
4. Once paired, the sound bar will indicate a successful connection.

The sound bar supports Bluetooth 5.0 with a maximum operating range of 10 meters (33 feet).



Image: The Miuscall-C SS1021B Sound Bar displaying "bt" on its LED screen, indicating Bluetooth mode, with a smartphone wirelessly connected, illustrating Bluetooth 5.0 compatibility.

6. USB Playback

Insert a USB flash drive containing audio files into the USB port. The sound bar will automatically switch to USB mode and begin playback. Use the remote control for playback functions (play/pause, skip track).

MAINTENANCE

Cleaning

Wipe the surface of the sound bar with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the finish.

Storage

If storing the sound bar for an extended period, unplug it from the power outlet and store it in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not active.	Ensure the power cable is securely connected to the sound bar and a working power outlet.
No sound	Incorrect input source; Volume too low; Audio cable not connected properly.	Select the correct input source (HDMI ARC, Optical, AUX, BT, USB). Increase the volume. Check all audio cable connections. Ensure TV audio output is set correctly.
Bluetooth pairing fails	Sound bar not in pairing mode; Device too far; Interference.	Ensure the sound bar is in Bluetooth pairing mode ("BT" displayed). Move your device closer to the sound bar. Avoid obstacles and other wireless devices. Try unpairing and re-pairing.
Remote control not working	Batteries depleted; Obstruction between remote and sound bar.	Replace the remote control batteries. Ensure there is a clear line of sight between the remote and the sound bar's sensor.

SPECIFICATIONS

Model Number	SS1021B
Brand	Miuscall-C
Speaker Type	Sound Bar
Max Output Power	50 Watts
Dimensions (L x W x H)	41 cm x 6 cm x 5.5 cm (16.1 x 2.4 x 2.2 inches)
Weight	950 g (2.09 lbs)
Connectivity	Bluetooth 5.0, HDMI ARC, Optical Digital, AUX (3.5mm), USB
Bluetooth Range	Up to 10 meters (33 feet)
EQ Modes	Music, Movie, Game
Mounting Type	Table Mount

WARRANTY AND SUPPORT

Miuscall-C products are designed and manufactured to the highest quality standards. For warranty information or technical

support, please refer to the warranty card included in your package or contact your retailer. Please have your model number (SS1021B) and purchase date available when contacting support.

