

[Manuals.plus](#) /

> [SUOERNUO](#) /

> SUOERNUO Laundry Cart with Hanging Rack and Wheels Instruction Manual

## SUOERNUO B0CYP6R57S

# SUOERNUO Laundry Cart with Hanging Rack and Wheels Instruction Manual

Model: B0CYP6R57S

## INTRODUCTION

---

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your SUOERNUO Laundry Cart with Hanging Rack and Wheels. Please read this manual thoroughly before use to ensure proper function and longevity of the product.





Image: The SUOERNUO Laundry Cart, featuring a hanging rack, a top basket shelf, a lower shelf, and wheels, shown in a black finish.

## SAFETY INFORMATION

---

- Ensure all parts are securely fastened before use.
- Do not overload the hanging rack or shelves beyond their intended capacity.
- Engage wheel brakes when the cart needs to remain stationary.
- Keep hands and fingers clear of moving parts, especially during assembly and when adjusting components.

## PACKAGE CONTENTS

---

Please verify that all components are present before beginning assembly:

- Main Frame Components (Pipes, Connectors)
- Hanging Rod
- Upper Basket Shelf
- Lower Shelf
- Wheels (4, with 2 lockable)
- Assembly Hardware (Screws, Wrench if applicable)

## SETUP AND ASSEMBLY

---

Follow these steps to assemble your laundry cart. It is recommended to assemble on a soft, clean surface to prevent scratches.

1. **Attach Wheels:** Insert the four wheels into the designated holes at the bottom of the base frame. Ensure the two wheels with brakes are positioned where they can be easily accessed. Tighten securely.
2. **Assemble Base Frame:** Connect the horizontal and vertical pipes for the lower section according to the diagram. Do not fully tighten screws until the entire frame is assembled.
3. **Install Lower Shelf:** Place the lower shelf onto the assembled base frame, ensuring it sits securely.
4. **Assemble Upper Frame:** Attach the vertical support pipes for the upper section to the base frame.
5. **Install Upper Basket Shelf:** Position the upper basket shelf onto the appropriate supports.
6. **Attach Hanging Rod:** Secure the hanging rod to the top vertical supports.
7. **Final Tightening:** Once all components are in place and aligned, systematically tighten all screws and connections. Ensure the cart is stable and does not wobble.



Image: Detailed view of the laundry cart's components, including the adjustable hanging rod, wire basket shelf, lower storage shelf, and lockable caster wheels.

## OPERATING INSTRUCTIONS

- **Using the Hanging Rack:** Hang clothes directly on the rod using hangers. The raised design at the ends helps prevent items from slipping off.
- **Utilizing Shelves:** The upper basket shelf and lower shelf can be used for sorting laundry, storing detergents, folded clothes, or other items.
- **Mobility:** To move the cart, ensure the wheel brakes are disengaged. Push or pull the cart to your desired location.
- **Stationary Use:** To keep the cart in place, engage the brakes on the two lockable wheels.

## MAINTENANCE

- **Cleaning:** Wipe down metal surfaces with a soft, damp cloth. Avoid abrasive cleaners that may damage the finish.

- **Regular Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Wheel Care:** Keep wheels free of lint and debris to ensure smooth rolling.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Cart is wobbly or unstable.	Loose connections or uneven assembly.	Ensure all screws are fully tightened. Verify that all pipes are correctly seated in their connectors.
Wheels do not roll smoothly or detach.	Debris in wheels, loose wheel attachment, or damaged wheel.	Clean any debris from the wheels. Check that wheels are securely inserted and tightened. If a wheel is damaged, contact customer service for replacement.
Hanging rack items fall off.	Overloaded rack or items not properly hung.	Reduce the weight on the hanging rack. Ensure hangers are fully on the rod and items are balanced.

## SPECIFICATIONS

Feature	Detail
Brand	SUOERNUO
Model	B0CYP6R57S
Color	Black
Material	Metal
Product Dimensions (D x W x H)	16.55" x 26" x 70.25"
Item Weight	12.29 pounds (5.59 kg)
Installation Type	Free Standing
Special Features	Wheels (2 lockable), Hanging Rack, Storage Shelves
Number of Shelves	2 (1 basket, 1 flat)

## ● Product Size

Unit:Inch

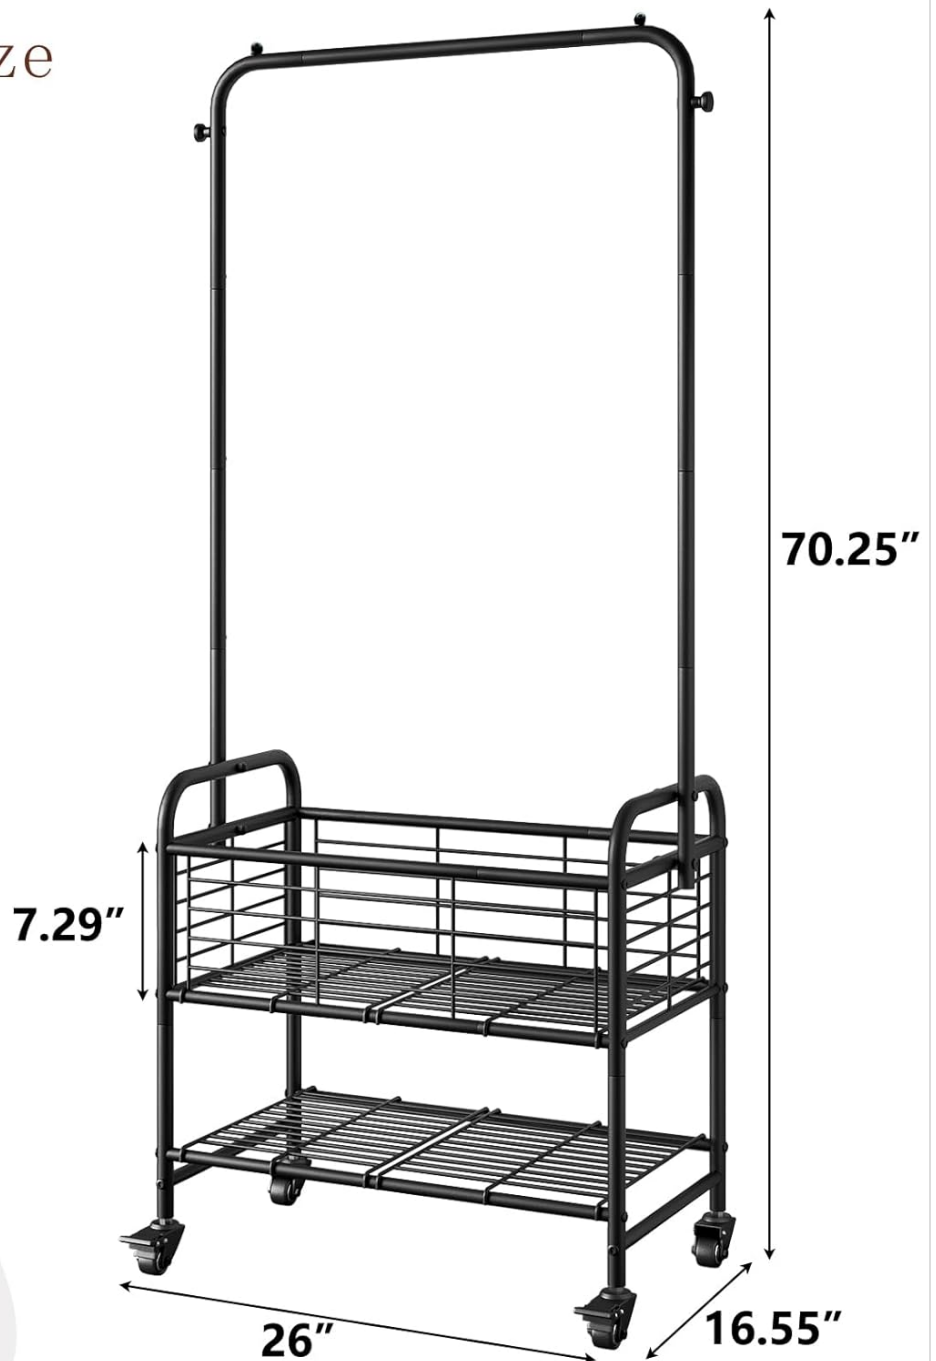


Image: Dimensional diagram of the laundry cart, indicating a height of 70.25 inches, width of 26 inches, and depth of 16.55 inches.

## WARRANTY INFORMATION

---

For specific warranty details regarding your SUOERNUO Laundry Cart, please refer to the product packaging or contact SUOERNUO customer service directly. Warranty terms typically cover manufacturing defects for a limited period from the date of purchase.

## CUSTOMER SUPPORT

---

If you have any questions, require assistance with assembly, or need to report a problem with your SUOERNUO Laundry Cart, please contact our customer service team.

### Contact Information:

**Website:** Visit the official SUOERNUO website for support resources.

**Email:** Refer to your purchase documentation for customer service email.

**Phone:** Refer to your purchase documentation for customer service phone number.

When contacting support, please have your product model (B0CYP6R57S) and purchase date available.