

## **TIMNUT 36-pro**

# **TIMNUT 4K 60 FPS Action Camera User Manual**

Model: 36-pro

Brand: TIMNUT

## **PRODUCT OVERVIEW**

The TIMNUT 36-pro Action Camera is designed for capturing high-quality video and photos in various environments, including underwater. It features 4K/60fps video recording, 24MP photo resolution, and a dual-screen design for versatile use. The camera comes with a waterproof case, a 64GB SD card, and multiple accessories to enhance your recording experience.

### **High-Resolution Capture**

# Waterproof Action Camera

Underwater 40M for diving



The camera supports native 4K video recording at 60 frames per second and captures still images at 24 megapixels, ensuring clear and detailed visuals for all your adventures.

## Waterproof Design

# 4K60FPS and 24MP HD Video

Native 4K Clearer and more intuitive



Equipped with a durable waterproof housing, the camera can be submerged up to 40 meters (131 feet), making it ideal for diving, snorkeling, and other water sports.

## Electronic Image Stabilization (EIS)

# Anti Shake Resistant More Effective



EIS ON



EIS OFF

The built-in Electronic Image Stabilization (EIS) technology helps to reduce blur and stabilize footage, providing smoother and more professional-looking videos even during dynamic activities.

**Dual Touchscreens and SD Card**

# Touchscreen Action Camera 64G SD Card



The camera features a 2-inch IPS touchscreen for easy navigation and playback, along with a front 1.4-inch screen for selfie composition. A 64GB MicroSD card is included for immediate use.

## Extended Battery Life

# Long-lasting battery life

## 2\*1350mAh



Two 1350mAh lithium-ion batteries are provided, offering extended recording time and ensuring you have enough power for prolonged use.

### SETUP GUIDE

#### 1. Charging the Batteries:

Insert the provided 1350mAh batteries into the dual battery charger. Connect the charger to a USB power source using the included USB cable. The indicator light will show charging status and turn off when fully charged. Ensure both batteries are fully charged before first use.

## 2. Inserting the MicroSD Card:

Locate the MicroSD card slot on the side of the camera. Gently insert the included 64GB MicroSD card with the gold contacts facing the front of the camera until it clicks into place. Ensure the card is properly seated to avoid data loss or recording issues. The camera supports up to 128GB MicroSD cards (U3 or higher recommended).

## 3. Attaching the Waterproof Case:

Open the latch on the waterproof case and carefully place the camera inside, ensuring it fits snugly. Close the latch securely to create a watertight seal. Before using underwater, always perform a dry test of the waterproof case without the camera inside to ensure no leaks are present.

## 4. Powering On/Off:

To power on, press and hold the Power/Mode button (usually on the front or top) for a few seconds until the screen illuminates. To power off, press and hold the same button until the screen turns off.

# OPERATING INSTRUCTIONS

---

## Basic Controls:

- Power/Mode Button:** Press to cycle through video, photo, playback, and settings modes. Long press to power on/off.
- Shutter/OK Button:** Press to start/stop recording video or take a photo. In menu, acts as confirmation.
- Up/Down Buttons:** Navigate menu options or zoom in/out (if applicable).
- Touchscreen:** Swipe and tap on the rear 2-inch IPS screen to access settings, change modes, and review footage.

## Video Recording:

1. Ensure the camera is in Video Mode (indicated by a video camera icon on the screen).
2. Press the Shutter/OK button to begin recording. A red dot or timer will appear on the screen.
3. Press the Shutter/OK button again to stop recording.
4. To change video resolution (e.g., 4K/60fps), access the settings menu via the touchscreen or mode button.

## Photo Capture:

1. Switch to Photo Mode using the Power/Mode button.
2. Frame your shot using the screen.
3. Press the Shutter/OK button to take a photo.
4. To change photo resolution (e.g., 24MP), access the settings menu.

## Wi-Fi Connectivity:

1. Enable Wi-Fi on the camera through the settings menu.
2. Download the recommended camera app on your smartphone or tablet.
3. Connect your device to the camera's Wi-Fi network (SSID and password displayed on camera screen).
4. Use the app to control the camera, view live footage, and transfer files.

## Using the Remote Control:

- Ensure the remote control is paired with the camera (refer to camera settings for pairing instructions).
- Press the video button on the remote to start/stop video recording.
- Press the photo button on the remote to take a picture.
- The remote allows for convenient control from a distance, especially when the camera is mounted on a helmet or

inaccessible location.

## MAINTENANCE

- **Cleaning the Camera and Case:**

After each use, especially in saltwater, rinse the waterproof case with fresh water and allow it to air dry. Use a soft, lint-free cloth to clean the camera lens and screens. Avoid using harsh chemicals or abrasive materials that could scratch surfaces.

- **Battery Care:**

Store batteries in a cool, dry place when not in use. Do not expose batteries to extreme temperatures or direct sunlight. If storing for extended periods, charge batteries to about 50% capacity to prolong their lifespan.

- **SD Card Management:**

Regularly back up your footage and photos to a computer or external storage. Format the MicroSD card periodically within the camera's settings to maintain optimal performance and prevent data corruption. Always power off the camera before inserting or removing the SD card.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or not inserted correctly.	Ensure batteries are fully charged and correctly inserted. Try a different charged battery.
Cannot record video/take photos.	SD card is full, corrupted, or not inserted.	Check SD card status. Format the SD card (backup data first). Replace with a new SD card if necessary.
Poor video/photo quality.	Lens is dirty, low light conditions, incorrect settings.	Clean the lens. Ensure adequate lighting. Adjust resolution settings to 4K/24MP. Enable EIS for smoother video.
Wi-Fi connection issues.	Incorrect password, camera Wi-Fi off, app issues.	Verify Wi-Fi password. Ensure camera Wi-Fi is enabled. Restart camera and smartphone. Reinstall the camera app.
Water leakage in waterproof case.	Case not properly sealed, O-ring damaged or dirty.	Ensure the latch is fully closed. Check the O-ring for dirt, hair, or damage; clean or replace if necessary. Always perform a dry test before submerging.

For further assistance, please refer to the official TIMNUT support channels.

## SPECIFICATIONS

Feature	Detail
Brand	TIMNUT
Model	36-pro
Video Resolution	4K (60 FPS)

Feature	Detail
Photo Resolution	24 Megapixels
Optical Zoom	8x Multiplier
Digital Zoom	8x Multiplier
Screen Size	2 inches (rear IPS touchscreen), 1.4 inches (front screen)
Image Stabilization	Electronic Image Stabilization (EIS)
Waterproof Depth	Up to 40 meters (131 feet) with waterproof case
Connectivity	Wi-Fi
Supported Storage	Micro SD (64GB card included)
Battery Type	Lithium-ion (2 x 1350 mAh included)
Dimensions (Product)	0.98 x 2.3 x 1.57 cm; 500 grams (approx.)
Included Components	1x 64G SD card, 2x batteries, 1x charger, 1x waterproof housing, various mounts and chains, 1x remote control.

## WARRANTY AND SUPPORT

This product is subject to the standard return and replacement policies of the retailer. While specific warranty details are not provided in this manual, consumers typically have a period for returns or replacements in case of manufacturing defects.

For technical support, troubleshooting beyond this manual, or inquiries regarding warranty claims, please contact the seller or manufacturer directly through their official support channels. Refer to your purchase documentation for contact information.

*Note: No seller-created videos were found in the provided product data that meet the criteria for inclusion in this manual.*