

Manuals.plus /

- › Oilsky /
- › Oilsky M303 MP3 Player User Manual

Oilsky M303

Oilsky M303 MP3 Player User Manual

Model: M303

1. PRODUCT OVERVIEW

The Oilsky M303 is a versatile digital audio and video player designed for portable entertainment. It features a 4-inch touchscreen display, WiFi and Bluetooth connectivity, 16GB of internal storage expandable up to 512GB, and runs on an Android 4-core system. Enjoy high-fidelity music, 1080P video playback, FM radio, and voice recording capabilities.



Image: Oilsky M303 MP3 Player showcasing its 4-inch full-touch screen and various applications, including music playback, video viewing, and use during activities.

2. SETUP

2.1 Unboxing and Initial Inspection

Carefully unpack your Oilsky M303 MP3 Player and check for all included accessories. Inspect the device for any signs of physical damage. If any components are missing or damaged, please contact customer support.

2.2 Charging the Device

Before first use, fully charge the device. Connect the included USB cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

2.3 Powering On/Off

- **To Power On:** Press and hold the power button located on the side of the device until the screen lights up.
- **To Power Off:** Press and hold the power button, then select 'Power Off' from the on-screen options.

2.4 Language Settings

Upon first boot, you may be prompted to select your preferred language. If not, navigate to **Settings > System > Languages & input > Languages** to choose your desired language. The device supports a Japanese keyboard for input.

2.5 Connecting to Wi-Fi

To access online features, connect your device to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list and enter the password if prompted.

2.6 Bluetooth Pairing

Pair your Oilsky M303 with Bluetooth headphones or speakers:

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Put your Bluetooth accessory into pairing mode.
4. Select the accessory from the 'Available devices' list on your M303 to pair.

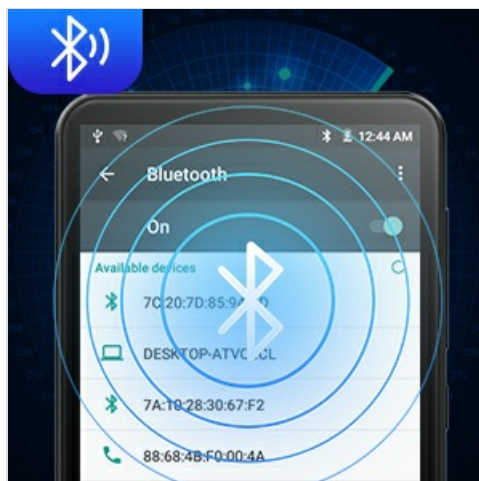 


Image: Bluetooth pairing screen, showing the device scanning for available Bluetooth accessories.

2.7 Inserting a MicroSD Card

To expand storage, insert a microSD card (up to 512GB) into the designated slot on the device. Ensure the card is inserted correctly until it clicks into place.

3. OPERATING INSTRUCTIONS

3.1 Navigation

The Oilsky M303 features a 4-inch full-touch screen. Navigate through menus and applications by tapping, swiping, and pinching gestures similar to a smartphone.

3.2 Music Playback

The device supports various audio formats and offers a rich music experience.

1. **Transferring Music:** Connect the M303 to your computer using the USB cable. The device will appear as a removable storage drive. Drag and drop your music files into the appropriate folders.
2. **Playing Music:** Open the Music application. You can browse music by song, artist, album, or folder.
3. **Creating Playlists:** The music player allows you to create and manage your own playlists directly on the device.
4. **Equalizer:** Adjust audio settings using the built-in equalizer to customize your sound experience.
5. **Music Search:** Use the search function within the music app to quickly find specific tracks.



Image: Music player interface demonstrating features like music search, browsing, playlist creation, and equalizer adjustments.

3.3 Video Playback

The M303 supports 1080P video playback.

1. **Transferring Videos:** Connect the device to your computer and transfer video files to the device's

storage.

2. **Playing Videos:** Open the Video application and select the desired video file to play.

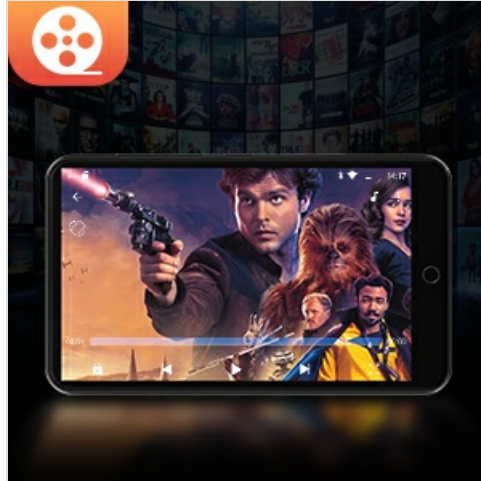 


Image: The device displaying a video, indicating its video playback capability.

3.4 FM Radio

To use the FM radio function:

1. Connect wired headphones (not included) to the 3.5mm audio jack; they act as the antenna.
2. Open the FM Radio application.
3. Scan for available stations or manually tune to a frequency.



Image: The device displaying the FM radio interface with various frequencies.

3.5 Voice Recording

The M303 includes a built-in microphone for voice recording.

1. Open the Sound Recorder application.
2. Tap the record button to start recording.
3. Tap the stop button to end and save the recording.

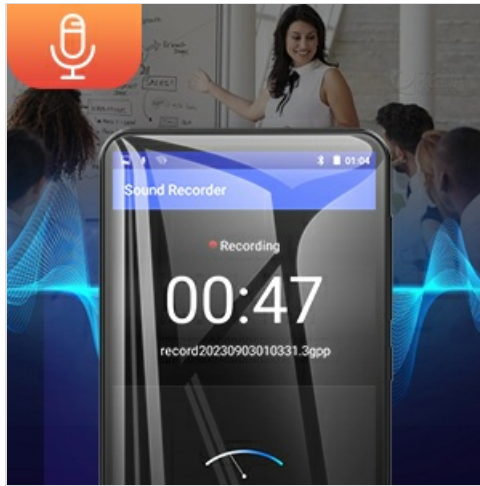 


Image: The device showing the sound recorder application in action.

3.6 Web Browsing

Utilize the built-in web browser to access the internet via Wi-Fi.

1. Ensure the device is connected to a Wi-Fi network.
2. Open the browser application (e.g., Chrome).
3. Enter URLs or search queries to browse the web.

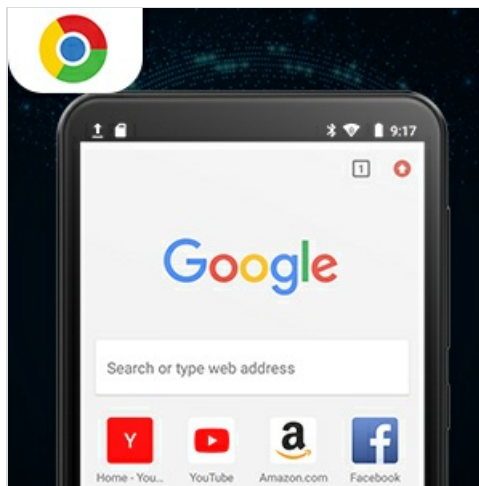 


Image: The device displaying a web browser interface, indicating internet access.

3.7 E-book Reading

The device supports e-book reading. Transfer e-book files to the device and open them using the dedicated e-book reader application.

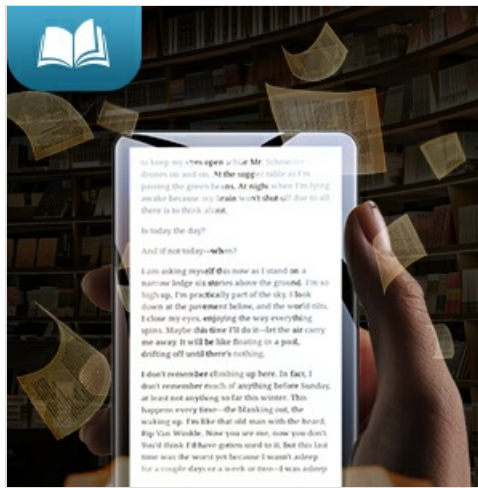 


Image: The device displaying an e-book, highlighting its e-reading functionality.

4. MAINTENANCE

4.1 Cleaning

Use a soft, dry, lint-free cloth to clean the device screen and body. Avoid using abrasive cleaners or solvents, which can damage the surface.

4.2 Storage

Store the device in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Avoid placing heavy objects on the device.

4.3 Battery Care

To prolong battery life:

- Avoid fully discharging the battery frequently.
- Do not expose the device to extreme heat or cold.
- If storing the device for an extended period, charge it to about 50% before storage.

4.4 Software Updates

Periodically check for software updates in **Settings > System > System update** to ensure optimal performance and access to new features.

5. TROUBLESHOOTING

If you encounter issues with your Oilsky M303, refer to the following common solutions:

- **Device not powering on:** Ensure the battery is charged. Connect the device to a charger for at least 30 minutes before attempting to power it on again.
- **Charging issues:** Check the USB cable and charger for damage. Try a different USB port or power adapter.
- **Wi-Fi/Bluetooth connectivity problems:** Ensure Wi-Fi/Bluetooth is enabled in settings. Restart the device and your router/Bluetooth accessory. Forget the network/device and try reconnecting.
- **Music/Video not playing:** Check if the file format is supported. Ensure the files are not corrupted. Try playing a different file.

- **MicroSD card not recognized:** Ensure the card is inserted correctly. Try reinserting the card or using a different microSD card to rule out card issues.
- **Device unresponsive:** Press and hold the power button for about 10-15 seconds to force a restart.
- **General performance issues:** Clear cache of frequently used apps or perform a factory reset (Note: A factory reset will erase all data on the device. Back up important data before proceeding).

If the device is not functioning as expected, and the above steps do not resolve the issue, please refer to the warranty and support information for further assistance. Some issues may have specific recovery methods provided by customer support via email.

6. SPECIFICATIONS

Brand	Oilsky
Model	M303
Display	4-inch LCD
Internal Storage	16 GB
Expandable Storage	Up to 512 GB (microSD card)
Battery Capacity	2000mAh
Processor	Android 4-core
Connectivity	WiFi, Bluetooth
Features	FM Radio, Voice Recording, 1080P Video Playback, Music Playback, Japanese Keyboard Support
Color	Black



Image: Internal specifications highlighting the MTK 4-core chip, Android OS, and memory configuration.

7. WARRANTY AND SUPPORT

Oilsky provides a comprehensive warranty and support for your M303 MP3 Player:

- **Quality Assurance:** The product comes with a 1-year quality assurance period.
- **After-Sales Service:** After-sales service is always available. For any issues, please contact us via email.
- **Exchanges and Upgrades:** Exchanges or version upgrades can be facilitated through Amazon or the after-sales email address provided in the product documentation.
- **Permanent Free Exchange:** After a product upgrade, a free exchange for a new product is possible, and this benefit is permanently valid. No specific action is required from your side; if the product was ordered on Amazon, this policy applies by default.

For further assistance, please refer to the contact information provided with your product or on the official Oilsky website.