

DiDimo LG-901

DiDimo Rapid Egg Cooker LG-901 Instruction Manual

Model: LG-901

1. INTRODUCTION

Thank you for purchasing the DiDimo Rapid Egg Cooker LG-901. This versatile appliance is designed to simplify your cooking experience, allowing you to prepare a variety of egg dishes with ease and precision. Please read this manual thoroughly before use to ensure safe operation and optimal performance.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

The DiDimo Rapid Egg Cooker LG-901 is a compact and efficient appliance designed for various egg preparations. It features a user-friendly touchscreen interface and durable construction.



Image: DiDimo Rapid Egg Cooker with its main components including the base, egg rack, and stainless steel inner pot.

Components:

- **Main Unit:** Houses the heating element and control panel.
- **Stainless Steel Inner Pot:** For cooking various egg dishes.
- **Egg Rack:** Holds eggs in place for boiling.
- **Lid:** Transparent lid to cover the cooking area.
- **Measuring Cup:** For precise water measurement.

4. SETUP

Before first use, unpack all components and wash the stainless steel inner pot, egg rack, and lid with warm, soapy water. Rinse thoroughly and dry. Wipe the main unit with a damp cloth.

Initial Setup Steps:

1. Place the main unit on a stable, heat-resistant surface.
2. Ensure the unit is unplugged from the power outlet.
3. Fill the stainless steel inner pot with the appropriate amount of water according to your desired egg doneness (refer to the 'Water Level Guide' in the Operation section).

5. OPERATION

The DiDimo Rapid Egg Cooker offers 6-in-1 functionality for various egg preparations. The touchscreen design allows for easy selection of cooking modes.



Image: Close-up of the DiDimo Rapid Egg Cooker's smart touch panel showing various functions.

Water Level Guide:

Use the provided measuring cup to add water to the inner pot. The water level determines the cooking result.

- **MAX Water Level Line:** For Soft-Boiled Eggs, Hot Spring Eggs, Hard-Boiled Eggs, and Tea Eggs.
- **MIN Water Level Line:** For Egg Custard and Yogurt.

Cooking Instructions for Various Egg Types:

Your browser does not support the video tag.

Video: Official demonstration of the DiDimo Rapid Egg Cooker's 6-in-1 functions.

1. Soft-Boiled Eggs:



Image: Steps for preparing soft-boiled eggs using the DiDimo Rapid Egg Cooker.

- Place eggs on the egg rack.
- Add water up to the MAX water level line.
- Select the 'Soft-Boiled Egg' function.
- Wait approximately 12 minutes.

2. Hot Spring Eggs:



Image: Steps for preparing hot spring eggs using the DiDimo Rapid Egg Cooker.

- Place eggs on the egg rack.
- Add water up to the MAX water level line.
- Select the 'Hot Spring Egg' function.
- Wait approximately 20 minutes.

3. Hard-Boiled Eggs:



Image: Steps for preparing hard-boiled eggs using the DiDimo Rapid Egg Cooker.

- Place eggs on the egg rack.
- Add water up to the MAX water level line.
- Select the 'Hard-Boiled Egg' function.
- Wait approximately 26 minutes.

4. Tea Eggs:



Image: Steps for preparing tea eggs using the DiDimo Rapid Egg Cooker.

- Place eggs on the egg rack.
- Add water up to the MAX water level line.
- Select the 'Tea Egg' function.
- Wait approximately 120 minutes.

5. Egg Custard:



Image: Steps for preparing egg custard using the DiDimo Rapid Egg Cooker.

- Place egg and bowl on the egg rack.
- Add water up to the MIN water level line.
- Select the 'Egg Custard' function.
- Wait approximately 34 minutes.

6. Yogurt:

DIDIMO

「Egg Maker」 Bring You a Simple Life

- ☑ Multifunctional Egg Maker
- ☑ Reservation Time
- ☑ Auto Shut-off Function
- ☑ Sound Reminder Function



Image: Steps for preparing yogurt using the DiDimo Rapid Egg Cooker.

- Place yogurt ingredients and bowl on the egg rack.
- Add water up to the MIN water level line.
- Select the 'Yogurt' function.
- Wait approximately 600 minutes.

Timer and Auto Shutdown:

The egg cooker features a scheduling function from 30 minutes to 24 hours, allowing you to set the time in advance. It also includes a silent mode and an automatic shutdown feature for convenience and safety.



Image: DiDimo Rapid Egg Cooker highlighting its reservation time and automatic shut-off function.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your DiDimo Rapid Egg Cooker.

「Smart Touch Panel & Fashion Design」



Image: Demonstrating the easy cleaning process for the DiDimo Rapid Egg Cooker.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.
3. The stainless steel inner pot, egg rack, and lid can be rinsed directly with water and are dishwasher safe.
4. Ensure all parts are completely dry before storing or next use.

7. TROUBLESHOOTING

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a working outlet. Check if the scheduling function is active.
- **Eggs are not cooked to desired doneness:** Verify that the correct amount of water was added for the desired doneness (refer to 'Water Level Guide'). Ensure the lid is properly closed.
- **Water stains on heating plate:** This is normal mineral residue from water. Clean with a mixture of water and vinegar or a non-abrasive cleaner.

8. SPECIFICATIONS

- **Model:** LG-901

- **Brand:** DiDimo
- **Material:** High-quality PP material, 304 Stainless Steel inner pot
- **Capacity:** 14 ounces (suitable for multiple eggs)
- **Features:** Timer (30 min - 24 hr), Auto Shut-Off, Silent Mode, Touchscreen
- **Dimensions:** 7.56 x 7.44 x 6.97 inches
- **Item Weight:** 1.68 pounds
- **UPC:** 742404170278

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact DiDimo customer service. Keep your proof of purchase for any warranty claims.