

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN BP59-00149B / BP59-00149A Voice Remote Control User Manual for Samsung Smart TVs and Projectors

PERFASCIN BP59-00149B, BP59-00149A

PERFASCIN BP59-00149B / BP59-00149A Voice Remote Control User Manual

Model Numbers: BP59-00149B, BP59-00149A

INTRODUCTION

This manual provides comprehensive instructions for the PERFASCIN BP59-00149B and BP59-00149A Voice Remote Control. This remote is designed as a replacement for various Samsung Smart TVs, 4K HD HDR LED models, and Freestyle Portable Projectors, including models like TM2261S and RMCSP81SP1. It features voice control capabilities and requires no programming or pairing for initial use.





Image: Front view of the PERFASCIN BP59-00149B / BP59-00149A Voice Remote Control, showing all buttons and the sleek design.





Image: Back view of the PERFASCIN BP59-00149B / BP59-00149A Voice Remote Control, showing the battery compartment cover.

SETUP

1. Battery Installation

The remote control requires two AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.

2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: The back of the remote control with the battery compartment open, showing the correct orientation for inserting two AAA batteries.

2. Initial Use

This PERFASCIN remote control is designed for immediate use with compatible Samsung devices. No programming or pairing is typically required. Once batteries are installed, the remote should function directly with your Samsung Smart TV or Projector.

OPERATING INSTRUCTIONS

Familiarize yourself with the remote's buttons and their functions:

- **Power Button** (⏻): Turns the connected device on or off.
- **Voice Assistant Button** (🎤): Activates the voice control feature. Press and hold to speak commands.
- **Back Button** (⏮): Returns to the previous screen or menu.
- **Home Button** (🏠): Navigates to the main home screen.
- **Play/Pause Button** (⏮/⏭): Controls media playback (play, pause).
- **Navigation Pad (Circular)**: Use the directional buttons (Up, Down, Left, Right) to navigate menus and the central button to select items.
- **Volume Buttons** (+ / -): Adjusts the volume level.
- **Channel Buttons (Up / Down Arrows)**: Changes channels or scrolls through lists.
- **Quick Access Buttons**: Dedicated buttons for popular streaming services like **Netflix**, **Samsung TV Plus**, **Disney+**, and **Prime Video** for direct access.

Voice Control Functionality

To use the voice control feature:

1. Press and hold the **Voice Assistant Button** (microphone icon).
2. Speak your command clearly into the remote control.
3. Release the button once you have finished speaking.

Examples of voice commands may include: "Open Netflix," "Change to Channel 5," "Increase volume," "Search for [movie title]."

MAINTENANCE

Battery Replacement

Replace batteries when the remote's performance degrades or it stops responding. Always replace both batteries at the

same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity.
Remote's range is reduced.	Weak batteries; Obstruction between remote and device.	Replace batteries. Ensure a clear line of sight to the device's sensor.
Voice control not working.	Microphone blocked; Remote not held correctly; Device settings.	Ensure nothing is covering the microphone. Hold the remote closer to your mouth. Check your TV/Projector's settings for voice control activation.
Specific buttons not working.	Button stuck; Internal malfunction.	Gently press the button multiple times to dislodge any debris. If the issue persists, contact support.

SPECIFICATIONS

- **Model Numbers:** BP59-00149B, BP59-00149A (Replaces BN59-01434A)
- **Compatible Devices:** Samsung Smart TVs, 4K HD HDR LED models, Freestyle Portable Projectors (e.g., TM2261S, RMCSP81SP1, LS32BM80GUXXU, S32BM80BUN, S32BM805UN, LS32BM805UNXGO, LS32BM801UNXGO, LS32BM80PUNXGO, LS32CM80BUNXZA, LS32CM80GUNXZA, LS32CM80PUNXZA, LS32CM801UNXZA, S32BM801UN, S32BM80PUN, S32BM80GUN, S43BM702UNABS, TM2261S, LS32BM801UUXU, LS32BM700UPXEN, LS32BM801UUXEN, LS32AM702UUXEN, LS32BM80PUUXEN, LS32AM703UUXEN, LS43AM700UPXEN, LS32BM500EUXEN, LS43AM704U, RMCSPB1SP1, LS32BM702UNXGO, LS32BM80BUNXGO, LS32BM80GUNXGO, LS32BM703UNXZA, LS43AM702UNXZA, S32BM80GUU, BN59-01462A)
- **Special Features:** Ergonomic design, Voice Search
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Product Dimensions:** 6 x 5 x 0.55 inches (approximately)
- **Item Weight:** 1.4 ounces (approximately)

WARRANTY AND SUPPORT

For any questions, concerns, or technical assistance regarding your PERFASCIN remote control, please contact the manufacturer or seller directly. Refer to your purchase documentation for specific warranty information and contact details.

Note: The manufacturer is PERFASCINYIKUN.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question