

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HAUSHOF](#) /

› [HAUSHOF 5.8 QT Air Fryer Small Oven User Manual](#)

## HAUSHOF HH22067AF

# HAUSHOF 5.8 QT Air Fryer User Manual

Model: HH22067AF

## 1. IMPORTANT SAFETY INSTRUCTIONS

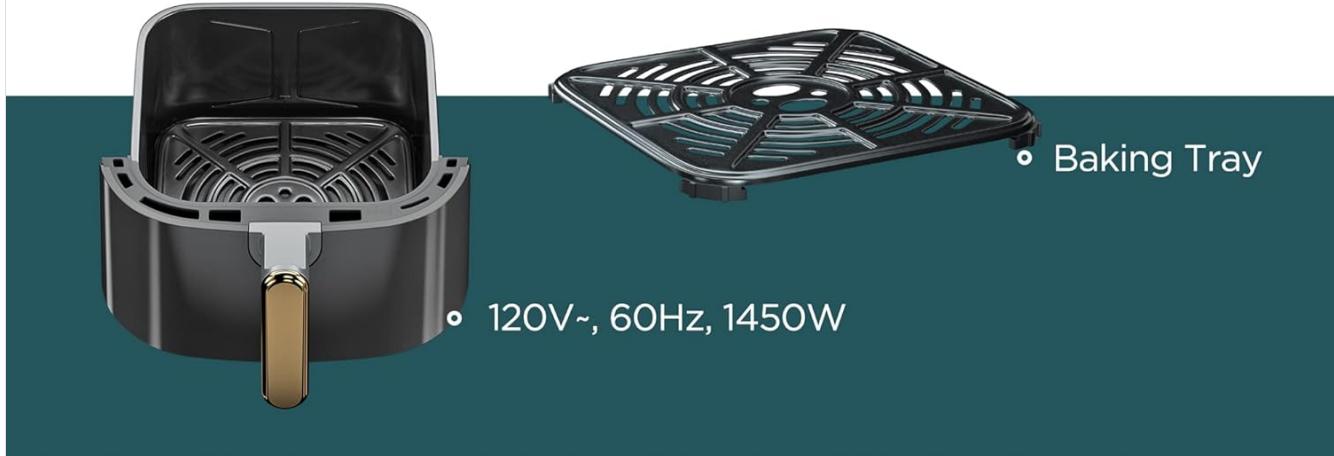
When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure adequate ventilation around the appliance during use.

## 2. PRODUCT OVERVIEW

### 2.1 Components and Features

The HAUSHOF 5.8 QT Air Fryer is designed for healthy cooking with minimal oil. It features a digital interface and multiple preset cooking functions.



**Image:** Labeled components of the HAUSHOF 5.8 QT Air Fryer, including the main unit, visible window, handle, and removable baking tray. The unit operates at 120V~, 60Hz, 1450W.

- **5.8 QT Capacity:** Suitable for family-sized meals.
- **Digital Touch Control:** Intuitive interface for setting temperature and time.
- **Visible Window:** Allows monitoring of cooking progress without opening the basket.
- **8 Preset Cooking Modes:** Optimized settings for common dishes.
- **High-Speed Air Circulation:** Ensures even and quick cooking.
- **Non-stick Removable Basket:** For easy food release and cleaning.
- **Power:** 1450 Watts.



**Image:** The air fryer control panel highlighting the eight preset cooking modes available for various food types.

### 3. SETUP

#### 3.1 Unpacking

1. Carefully remove the air fryer and all packaging materials from the box.
2. Remove any stickers or labels.
3. Check that all components are present and undamaged.

#### 3.2 Before First Use

1. Wipe the exterior of the air fryer with a damp cloth.
2. Clean the removable basket and baking tray with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. Place the air fryer on a stable, level, heat-resistant surface, away from walls or other appliances to ensure

proper air circulation. Leave at least 4 inches (10 cm) of space on all sides.

4. Plug the power cord into a grounded wall outlet.

## 4. OPERATING INSTRUCTIONS

### 4.1 Basic Operation

1. Pull out the air fryer basket from the main unit.
2. Place ingredients into the basket, ensuring not to overfill. Do not exceed the MAX fill line.
3. Slide the basket back into the air fryer until it clicks into place.
4. Press the Power button to turn on the appliance. The display will illuminate.
5. Use the temperature control buttons (up/down arrows) to set the desired cooking temperature (180-400°F).
6. Use the time control buttons (up/down arrows) to set the desired cooking time.
7. Press the Start/Pause button to begin cooking. The fan and heating element will activate.
8. During cooking, you can pull out the basket to shake or flip ingredients. The air fryer will automatically pause and resume when the basket is reinserted.
9. Once the timer reaches zero, the air fryer will beep and automatically shut off.
10. Carefully pull out the basket and empty the cooked food onto a plate.

### 4.2 Using Preset Modes

The air fryer comes with 8 convenient preset cooking modes:

- Chips
- Chicken Wing
- Steak
- Fish
- Egg Tart
- Sweet Potato
- Shrimp
- Chinese Chestnut

To use a preset mode:

1. Turn on the air fryer.
2. Press the Menu/Preset button repeatedly to cycle through the available presets. The corresponding icon will light up, and the default time and temperature for that preset will be displayed.
3. You can adjust the time and temperature manually even after selecting a preset, if desired.
4. Press the Start/Pause button to begin cooking.



**Image:** The HAUSHOF 5.8 QT Air Fryer in operation, showcasing its sleek design and the type of crispy results it can achieve, such as a whole roasted chicken and golden fries.

## 5. MAINTENANCE AND CLEANING

Regular cleaning will extend the life of your air fryer and ensure optimal performance.

### 5.1 Cleaning the Basket and Tray

# Removable Tray

## Easy to Clean



**Image:** The removable non-stick tray being washed by hand, demonstrating its ease of cleaning.

1. Always unplug the air fryer and allow it to cool completely before cleaning.
2. Remove the basket and baking tray.
3. Wash the basket and tray with hot water, dish soap, and a non-abrasive sponge. The non-stick coating protects against rusting.
4. Do not use metal kitchen utensils or abrasive cleaning materials, as this may damage the non-stick coating.
5. Rinse thoroughly and dry completely before reassembling or storing.
6. Note: The basket and tray are **not** dishwasher safe.

### 5.2 Cleaning the Main Unit

1. Wipe the exterior of the air fryer with a damp cloth.
2. Clean the interior of the appliance with a non-abrasive sponge or cloth.
3. Do not immerse the main unit in water or any other liquid.

## 6. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
Food is not cooked evenly.	Basket is overfilled.	Reduce the amount of food in the basket. Cook in smaller batches.
Food is not crispy.	Not enough oil (if applicable) or food not shaken/flipped.	Lightly spray or brush food with oil. Shake or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use.	Clean the basket and tray thoroughly after each use.
Keypad/Touchscreen unresponsive.	Temporary electronic glitch or malfunction.	Unplug the unit for 5-10 minutes, then plug it back in and try again. If the issue persists, contact customer support.

## 7. SPECIFICATIONS

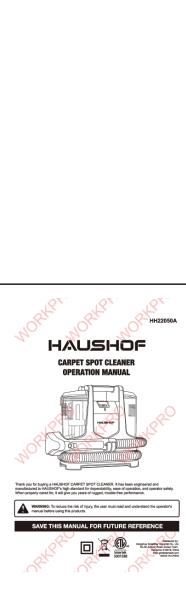
Feature	Detail
Brand	HAUSHOF
Model Name	5.8 Qt Air Fryer
Item Model Number	HH22067AF
Capacity	5.8 Quarts
Product Dimensions	14"D x 14"W x 14"H
Item Weight	11.68 pounds
Color	Black
Material	Stainless Steel
Output Wattage	1375 Watts
Wattage	1450 Watts
Control Method	Touch
Max Temperature Setting	400 Degrees Fahrenheit
Has Nonstick Coating	Yes
Is Dishwasher Safe	No (Basket/Tray)
UPC	820909605720

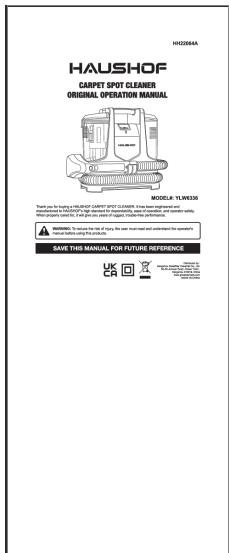
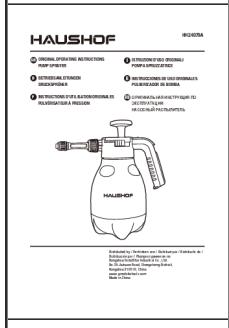
## 8. WARRANTY AND SUPPORT

HAUSHOF products are manufactured to high-quality standards. For any questions, concerns, or support needs regarding your HAUSHOF 5.8 QT Air Fryer, please contact HAUSHOF customer service. Please have your model number (HH22067AF) and purchase information ready when contacting support.

Specific warranty details may vary by region and retailer. Please refer to the documentation included with your purchase or visit the official HAUSHOF website for the most up-to-date warranty information.

### Related Documents - HH22067AF

	<p><a href="#"><u>HAUSHOF HH25001A Portable Dehumidifier User Manual</u></a></p> <p>Official user manual for the HAUSHOF HH25001A portable dehumidifier. Includes safety instructions, technical specifications, operation guide, cleaning, maintenance, and troubleshooting tips.</p>
	<p><a href="#"><u>HausHof Carpet Spot Cleaner Operation Manual</u></a></p> <p>This operation manual provides detailed instructions for the HausHof Carpet Spot Cleaner, including safety precautions, parts identification, preparation, operating instructions, cleaning and maintenance, troubleshooting, and disposal information.</p>
	<p><a href="#"><u>HAUSHOF Carpet Spot Cleaner HH22050A Operation Manual</u></a></p> <p>This manual provides instructions for the HAUSHOF Carpet Spot Cleaner HH22050A, covering safety precautions, parts identification, preparation, operation, cleaning, maintenance, troubleshooting, and disposal.</p>

	<p><b><a href="#">HAUSHOF Carpet Spot Cleaner Original Operation Manual</a></b></p> <p>This operation manual provides detailed instructions for the HAUSHOF Carpet Spot Cleaner, Model YLW6336. It covers important safety precautions, parts identification, preparation, operating instructions, handling stubborn dirt, cleaning and maintenance, consumables, fault diagnosis, and environmentally friendly disposal.</p>
	<p><b><a href="#">HAUSHOF HH24079A Pump Sprayer: Operating and Safety Manual</a></b></p> <p>This manual provides comprehensive instructions for operating, cleaning, and troubleshooting the HAUSHOF HH24079A pump sprayer. It includes detailed safety guidelines, parts layout, and operational modes for foaming and spraying applications.</p>
	<p><b><a href="#">HAUSHOF Portable Air Conditioner OL-A016AA26N2 User Manual</a></b></p> <p>This user manual provides operating instructions, safety precautions, and technical data for the HAUSHOF Portable Air Conditioner, model OL-A016AA26N2. Learn about installation, operation modes, remote control functions, drainage, and cleaning.</p>