

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PRITOM](#) /

› [PRITOM 7 inch Kids Tablet Instruction Manual](#)

PRITOM K7-BE(LY)

PRITOM 7 inch Kids Tablet Instruction Manual

Model: K7-BE(LY)

INTRODUCTION

Welcome to the PRITOM 7 inch Kids Tablet. This device is designed to provide a safe and engaging digital experience for children, featuring a durable, kid-friendly design and pre-installed educational software. It operates on Android 13, equipped with a high-performance quad-core processor, 1024x600 IPS HD display, WiFi, Bluetooth, dual cameras, 32GB storage, and 4GB RAM (with 2GB expandable). The included lanyard and shock-proof silicone case ensure portability and protection.



Figure 1: PRITOM 7 inch Kids Tablet (Blue)

KEY FEATURES

- **Pre-installed Kids Software:** Comes with iWawa Kid's software, offering free pre-installed apps for learning and playing. Additional apps can be downloaded from the Google Play Store.
- **Robust Performance:** Features a built-in high-performance quad-core processor and Android 13 System for a smooth experience.
- **Vibrant Display:** Equipped with a 1024x600 IPS HD display for clear visuals.
- **Ample Storage:** Includes 32GB internal storage and 4GB RAM (+2GB expandable), with support for up to 512GB via micro SD card.
- **Dual Cameras:** Integrated front and rear cameras for photos and video calls.
- **Connectivity:** Supports WiFi and Bluetooth for seamless connection.
- **Kid-Proof Design:** Protected by a lightweight, durable, and impact-resistant soft silicone case with a built-in stand function.
- **Portable Lanyard:** Includes a detachable lanyard for easy carrying.
- **Parental Controls:** Offers security controls (APPs & Network Filters), content management, and behavioral restrictions (Child Locks, Game Time Limits).

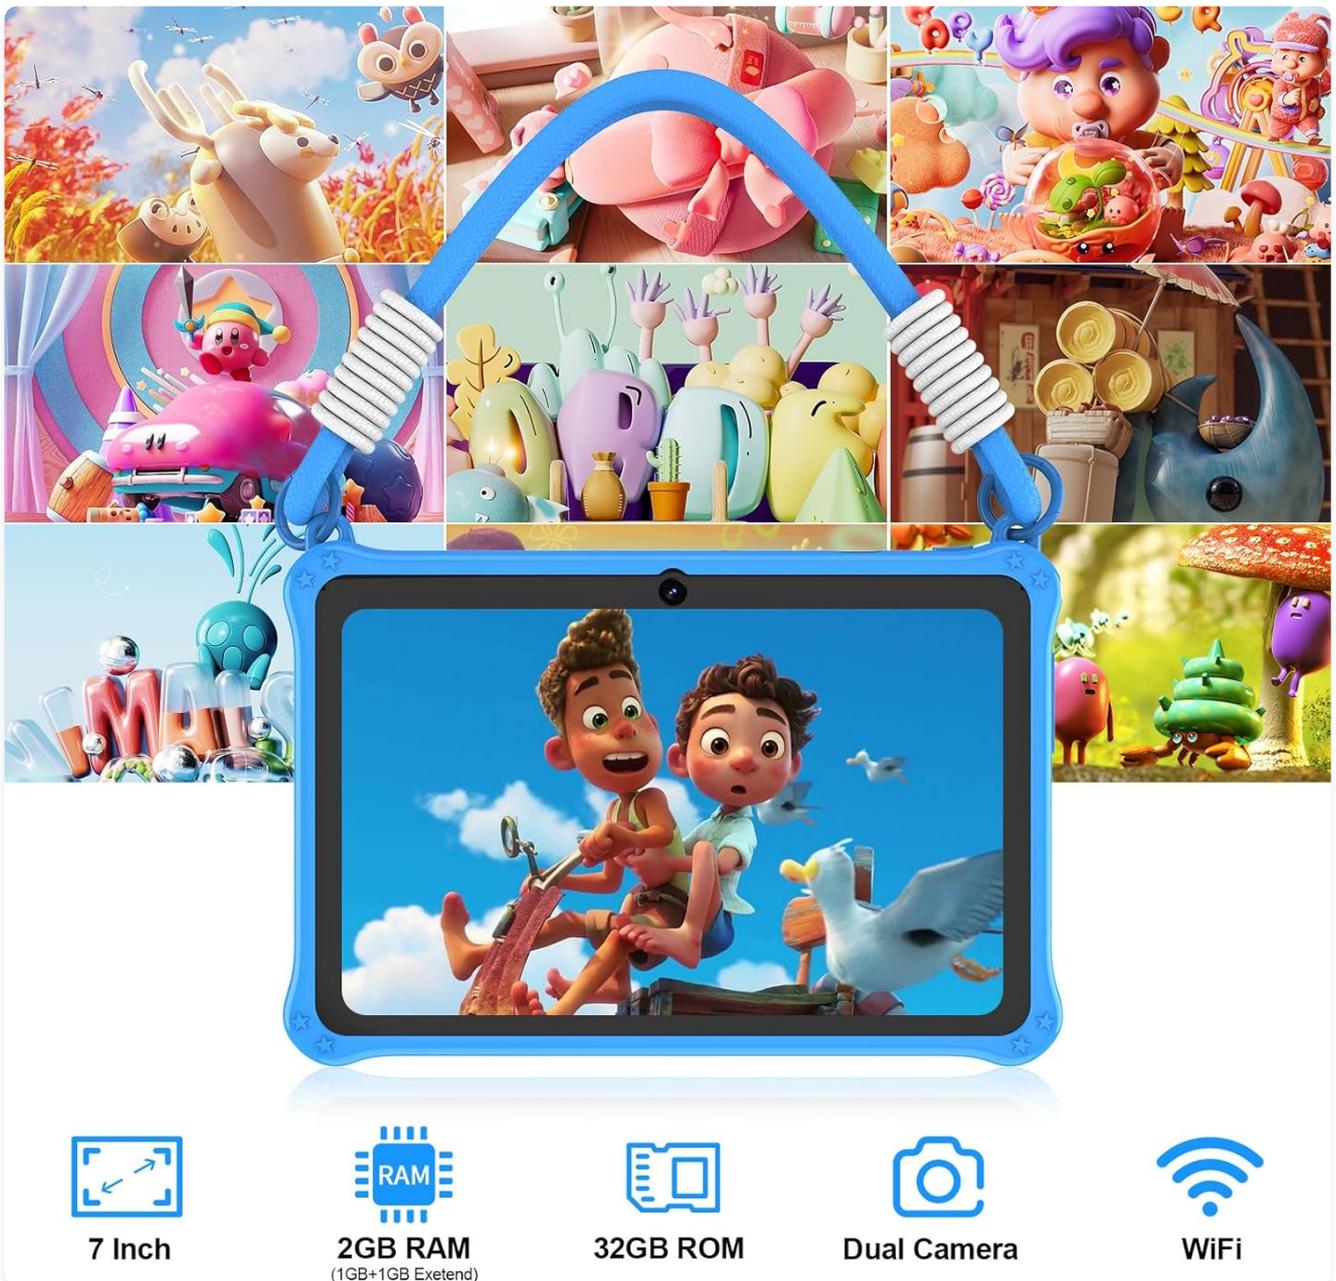


Figure 2: Tablet features overview

SETUP GUIDE

1. Initial Power On and Basic Setup

1. **Charge the Tablet:** Before first use, fully charge the tablet using the provided Type-C cable and a compatible power adapter.
2. **Power On:** Press and hold the Power Button (refer to Figure 3 for button location) until the PRITOM logo appears.
3. **Language and Region:** Follow the on-screen prompts to select your preferred language and region.
4. **Connect to Wi-Fi:** Select your Wi-Fi network and enter the password to connect to the internet.
5. **Google Account:** Sign in with an existing Google account or create a new one. This is necessary for accessing the Google Play Store and other Google services.

2. Setting Up Parental Controls with iWawa

The PRITOM Kids Tablet comes with the iWawa Kid's software pre-installed, providing a safe and controlled environment for your child.

1. **Launch iWawa:** Locate and tap the iWawa app icon on the tablet's main screen.

2. **Create Child Profile:** Follow the instructions within the iWawa app to create a profile for your child. You can set up multiple child accounts.
3. **Set Parental Password:** Establish a strong password for the parental control section. This password is required to exit iWawa or modify settings, ensuring your child stays within the safe environment.
4. **Manage Content:** Within iWawa's parental settings, you can:
 - Approve or block specific applications.
 - Filter web content and manage network access.
 - Set time limits for tablet usage and specific apps.
 - Monitor your child's activity and preferences.
5. **Download Apps:** While in iWawa, your child can access pre-approved content. For additional apps, you can exit iWawa (using your parental password) and download from the Google Play Store. Once downloaded, you can add them to your child's approved list within iWawa.

Kids Enjoy With Filter Content



Figure 3: Parental Control Interface

Google Certificated Tablet



Figure 4: Accessing Google Play Store

OPERATING INSTRUCTIONS

1. Basic Navigation

- **Touchscreen:** Navigate the tablet by tapping, swiping, and pinching on the screen.
- **Home Screen:** The main screen displays app icons and widgets. Swipe left or right to access additional screens.
- **Notification Bar:** Swipe down from the top of the screen to access notifications and quick settings (Wi-Fi, Bluetooth, brightness, etc.).
- **Back, Home, Recent Apps:** Use the navigation buttons at the bottom of the screen to go back, return to the home screen, or view recently opened applications.

2. Ports and Buttons



- ① Type-C ② Power Button ③ Rear Camera ④ Front Camera
- ⑤ Lanyard ⑥ Speaker ⑦ Headphone Jack ⑧ Volume +/-

Figure 5: Tablet Ports and Buttons

- **Type-C Port (1):** Used for charging the tablet and connecting to a computer for data transfer.
- **Power Button (2):** Press and hold to power on/off or restart. Press briefly to turn the screen on/off or put the tablet to sleep.
- **Rear Camera (3):** For taking photos and videos from the back of the tablet.
- **Front Camera (4):** For selfies and video calls.
- **Lanyard Attachment Points (5):** Secure points for attaching the included lanyard.
- **Speaker (6):** Audio output for games, videos, and music.
- **Headphone Jack (7):** Connect 3.5mm headphones for private listening.
- **Volume +/- Buttons (8):** Adjust the tablet's volume up or down.

3. Using the Lanyard and Stand

- **Lanyard:** Attach the lanyard to the designated points (5) on the tablet case for easy and secure carrying. The lanyard can be detached if not needed.
- **Built-in Stand:** The silicone case features a foldable stand on the back. Extend the stand to prop up the tablet for hands-free viewing, ideal for watching videos or engaging in educational activities.



Figure 6: Tablet with Lanyard and Stand

MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and tablet body. For stubborn smudges, slightly dampen the cloth with water. Avoid harsh chemicals or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the tablet frequently. Charge it regularly and avoid exposing it to extreme temperatures.
- **Software Updates:** Periodically check for system updates in the tablet's settings to ensure optimal performance and security.
- **Storage Management:** Regularly clear unnecessary files and apps to free up storage space and maintain smooth operation.
- **Case Protection:** Keep the silicone case on the tablet to protect it from accidental drops and impacts.

TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Tablet won't turn on.	Ensure the tablet is fully charged. Press and hold the Power Button for 10-15 seconds to force a restart.
Screen is unresponsive.	Restart the tablet. If the issue persists, ensure the screen is clean and free of debris.
Wi-Fi connection issues.	Check if Wi-Fi is enabled in settings. Restart your Wi-Fi router. Forget the network and reconnect.
Apps are running slow or crashing.	Close background apps. Clear app cache (Settings > Apps > [App Name] > Storage > Clear Cache). Free up storage space.
Cannot exit iWawa.	Ensure you are entering the correct parental password. If forgotten, refer to iWawa's support or reset options.

SPECIFICATIONS

Feature	Detail
Screen Size	7 Inches
Screen Resolution	1024 x 600 pixels (IPS HD)
Operating System	Android 13
Processor	Quad-core (Unisoc)
RAM	4GB (+2GB Expand)
Internal Storage	32GB
Expandable Storage	Up to 512GB via Micro SD Card
Cameras	Dual Camera (Front & Rear)
Wireless Type	802.11n (Wi-Fi), Bluetooth
Battery Type	Lithium-Ion (1 required, included)
Average Battery Life	3.5 Hours (usage dependent)
Item Weight	1.43 pounds
Product Dimensions	8.2 x 5.9 x 0.7 inches
Color	Blue
Model Number	K7-BE(LY)

WARRANTY AND SUPPORT

PRITOM is committed to providing high-quality products and attentive customer service. If you have any questions or encounter issues with your PRITOM Kids Tablet, please reach out to the PRITOM Team via email for prompt assistance. Additionally, a 2-Year Protection Plan is available for purchase to provide extended coverage for your device. Please refer to the product listing or contact your retailer for details on purchasing this plan.

