

[Manuals.plus](#) /

› [NSXAYIWE](#) /

› NSXAYIWE YD-103 4-in-1 Electric Nose and Body Hair Trimmer User Manual

## NSXAYIWE YD-103

# NSXAYIWE YD-103 4-in-1 Electric Nose and Body Hair Trimmer User Manual

Model: YD-103

## INTRODUCTION

---

This manual provides detailed instructions for the safe and effective use of your NSXAYIWE YD-103 4-in-1 Electric Nose and Body Hair Trimmer. Please read this manual thoroughly before first use and retain it for future reference. This device is designed for trimming nose, ear, eyebrow, and facial hair.



Image: The NSXAYIWE YD-103 electric trimmer in blue, shown with its four interchangeable heads (nose, eyebrow, beard, and face trimmer) and a USB charging cable.

## SAFETY INFORMATION

---

- Keep the device out of reach of children.
- Do not disassemble or attempt to repair the device yourself. Contact customer support if issues arise.
- Avoid using the trimmer on irritated, damaged, or infected skin.
- Ensure the device is fully dry before charging.
- Do not immerse the main body of the trimmer in water, only the detachable heads are washable.
- Use only the provided USB charging cable.

## PACKAGE CONTENTS

---

Verify that all items are present in your package:

- 1 x NSXAYIWE YD-103 Main Trimmer Unit
- 1 x Nose Hair Trimmer Head
- 1 x Eyebrow Trimmer Head
- 1 x Beard Trimmer Head
- 1 x Face Trimmer Head
- 1 x USB Charging Cable



Image: A close-up view of the four distinct trimmer heads (beard, nose, eyebrow, face) and a small cleaning brush, illustrating the versatility of the device.

## SETUP

---

### 1. Charging the Device

1. Before first use, fully charge the trimmer.
2. Connect the USB charging cable to the charging port on the bottom of the trimmer.

3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
4. The charging indicator light will illuminate during charging. Once fully charged, the light may change color or turn off (refer to specific model behavior if indicated).
5. A full charge typically takes approximately 8 hours and provides up to 60 minutes of cordless use.



Image: The blue electric trimmer connected via its USB cable to a wall adapter, demonstrating the charging process.

## 2. Attaching/Detaching Trimmer Heads

- To attach a head: Align the desired trimmer head with the main unit and gently twist or push until it clicks into place.
- To detach a head: Twist or pull the head gently to remove it from the main unit.

## OPERATING INSTRUCTIONS

---

Ensure the trimmer is charged and the desired head is securely attached before use.

### Power On/Off

Slide the power switch located on the front of the device upwards to turn it on, and downwards to turn it off.



Image: A detailed view of the blue trimmer's body, highlighting the silver sliding power switch with directional arrows.

### **Using the Nose/Ear Hair Trimmer Head**

- Gently insert the nose trimmer head into your nostril or ear canal.
- Move the trimmer in a circular motion to trim unwanted hair.
- Do not insert the trimmer too deeply to avoid injury.



Image: A close-up of the nose trimmer head, showing its circular blade design for safe and effective trimming.



Image: A man demonstrating the use of the nose hair trimmer, holding the device to his nostril.

### **Using the Eyebrow Trimmer Head**

- Use the eyebrow trimmer head to shape and trim eyebrows.
- Move the trimmer gently against the direction of hair growth for best results.
- Use caution around the eyes.

### **Using the Beard Trimmer Head**

- Attach the beard trimmer head for precise trimming and shaping of facial hair.
- Move the trimmer in smooth, even strokes.

### **Using the Face Trimmer Head**

- The face trimmer head is suitable for general facial hair removal or detailing.
- Hold the trimmer at a slight angle to the skin and move it gently.

### Cleaning the Trimmer Heads

- After each use, turn off the trimmer and detach the used head.
- Rinse the trimmer head under running water to remove hair and debris.
- For thorough cleaning, use the small cleaning brush (if included) to remove stubborn hairs.
- Allow the trimmer head to air dry completely before reattaching or storing.
- Do not rinse the main body of the trimmer under water.



Image: A hand holding the detachable trimmer head under a running faucet, illustrating the waterproof cleaning process for the head.

### Storage

Store the trimmer and its accessories in a cool, dry place, away from direct sunlight and moisture. Use the included dust cover (if applicable) to protect the trimmer head.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the device fully using the provided USB cable.
Trimmer is not cutting effectively.	Trimmer head is clogged with hair or dull.	Clean the trimmer head thoroughly. If the issue persists, the blade may be worn and require replacement (if available).
Device makes unusual noise.	Trimmer head is not properly attached or damaged.	Ensure the head is securely attached. Inspect for damage.

## SPECIFICATIONS

---

**Model:** YD-103

**Material:** Aluminum tube, ABS

**Power Source:** USB Charging

**Battery:** Built-in Lithium Battery, 400mAh capacity

**Trimmer Size:** Approx. 146 x 21mm / 5.7 x 0.8in

**Functions:** 4-in-1 (Nose Hair, Eyebrow, Beard, Face Trimmer)

## WARRANTY AND SUPPORT

---

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the product packaging or contact NSXAYIWE customer support.

If you encounter any issues or have questions regarding your NSXAYIWE YD-103 trimmer, please contact our customer support team for assistance. Contact information can typically be found on the product packaging or the official NSXAYIWE website.

