

- Manuals.plus /
- › [VersLife](#) /
 - › VersLife L6 Robot Vacuum and Mop Combo Instruction Manual

VersLife L6

VersLife L6 Robot Vacuum and Mop Combo

Instruction Manual
Model: L6 | Brand: VersLife

1. INTRODUCTION

Thank you for purchasing the VersLife L6 Robot Vacuum and Mop Combo. This device is designed to provide efficient and convenient cleaning for your home, combining powerful vacuuming with effective mopping capabilities. Please read this manual thoroughly before operating the product to ensure proper use, maintenance, and safety.



Image: The VersLife L6 Robot Vacuum and Mop Combo, showcasing the main unit, charging base, remote control, side brushes, mop pad, and water tank.

2. SAFETY INSTRUCTIONS

To reduce the risk of injury or damage, read these safety instructions carefully and keep them handy for future reference.

- The robot is for indoor use only. Do not use it outdoors or in commercial or industrial environments.
- Do not use the robot in environments with high humidity or near water sources.
- Before use, remove power cords, small objects, and fragile items from the cleaning area to prevent entanglement or damage.
- Do not allow children or pets to play with the robot. Supervise children when the robot is operating.
- Do not sit on the robot or place heavy objects on it.
- Use only the original charging adapter and charging base provided by the manufacturer.
- Do not handle the robot with wet hands.
- Do not use the robot to pick up large debris, broken glass, or corrosive liquids.

- Ensure the robot operates on a flat surface. Avoid using it on high ledges without protective barriers.
- Turn off the robot and unplug the charging base before cleaning or performing maintenance.

3. PACKAGE CONTENTS

Verify that all components are present and in good condition upon unpacking.

- Robot Vacuum Cleaner x 1
- Charging Base x 1
- Power Adapter x 1
- Remote Control x 1
- Side Brushes x 4 (2 for immediate use, 2 spares)
- Mop Pad x 1
- Mop Cloth x 2
- Water Tank x 1
- Dustbin (pre-installed) x 1
- HEPA Filter x 2 (1 pre-installed, 1 spare)
- Cleaning Brush x 1
- Instruction Manual x 1



Image: A visual representation of all items included in the VersLife L6 product package.

4. PRODUCT OVERVIEW

Robot Unit

- **Top Panel:** Features the power/clean button, Wi-Fi indicator, and dustbin release.
- **Side:** Equipped with collision sensors and a charging contact strip.
- **Bottom:** Includes side brushes, driving wheels, charging contacts, drop sensors, and the suction inlet.

Dustbin and Water Tank

- The L6 features a combined dustbin (450ml) and water tank (250ml) for simultaneous vacuuming and mopping.
- The dustbin is easily removable for emptying.
- The water tank has a fill port for water and attaches to the mop pad.

Charging Base

- Provides automatic recharging for the robot.

- Features charging pins that connect with the robot's charging contacts.

5. SETUP

5.1 Charging Base Placement

Place the charging base against a wall in an open, uncluttered area. Ensure there is at least 1 meter (3 feet) of clear space to the front and 0.5 meters (1.5 feet) to each side of the charging base to allow the robot to return easily.

- Connect the power adapter to the charging base and plug it into a wall outlet.
- Ensure the charging base is placed on a hard, level surface, not on carpet.

5.2 Initial Charging

Before first use, fully charge the robot. You can place the robot directly onto the charging base, aligning its charging contacts with those on the base. The indicator light on the robot will show charging status.

Large capacity battery & automatic charging function

It can be used continuously for up to 120 minutes, and it will automatically return to the charging base and recharge when in low battery or cleaning completed



Image: The VersLife L6 robot vacuum automatically navigating back to its charging base for recharging.

5.3 Installing Side Brushes

Attach the two side brushes to the corresponding posts on the bottom of the robot by pressing them down until they click into place.

5.4 Preparing for Mopping (Optional)

If you intend to use the mopping function:

1. Open the water tank fill port.
2. Fill the water tank with clean water. Do not use cleaning solutions that are not approved for robot vacuums.
3. Securely close the fill port.
4. Attach the mop pad to the bottom of the water tank.
5. Slide the water tank assembly into the designated slot at the rear of the robot until it clicks into place.

2-in-1 Vacuum and Mop Simultaneously

Equipped with a water tank and mop, vacuum and mop simultaneously to capture fine dust that vacuuming alone might miss and you can adjust the water flow to meet your specific cleaning needs



Image: The VersLife L6 robot vacuum simultaneously vacuuming and mopping a floor, demonstrating its dual cleaning capability.

5.5 App Connection (2.4G Wi-Fi Only)

For advanced features and remote control, download the VersLife app and connect your robot.

1. Download the 'VersLife' app from your smartphone's app store.
2. Ensure your phone is connected to a 2.4GHz Wi-Fi network. The robot does not support 5GHz Wi-Fi.
3. Open the app and follow the on-screen instructions to add your device. This typically involves pressing and holding the robot's power button until the Wi-Fi indicator blinks, then following the app's pairing process.



Smart App & Voice Control

Supports both WiFi and Bluetooth connection, enables the app to perform remote controls, such as changing cleaning modes, adjusting the suction power and water volume, set the work schedule, etc



Image: A smartphone screen showing the VersLife app, which allows users to control the robot vacuum, adjust settings, and schedule cleaning.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- **Power On:** Press and hold the power button on the robot for a few seconds until the indicator light turns on.
- **Power Off:** Press and hold the power button for a few seconds until the indicator light turns off.



Image: A hand pressing the central power/clean button on the top of the VersLife L6 robot vacuum.

6.2 Cleaning Modes

The VersLife L6 offers multiple cleaning modes to suit different needs:

- **Auto Mode:** The robot cleans automatically, adjusting its path to cover the entire accessible area. This is the default mode for general cleaning.
- **Spot Mode:** The robot cleans a specific area more intensely, moving in a spiral pattern. Useful for concentrated dirt or spills.
- **Edge Mode:** The robot cleans along walls and furniture edges, ensuring thorough cleaning of corners and perimeters.



Image: An illustration depicting the robot vacuum's intelligent cleaning routes, including auto cleaning, spot cleaning, and edge cleaning patterns.

6.3 Starting a Cleaning Cycle

- **Manual Start:** Press the power button on the robot once to start cleaning in Auto Mode.
- **Remote Control:** Use the remote control to select a cleaning mode and start cleaning.
- **App Control:** Use the VersLife app to select a cleaning mode, adjust suction power (900Pa, 2100Pa, 3000Pa), and water flow level, then start cleaning.

- **Voice Control:** If connected to Amazon Alexa or Google Home, use voice commands (e.g., "Alexa, tell L6 to start cleaning").



Image: A hand operating the remote control to direct the robot vacuum, which is cleaning a floor with debris.

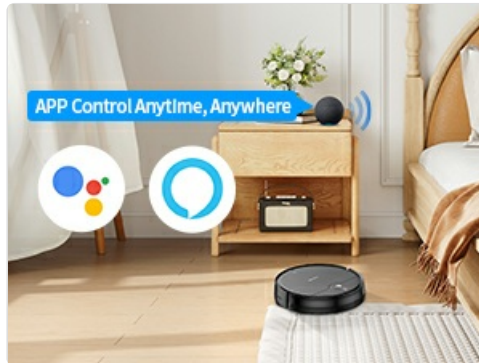


Image: A hand holding a smartphone displaying the VersLife app, used for controlling the robot vacuum remotely.

6.4 Scheduling Cleaning

You can set a cleaning schedule using the VersLife app. This allows the robot to automatically start cleaning at a specified time each day or on selected days of the week.

- Open the VersLife app.
- Navigate to the scheduling section.
- Set desired cleaning times and days.
- Save the schedule.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your VersLife L6 robot vacuum.

7.1 Emptying the Dustbin

Empty the dustbin after each cleaning cycle or when the dustbin full indicator illuminates.

1. Press the 'PULL' button on the top of the robot to release the dustbin.
2. Pull out the dustbin.
3. Open the dustbin lid and empty its contents into a trash bin.

7.2 Cleaning Filters

The L6 uses a Primary Filter, Carbon Sponge Filter, and HEPA Filter. Clean them regularly to maintain suction power.

- Remove the dustbin.
- Take out the filter assembly.
- Tap the filters gently to remove dust. Do not wash the HEPA filter with water.

- The primary filter and carbon sponge filter can be rinsed with water if heavily soiled, but ensure they are completely dry before reinstallation.
- Replace the HEPA filter every 3-6 months, depending on usage.

7.3 Cleaning Side Brushes

Check side brushes for tangled hair or debris weekly. If necessary, remove them and clean them with the provided cleaning tool or a soft cloth.

7.4 Cleaning the Water Tank and Mop Pad

After each mopping session:

- Remove the water tank from the robot.
- Empty any remaining water.
- Detach the mop pad and rinse it thoroughly with water. Allow it to air dry completely before reattaching or storing.
- Wipe the exterior of the water tank with a damp cloth.

7.5 Cleaning Sensors and Charging Contacts

Wipe the drop sensors (on the bottom) and collision sensors (on the front bumper) with a clean, dry cloth. Also, clean the charging contacts on both the robot and the charging base to ensure proper connection.

8. TROUBLESHOOTING

If your VersLife L6 encounters an issue, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Robot does not power on.	Low battery; Power button not pressed long enough.	Place robot on charging base; Press and hold power button for 3-5 seconds.
Robot does not charge.	Charging contacts are dirty; Charging base not powered.	Clean charging contacts on robot and base; Ensure charging base is plugged in.
Robot gets stuck frequently.	Obstacles (cables, rugs); Drop sensors are dirty.	Clear obstacles from cleaning path; Clean drop sensors.
Suction power is weak.	Dustbin full; Filters clogged; Suction inlet blocked.	Empty dustbin; Clean/replace filters; Clear any blockages from suction inlet.
Mopping function not working.	Water tank empty; Mop pad not attached; Water outlet clogged.	Fill water tank; Attach mop pad correctly; Clean water outlet.
Cannot connect to Wi-Fi.	Incorrect Wi-Fi band (5GHz); Incorrect password; Robot too far from router.	Ensure 2.4GHz Wi-Fi; Re-enter password; Move robot closer to router.

9. SPECIFICATIONS

Feature	Detail
Brand	VersLife

Feature	Detail
Model Name	L6
Product Dimensions	11.81"L x 11.81"W x 2.76"H (approx. 30cm x 30cm x 7cm)
Item Weight	7.72 pounds (approx. 3.5 kg)
Max Suction Power	3000Pa
Dustbin Capacity	450 ml
Water Tank Capacity	250 ml
Battery Life	Up to 120 minutes
Filter Type	Primary Filter, Carbon Sponge Filter, HEPA Filter
Connectivity	2.4G Wi-Fi, Remote Control, Voice Control (Alexa, Google Home)
Noise Level	As low as 58 decibels
Special Features	2-in-1 Vacuum & Mop, Auto Recharge, Anti-collision & Anti-fall Sensors, Slim Design (2.92" H)

10. WARRANTY AND SUPPORT

10.1 Warranty Information

VersLife provides a 12-month normal warranty for this product, covering manufacturing defects from the date of purchase. This warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

10.2 Money Back Guarantee

A 30-day money-back guarantee is offered from the date of purchase. Please refer to the retailer's return policy for details.

10.3 Customer Support

For any questions, technical assistance, or warranty claims, please contact VersLife customer support. Our team is available 24/7 to assist you.

- **Website:** Visit the official VersLife website for FAQs and support resources.
- **Email:** Refer to your product packaging or the VersLife website for customer service email contact.
- **Phone:** Refer to your product packaging or the VersLife website for customer service phone number.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CYQ2359F>

More documents and user manuals: **<https://manuals.plus/>**