Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Aspera /
- > Aspera F50 4G Flip Phone User Manual

Aspera Aspera F50

Aspera F50 4G Flip Phone User Manual

Model: Aspera F50

Introduction Setup Operating Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

The Aspera F50 4G Flip Phone is designed for simplicity and ease of use. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device. It features 4G connectivity, a compact flip design, a charging cradle for convenience, and an integrated SOS button for emergencies.

2. SETUP

2.1. Battery and SIM Card Installation

- 1. Carefully remove the back cover of the phone.
- 2. Insert your Nano SIM card into the designated slot. Ensure the gold contacts face downwards and the notched corner aligns correctly.
- 3. Insert the provided Lithium-ion battery into its compartment, aligning the contacts.
- 4. Replace the back cover, ensuring it clicks securely into place.

2.2. Charging Your Phone

Your Aspera F50 can be charged using two methods:

- **Using the Charging Cradle:** Place the F50 into the charging cradle. The indicator on the front display will signal that the battery is charging.
- **Using the USB-C Port:** Connect the provided USB-C charging cable directly to the phone's USB-C port and then to a power adapter. The USB-C connector is reversible, allowing for easy insertion.



The Aspera F50 4G Flip Phone securely placed in its dedicated charging cradle, illustrating the charging process.

3. OPERATING YOUR PHONE

3.1. Power On/Off

- To power on, press and hold the red 'End Call' button until the screen illuminates.
- To power off, press and hold the red 'End Call' button, then confirm 'Power off' on the screen.

3.2. Making and Receiving Calls

- Making a Call: Dial the number using the keypad and press the green 'Call' button.
- Receiving a Call: When the phone rings, open the flip and press the green 'Call' button to answer. Close the flip or press the red 'End Call' button to end the call.
- Speed Dial: Utilize the dedicated M1, M2, M3 keys for frequently called numbers. Refer to your phone's settings to

assign contacts to these keys.

3.3. Sending SMS Messages

- 1. Navigate to the 'Messages' menu.
- 2. Select 'Write Message' or 'New SMS'.
- 3. Enter your message using the keypad.
- 4. Enter the recipient's number or select from contacts, then send.

3.4. Using the Camera

The Aspera F50 features a 0.3MP rear camera. Access the camera from the main menu to take photos or record videos.

3.5. SOS Emergency Button

The integrated SOS button on the back cover can be configured to dial emergency contacts when pressed for 5 seconds. Ensure emergency contacts are set up in the phone's settings for this feature to function correctly.

3.6. Torch Function

Activate the built-in torch (flashlight) function for illumination in dark environments. This can typically be accessed via a dedicated button or through the phone's menu.



The Aspera F50 4G Flip Phone in its open position, displaying the large, clear keypad with dedicated call and end buttons, and the internal color screen.



The rear view of the Aspera F50 4G Flip Phone, highlighting the prominent SOS emergency button and speaker grille.

4. MAINTENANCE

4.1. Cleaning

- Use a soft, dry, lint-free cloth to clean the phone's screen and body.
- Avoid using harsh chemicals, cleaning solvents, or strong detergents.

4.2. Battery Care

- Do not expose the battery to extreme temperatures.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- If the phone will not be used for an extended period, charge it to about 50% before storing.

4.3. Storage

Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

5.1. Phone Not Turning On

- Ensure the battery is correctly inserted and charged.
- Connect the phone to the charger and wait a few minutes before attempting to power on again.

5.2. No Network Signal

- Check if the SIM card is properly inserted.
- Ensure you are in an area with network coverage.
- · Restart the phone.

5.3. Charging Issues

- Verify that the charging cable and adapter are working correctly.
- Ensure the USB-C port or charging cradle contacts are clean and free of debris.
- Try charging with the alternative method (cradle or USB-C cable).

5.4. SOS Button Not Working

- Confirm that emergency contacts have been set up in the phone's settings.
- Ensure the button is pressed and held for the required 5 seconds.

For further assistance, please refer to the Warranty & Support section.

6. Specifications

Feature	Detail
Model	Aspera F50
Display Size	2.4 Inches (internal), External indicators for Call, Message, Charge
Display Type	LCD
Resolution	320 x 240
RAM	48MB
ROM (Internal Storage)	128MB

Feature	Detail
Expandable Memory	Micro SD card up to 32GB
Battery Capacity	1000mAh Lithium-ion
Cellular Technology	4G, 3G (VoLTE supported)
Network Frequencies	4G Band 1/3/5/7/8/28a+b; 3G WCDMA 850/900/2100MHz; 2G 850/900/1800/1900Mhz
Camera	Rear 0.3MP Fixed Focus
Connectivity	Bluetooth 4.2, USB-C port, 3.5mm headphone jack
SIM Type	Single Nano SIM
Dimensions	104 x 56 x 17.1mm
Weight	106g
Special Features	Integrated SOS button, Charging Cradle, Torch function, Hearing Aid Compatible

7. WARRANTY & SUPPORT

7.1. Product Warranty

The Aspera F50 4G Flip Phone comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.

7.2. Customer Support

For technical support, service, or warranty inquiries, please contact Aspera customer service. Contact details can typically be found on the official Aspera website or in the product packaging.

Online Resources: Visit the official Aspera website for FAQs, software updates, and additional support information.

© 2024 Aspera. All rights reserved.

Related Documents - Aspera F50



Aspera F40 User Manual: Guide to Your Mobile Phone

Comprehensive user manual for the Aspera F40 flip phone, covering setup, features, operations, settings, and troubleshooting. Get the most out of your Aspera F40 with this detailed guide.



ASPERA F42 User Manual - Comprehensive Guide

Explore the features and functionalities of the ASPERA F42 with this comprehensive user manual. Learn about setup, basic operations, calling, messaging, applications, settings, and troubleshooting for your Aspera mobile device.



Aspera F48 User Manual: Guide to Features and Operation

Comprehensive user manual for the Aspera F48 mobile phone, covering setup, features, safety guidelines, and troubleshooting. Learn how to use your Aspera F48 effectively.



Aspera AS8 User Manual: Setup, Features, and Operation

Comprehensive user manual for the Aspera AS8 smartphone, covering setup, basic functionality, application usage, and technical specifications. Learn how to get the most out of your Aspera AS8.



Aspera AS9 User Manual: Setup, Features, and Safety Guide

Comprehensive user manual for the Aspera AS9 smartphone, covering setup, basic functionality, application usage, connectivity, and safety information. Learn how to get the most out of your Aspera AS9 device.



Aspera F40 User Manual: Guide to Your Mobile Phone

Comprehensive user manual for the Aspera F40 flip phone, covering setup, features, operations, settings, and troubleshooting. Get the most out of your Aspera F40 with this detailed guide.

Documents - Aspera - Aspera F50



[pdf] User Manual Quick Start Guide

Content User F50 Aspera Mobileasperamobile ⺠2024 02 Asp user manual asperamobile |||

F50 Aspera F50 User Manual -1- 1 Aspera F50 handset

lang:en score:36 filesize: 15.26 M page_count: 28 document date: 2023-12-11