

COVERT SCOUTING CAMERAS 5274-P

COVERT SCOUTING CAMERAS 32GB SD Card User Manual

Model: 5274-P

1. INTRODUCTION

Thank you for choosing the COVERT SCOUTING CAMERAS 32GB SD Card. This high-quality memory card is designed to provide reliable storage for your game and trail cameras, ensuring you capture every important moment. This manual will guide you through the proper use and care of your SD card.

Product Overview

- Product Type:** Sporting Goods accessory (Memory Card)
- Capacity:** 32GB
- Compatibility:** Designed for use with COVERT SCOUTING CAMERAS and other compatible game/trail cameras.
- Connectivity:** Wi-Fi (via compatible camera systems)
- Video Capture Format:** AVI



Image 1.1: Placeholder image for the COVERT SCOUTING CAMERAS 32GB SD Card. This image indicates that a specific product photo is not available.

2. SETUP

Proper setup ensures optimal performance and data integrity for your SD card.

Inserting the SD Card

1. Ensure your game or trail camera is powered off before inserting or removing the SD card.
2. Locate the SD card slot on your camera. Refer to your camera's user manual for the exact location.
3. Insert the COVERT SCOUTING CAMERAS 32GB SD Card into the slot with the gold contacts facing the correct direction (usually down or towards the back of the camera). Push gently until it clicks into place.
4. Close the camera's SD card slot cover securely to protect the card from elements.

Initial Formatting (Recommended)

It is highly recommended to format the SD card within your camera before its first use and periodically

thereafter. This ensures compatibility and prepares the card for optimal performance with your specific camera model.

1. Power on your camera.
2. Navigate to the camera's menu settings.
3. Locate the 'Format SD Card' or 'Format Memory' option.
4. Confirm the formatting process. **Warning: Formatting will erase all data on the card. Ensure you have backed up any important files before proceeding.**

3. OPERATING

Once the SD card is inserted and formatted, it will function as the primary storage for your game camera.

Capturing Photos and Videos

- The SD card automatically stores all photos and videos captured by your camera.
- The 32GB capacity allows for a significant number of images and video clips, depending on your camera's resolution settings.
- Video files will be saved in AVI format.

Accessing Stored Data

There are several ways to access the data stored on your SD card:

- **Directly from Camera:** Many cameras allow you to review captured images and videos on their built-in screen.
- **Using a Card Reader:** Remove the SD card from the camera and insert it into a compatible SD card reader connected to a computer. The card will appear as a removable drive, allowing you to copy, move, or delete files.
- **Wi-Fi Connectivity:** If your camera supports Wi-Fi connectivity (as indicated by the SD card's specifications), you may be able to access files wirelessly via a dedicated mobile application. Refer to your camera's manual for Wi-Fi setup and usage.

4. MAINTENANCE

Proper care and maintenance will extend the life of your SD card and protect your valuable data.

General Care

- **Physical Protection:** Avoid bending, dropping, or applying excessive force to the SD card. Store it in a protective case when not in use.
- **Environmental Conditions:** Keep the card away from extreme temperatures, direct sunlight, high humidity, and strong magnetic fields.
- **Cleanliness:** Do not touch the gold contacts. If necessary, gently clean the contacts with a soft, lint-free cloth.

Data Management

- **Regular Backups:** Periodically transfer important photos and videos from the SD card to a computer or external storage device.
- **Formatting:** Re-format the SD card in your camera every few months or after significant data transfer to maintain optimal performance and prevent fragmentation.

- **Safe Removal:** Always use the 'Safely Remove Hardware' option on your computer before physically disconnecting the SD card from a card reader to prevent data corruption.

5. TROUBLESHOOTING

If you encounter issues with your COVERT SCOUTING CAMERAS 32GB SD Card, try the following solutions:

Problem	Possible Cause	Solution
Card not recognized by camera/computer	Improper insertion, dirty contacts, card lock switch, incompatibility, damaged card.	<ul style="list-style-type: none"> • Ensure card is fully inserted. • Clean gold contacts gently. • Check if the write-protect switch on the side of the card is in the 'unlocked' position. • Try the card in another compatible device. • If possible, try another SD card in your camera/reader to rule out device issues.
Cannot save/delete files	Card is full, write-protect switch engaged, card error.	<ul style="list-style-type: none"> • Delete unnecessary files or transfer them to another device. • Check the write-protect switch. • Format the card (Warning: This will erase all data.)
Data corruption or errors	Improper removal, power loss during writing, card degradation.	<ul style="list-style-type: none"> • Always safely remove the card from computers. • Format the card in the camera. • If issues persist, the card may be faulty and require replacement.

6. SPECIFICATIONS

Detailed specifications for the COVERT SCOUTING CAMERAS 32GB SD Card (Model 5274-P).

- **Included Components:** Covert 32GB SD Card
- **Wireless Communication Technology:** Wi-Fi (via compatible camera)
- **Material:** Plastic
- **Video Capture Format:** AVI
- **Unit Count:** 1.0 Count
- **Brand Name:** COVERT SCOUTING CAMERAS
- **Manufacturer:** Covert Scouting Cameras
- **Part Number:** 5274-P

- **Model Year:** 2020
- **Model Name:** 5274
- **Connectivity Protocol:** Wi-Fi
- **Mounting Type:** Not applicable (internal component for cameras, though cameras may be wall-mounted)
- **Number of Items:** 1
- **Item Package Dimensions:** 0.9 L X 9.4 W X 13.4 H (Cm)
- **Item Package Weight:** 0.018 kgs
- **Country Of Origin:** United States

7. WARRANTY AND SUPPORT

For warranty information and technical support regarding your COVERT SCOUTING CAMERAS 32GB SD Card, please refer to the official COVERT SCOUTING CAMERAS website or contact their customer service directly. Warranty terms and conditions may vary and are typically provided with the original product purchase.

Manufacturer: Covert Scouting Cameras

For the most up-to-date support resources, FAQs, and contact details, please visit the manufacturer's official support page.