

[Manuals.plus](#) /

› [DICKIE TOYS](#) /

› Dickie Toys Monster Squad Toy Car Instruction Manual

DICKIE TOYS 203752021

Dickie Toys Monster Squad Toy Car Instruction Manual

Model: 203752021

1. INTRODUCTION AND PRODUCT OVERVIEW

This manual provides essential information for the safe and proper use of your Dickie Toys Monster Squad toy car. The Monster Squad toy car is a freewheel vehicle designed for children aged 36 months and older, featuring moving parts, sound, and light effects for interactive play.

Each purchase includes one Monster Squad toy car, selected randomly from an assortment of designs (blue, green, or red themed vehicles). The specific design received may vary.



Image 1.1: Assortment of Dickie Toys Monster Squad cars. Each car features unique monster designs and vibrant colors.

2. SAFETY INFORMATION

WARNING: Not suitable for children under 36 months (3 years) due to small parts which may present a choking hazard.

- Always supervise children during play.
- Do not modify the toy in any way.
- Keep the toy away from heat sources and open flames.
- Ensure all battery compartment screws are securely fastened to prevent access to batteries by young children.

3. WHAT'S IN THE BOX

Upon opening the product packaging, you should find the following items:

- 1 x Dickie Toys Monster Squad Toy Car (random color/design)
- 1 x Product Manual
- 2 x AAA Alkaline Batteries (pre-installed)



Image 3.1: Example of Dickie Toys Monster Squad individual product packaging.

4. SETUP

4.1 Battery Installation and Replacement

Your Monster Squad toy car comes with 2 AAA alkaline batteries pre-installed. If replacement is needed, follow these steps:

1. Locate the battery compartment on the underside of the toy car.
2. Using a small Phillips head screwdriver, carefully loosen the screw(s) on the battery compartment cover.
3. Remove the cover.
4. Remove the old batteries (if any) and dispose of them properly.
5. Insert 2 new AAA alkaline batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
6. Replace the battery compartment cover and tighten the screw(s) securely. Do not overtighten.

Note: Always use new batteries of the same type. Do not mix old and new batteries, or different types of batteries. Remove batteries if the toy is not used for a long period.

5. OPERATING INSTRUCTIONS

5.1 Freewheel Function

The Monster Squad toy car is equipped with a freewheel mechanism. To operate, simply place the car on a flat surface

and push it forward or backward. The wheels will spin freely, allowing for easy movement and imaginative play.

5.2 Sound and Light Effects

To activate the sound and light effects, locate the designated button on the toy car. This button is typically found on the top or side of the vehicle. Pressing the button will trigger various monster sounds and flashing lights, enhancing the play experience.

LIGHT & SOUND



Image 5.1: Monster Squad cars demonstrating active light and sound effects.

5.3 Moving Parts

Certain Monster Squad models feature interactive moving parts, such as opening jaws or other articulated features. These parts may move when the vehicle is pushed or when the sound and light effects are activated, adding to the dynamic play.

MOVING PARTS



Image 5.2: Illustration of moving parts on Monster Squad cars.

6. MAINTENANCE

6.1 Cleaning

To clean the toy car, gently wipe its surface with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Do not immerse the toy in water, as this can damage the electronic components.

6.2 Storage

Store the toy car in a dry, cool place away from direct sunlight and extreme temperatures. Prolonged exposure to sunlight can cause colors to fade.

7. TROUBLESHOOTING

- **No Sound or Light Effects:**
 - a. Check if the batteries are correctly installed with the proper polarity.

- b. Replace the batteries with new AAA alkaline batteries.
- c. Ensure the battery compartment cover is securely closed.

- **Car Not Moving Smoothly:**
 - a. Inspect the wheels and axles for any obstructions (e.g., hair, lint).
 - b. Ensure the play surface is clean and smooth.

8. SPECIFICATIONS

Feature	Detail
Brand	DICKIE TOYS
Model Number	203752021
Item Type	Toy car
Age Range	36 months to 1188 months (3 to 99 years)
Power Source	Battery Powered
Battery Type	2 x AAA Alkaline (included)
Material	Plastic
Dimensions (L x W x H)	7.48 x 3.35 x 4.92 inches (19 cm x 8.5 cm x 12.5 cm)
Item Weight	0.21 Kilograms
Key Features	Freewheel, Moving Parts, Sound and Light Effects
Color	Multicolored (random assortment)

9. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or customer support, please refer to the retailer from whom the product was purchased. You may also visit the official DICKIE TOYS website for additional support and product information.

[Visit the Official DICKIE TOYS Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question