

- Manuals.plus /
- › ELEMARA /
 - › ELEMARA 10-in-1 Inflatable Water Slide Bounce House Instruction Manual (Model WJB001LAN0X)

ELEMARA WJB001LAN0X

ELEMARA 10-in-1 Inflatable Water Slide Bounce House Instruction Manual

Model: WJB001LAN0X | Brand: ELEMARA

1. PRODUCT OVERVIEW

The ELEMARA 10-in-1 Inflatable Water Slide Bounce House offers a versatile play experience for children aged 3-12 years. This multi-functional unit combines a large trampoline, dual slides, climbing walls, obstacle courses, double tunnels, a basketball hoop, a golf area, ring-toss game, and two water guns, all integrated with a splash pool. Constructed from durable 840D and 420D Oxford cloth with reinforced stitching, it is designed for both indoor and outdoor use, providing hours of physical activity and entertainment.



Image 1: Overview of the ELEMARA 10-in-1 Inflatable Water Slide Bounce House, showcasing its vibrant yellow, red, and blue design with multiple play features.

2. SETUP INSTRUCTIONS

Setting up your ELEMARA Inflatable Water Slide Bounce House is quick and straightforward. Ensure you have a clear, flat area free from obstructions, trees, power lines, or other objects overhead or around. Keep unit clear of any potential fire hazards and heating devices. Do not use in any inclement weather or anytime winds exceed 10 miles per hour.

1. **Unpack:** Carefully unbox the inflatable bouncer and included 750W UL Certified blower.
2. **Position:** Lay the inflatable bouncer flat on your chosen setup area.
3. **Connect Blower:** Attach the blower to the designated air intake tube on the bounce house. Ensure the connection is secure to prevent air leakage.
4. **Secure Blower:** Use the 4 provided blower stakes to firmly anchor the blower to the ground. Place the electrical blower in a dry place, away from water sources.
5. **Inflate:** Plug in the 750W blower and turn it on. The bounce house will inflate fully within approximately one minute.
6. **Anchor Bounce House:** Once fully inflated, use the 8 ground stakes to secure the bounce house to the ground for stability. A hammer for stakes is included for assistance.

7. **Water Connection (for water play):** Connect a garden hose to the water spray system if using the water slide and splash pool features.

Your browser does not support the video tag.

Video 1: A seller-provided video demonstrating the setup process of an inflatable bounce house with water slide features, including connecting the blower and water hose.

Your browser does not support the video tag.

Video 2: A seller-provided video showing the inflation of an inflatable bounce house obstacle course, highlighting the quick setup time.

3. OPERATING INSTRUCTIONS

Once fully inflated and secured, the ELEMARA 10-in-1 Inflatable Water Slide Bounce House is ready for use. Always ensure the blower remains continuously on during operation to maintain inflation. A trained supervisor must be present at all times.

- **Bouncing Area:** The large trampoline area is suitable for up to 5 children simultaneously, with a maximum individual weight limit of 100 lbs and a total weight limit of 400 lbs.
- **Dual Slides:** Utilize the dual slides for exciting descents into the splash pool area. Ensure children slide feet-first.
- **Climbing Walls & Tunnels:** Navigate the climbing walls and double tunnels for an adventurous experience.
- **Golf Area:** Engage in the interesting golf area with the included bobble balls and golf clubs.
- **Basketball Hoop:** Practice shooting hoops with the included PVC basketball.
- **Water Play:** For water activities, ensure the splash pool is adequately filled and the water guns are connected to a water source.

4. MAINTENANCE

Proper maintenance will extend the lifespan of your inflatable bounce house. The unit is made of Premium 840D and 420D Oxford cloth, known for its wear resistance.

- **Cleaning:** Regularly wipe down surfaces with a damp cloth and mild soap. Ensure the unit is completely dry before storage to prevent mold and mildew.
- **Repairs:** A repair kit including 6 repair patches and 2 PVC repair patches is provided for minor punctures or tears. Follow the instructions in the included Use Manual for proper patch application.
- **Storage:** After use, deflate the unit completely. Fold it neatly and place it in the provided carrying bag. Store in a dry place, away from direct sunlight and extreme temperatures.
- **Normal Phenomenon:** It is normal for a small amount of air bubbles and water to be present at the seams of the product when used with water. This is due to the Oxford material's design to balance pressure and prevent bursting.

5. TROUBLESHOOTING

- **Unit Not Inflating Properly:** Ensure the 750W blower is continuously running and securely attached to the air intake tube. Check for any large openings or tears in the fabric.
- **Blower Issues:** Verify the blower is plugged into a functional power outlet. Ensure the blower is placed in a dry location and kept away from water sources during operation.
- **Small Holes/Tears:** Use the provided repair patches to mend any small holes or tears. For larger damage, professional repair may be required.

6. SPECIFICATIONS

Brand	ELEMARA
Model Number	WJB001LAN0X
Overall Dimensions (L x W x H)	177" x 133" x 32" (approximately 14.75 ft x 11.08 ft x 2.67 ft)
Material Type	840D + 420D Oxford Cloth
Blower Wattage	750W (UL Certified)
Recommended Age	3-12 Years Old
Max Kids on Inflatable Part	5
Max Individual Weight Limit	100 lbs
Max Weight Limit of Inflatable Part	400 lbs
Item Weight	66 lbs
Included Components	Inflatable Bouncer, 750W Blower, 8 Ground Stakes, 4 Blower Stakes, Hammer for Stakes, 4 Bobble Balls, 2 Golf Clubs, 1 PVC Basketball, 6 Repair Patches, Replacement Kit, Carrying Bag, Use Manual

7. SAFETY WARNINGS

As with all amusement devices, there are inherent risks with use. Use with caution and at your own risk. A trained supervisor must be present at all times. Read this label completely prior to every use and carefully review all the warning icons noted below:

- No shoes, sharp objects, jewelry, food or drink, or glasses allowed inside the unit.
- Keep hands away from netting.
- No unevenly matched players or rough play.
- No tumbling or flipping.
- Do not exceed maximum weight limits (100 lbs individual, 400 lbs total) or player count (5 children).
- Ensure there are no trees, power-lines or other objects overhead or around the unit.
- Do not use in any inclement weather or anytime winds exceed 10 miles per hour.
- Before using the product, you must wear the life vest (if using water features).
- Do not enter or use without a trained adult operator/supervisor on duty. Supervisor should never leave unit unattended at any time, even if they do not believe children are present.
- During operation, all users must be instructed to exit immediately if the unit begins to deflate.
- This unit is NOT suitable for rental or commercial use.

8. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the 'Use Manual' included in your product package or contact ELEMARA customer service directly. Ensure you retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CYSJHKMJ>

More documents and user manuals: <https://manuals.plus/>