

Whirlpool MWP 295 B

Whirlpool MWP 295 B Freestanding Microwave Oven User Manual

Model: MWP 295 B

INTRODUCTION

Thank you for choosing a Whirlpool appliance. To ensure you get the best results from your microwave oven, please read these instructions carefully before use and retain them for future reference. This manual provides essential information on the safe operation, installation, and maintenance of your Whirlpool MWP 295 B microwave oven.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Do not use corrosive chemicals or vapors in this appliance.
- Regularly clean the oven and remove any food deposits.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

PRODUCT OVERVIEW

The Whirlpool MWP 295 B is a freestanding microwave oven designed for versatile cooking. Below is an image of the appliance and a description of its control panel.



Image 1: Front view of the Whirlpool MWP 295 B microwave oven. It features a black finish with a dark glass door and a silver handle. The control panel is located on the right side, displaying a digital clock and various function buttons.

Control Panel Description

The control panel features a digital display and touch-sensitive buttons for various functions. Refer to the image above for button locations.

- **Digital Display:** Shows time, cooking settings, and program status. (e.g., "12:30" as seen in the image)
- **Main Functions:**
 - **Microwave:** For standard microwave cooking.
 - **Grill:** For grilling and browning food.
 - **Forced Air:** For convection cooking, similar to a traditional oven.
 - **Combi:** Combines microwave and grill/forced air for faster cooking and browning.
 - **Defrost:** For thawing frozen foods.
 - **Timer:** To set a cooking duration or kitchen timer. Press for 3 seconds to activate.
- **Special Functions:**
 - **Keep Warm:** Maintains food at a serving temperature.
 - **Soft:** Gentle heating for delicate foods.
 - **Dough Rising:** Provides an optimal environment for dough to rise.
 - **Melt:** For melting butter, chocolate, etc.
- **Auto Functions:**
 - **Auto Cook:** Pre-programmed settings for various dishes. Press for 3 seconds to activate.
 - **Auto Clean:** Assists in cleaning the oven cavity. Press for 3 seconds to activate.
- **+/- Buttons:** To adjust time, weight, or settings.
- **Eco Standby:** For energy-saving mode.
- **STOP Button:** To cancel a program or stop cooking.

- **JET START Button:** To start cooking immediately at full power for a short duration.

SETUP

Unpacking and Placement

1. Remove all packaging materials from inside and outside the microwave oven.
2. Check the oven for any damage, such as a misaligned door or dents. Do not operate the oven if it is damaged.
3. Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it.
4. Ensure there is adequate ventilation space: at least 20 cm above the oven, 10 cm at the rear, and 5 cm on each side. Do not block any ventilation openings.
5. Do not place the oven near heat sources or in a damp environment.

Electrical Connection

- Ensure the voltage indicated on the rating label matches your household power supply.
- Plug the oven into a properly installed and grounded wall outlet. Do not use extension cords or adapters.

Initial Use

- Before first use, clean the interior of the oven with a damp cloth.
- Set the clock: When the oven is plugged in, the display will show "0:00" or "12:00". Use the +/- buttons to set the current time, then confirm with the appropriate button (refer to the full manual for specific clock setting instructions if needed).

OPERATING INSTRUCTIONS

Basic Microwave Cooking

1. Place food in a microwave-safe container.
2. Close the oven door securely.
3. Press the **Microwave** button.
4. Use the +/- buttons to select the desired cooking time and power level (if adjustable).
5. Press **JET START** or the appropriate start button to begin cooking.

Grill Function

1. Place food on the grill rack (if provided) in a heat-resistant dish.
2. Press the **Grill** button.
3. Set the desired grilling time using the +/- buttons.
4. Press the start button.

Defrost Function

The Defrost function allows you to thaw food based on weight or time.

1. Place the frozen food in the oven.
2. Press the **Defrost** button.
3. Use the +/- buttons to select the food type or weight. The oven will automatically calculate the defrosting time.
4. Press the start button.

Using Auto Cook Programs

The oven includes several pre-programmed settings for common dishes.

1. Place the food in the oven.
2. Press and hold the **Auto Cook** button for 3 seconds.
3. Use the +/- buttons to scroll through the available auto cook programs.
4. Select the desired program and press the start button.

Jet Start Function

For quick reheating, press the **JET START** button. Each press typically adds 30 seconds of cooking at full power. This is ideal for quickly heating beverages or small portions of food.

MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your microwave oven.

General Cleaning

- Always unplug the oven before cleaning.
- Clean the interior and exterior surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads.
- The glass turntable and roller ring can be washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- For stubborn food residues, place a bowl of water with lemon slices inside the oven and heat on high for 5-10 minutes. The steam will loosen the grime, making it easier to wipe away.

Auto Clean Function

The oven features an **Auto Clean** function to assist with interior cleaning.

1. Place a microwave-safe bowl of water (approx. 200ml) inside the oven.
2. Press and hold the **Auto Clean** button for 3 seconds.
3. The oven will run a cycle to generate steam. Once complete, carefully remove the bowl and wipe the interior with a soft cloth.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not start.	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse/circuit breaker.
Food is not heating.	Incorrect cooking time/power level set; Door not closed properly.	Adjust cooking time/power; Ensure door is fully closed.
Sparking inside the oven.	Metal in the oven; Food residue on oven walls.	Remove any metal objects; Clean the oven interior thoroughly.
Display shows an error code.	Internal malfunction.	Unplug the oven for a few minutes, then plug it back in. If the error persists, contact customer service.

If the problem persists after attempting these solutions, please contact Whirlpool customer support.

SPECIFICATIONS

- **Brand:** Whirlpool
- **Model:** MWP 295 B
- **Type:** Freestanding Microwave Oven
- **Power Consumption:** 900 Watt
- **Control Type:** Touch/Button
- **Special Features:** Defrost, Grill, Forced Air, Combi, Keep Warm, Soft, Dough Rising, Melt, Auto Cook, Auto Clean, Jet Start, 6TH SENSE-menu, Quick Start, Large Cooking Space, Quick Defrost, Turbo-Hot Air, Reheating, Automatic Cooking.
- **Material:** Painted Metal
- **Color:** Black (as per product image)
- **First Available Date:** June 1, 2023


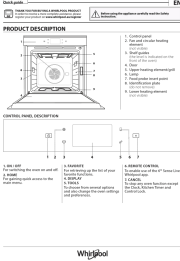 
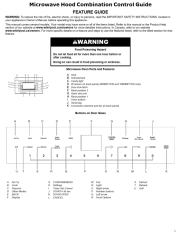 
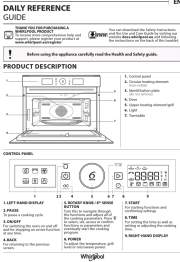 

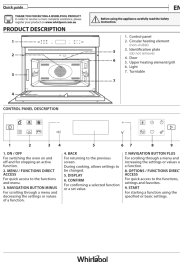 
WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Whirlpool website. For technical assistance, spare parts, or service requests, please contact Whirlpool customer support in your region.

When contacting support, please have your model number (MWP 295 B) and serial number ready.

You can find more information and contact details on the official [Whirlpool website](#).

Related Documents - MWP 295 B

	<p>Whirlpool CHEF PLUS MCP 341 / MCP 343 Microwave Oven Instruction Manual</p> <p>Comprehensive instruction manual for the Whirlpool CHEF PLUS MCP 341 and MCP 343 microwave ovens, covering installation, safety, operation, functions, maintenance, and technical specifications.</p>
	<p>Whirlpool Oven User Manual and Cooking Guide</p> <p>Comprehensive user manual for Whirlpool ovens, detailing product description, control panel functions, accessories, various cooking modes (Manual, 6th Sense, Special Functions), touch display operation, daily use instructions, detailed cooking tables for various food types, cleaning and maintenance procedures, WiFi connectivity FAQs, and troubleshooting guidance.</p>
	<p>Whirlpool Microwave Hood Combination Control Guide</p> <p>A comprehensive guide to operating your Whirlpool Microwave Hood Combination, detailing features, functions, and cooking modes. Learn how to use functions like Air Fry, Cook, Popcorn, Grill, Reheat, Defrost, and more, along with settings for temperature, time, and language.</p>
	<p>Whirlpool Oven Daily Reference Guide</p> <p>A comprehensive guide to using and maintaining your Whirlpool oven, covering product description, accessories, functions, daily use, cleaning, troubleshooting, and first-time setup.</p>
	<p>Whirlpool MWP201SB Microwave Oven Instructions for Use</p> <p>Comprehensive instructions for the Whirlpool MWP201SB microwave oven, covering installation, safety precautions, operation, cleaning, and troubleshooting.</p>
	<p>Whirlpool W Collection Microwave Oven: Quick Start Guide and User Manual</p> <p>Explore the features and functions of your Whirlpool W Collection microwave oven. This guide covers product description, control panel, accessories, cooking functions, cleaning, and troubleshooting.</p>