

eKids B52

eKids Barbie Bluetooth Headphones User Manual

Model: B52

1. INTRODUCTION

Thank you for choosing the eKids Barbie Bluetooth Headphones. These wireless headphones are designed to provide a high-quality audio experience with features tailored for comfort, portability, and safe listening. Enjoy your favorite music, movies, and calls with ease.



Image: eKids Barbie Bluetooth Headphones in a vibrant pink color.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Wireless Bluetooth Connectivity:** Seamlessly connect to your devices.

- **Volume Reduced:** Engineered for safe listening levels, ideal for children.
- **Built-in Microphone:** For hands-free calls and online communication.
- **Adjustable Headband & Padded Ear Cushions:** Ensures a comfortable and custom fit.
- **Foldable Design:** Compact for easy storage and portability.
- **Long Battery Life:** Up to 45 hours of continuous playtime on a single charge.
- **Wired Option:** Includes an Aux cord for wired connection when Bluetooth is not available or battery is low.



Image: Visual representation of the headphones' adjustable, foldable, and durable features, along with connectivity options.



Image: Close-up of the headphone controls, ports, and overall dimensions.

Barbie™



Wirelessly streams audio from any compatible device

(device sold separately)



PC



Smart Watch



Game Device



Mobile Phone



Tablet



Notebook

iHome

Image: The headphones shown in their folded configuration, emphasizing portability.



Image: Compatibility chart showing various devices that can connect to the headphones.



Image: A user enjoying music with the eKids Barbie Bluetooth Headphones.

2.2 Official Product Video

Your browser does not support the video tag.

Video: Official product video demonstrating the features and usage of the eKids Barbie Wireless Headphones.

3. SETUP

3.1 Charging the Headphones

Before first use, fully charge the headphones. Connect the included USB-C charging cable to the charging port on the headphones and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The LED indicator will show charging status.

- **Charging Time:** Approximately 2-3 hours for a full charge.
- **Battery Life:** Up to 45 hours of playtime on a full charge.

3.2 Bluetooth Pairing

1. Ensure the headphones are turned off.
2. Press and hold the Power/Pairing button until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "eKids Barbie Headphones" (or similar name) from the list.
5. Once connected, the LED indicator will turn solid blue.

3.3 Wired Connection (Aux Mode)

The headphones can also be used with the included 3.5mm Aux cable for a wired connection to any device with a standard headphone jack. This mode does not require battery power.

1. Plug one end of the 3.5mm Aux cable into the AUX jack on the headphones.
2. Plug the other end into the headphone jack of your audio device.
3. The headphones will automatically switch to wired mode.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **Power On:** Press and hold the Power button for 3 seconds. The LED indicator will light up.
- **Power Off:** Press and hold the Power button for 3 seconds. The LED indicator will turn off.

4.2 Music Playback

- **Play/Pause:** Press the Play/Pause button once.
- **Volume Up:** Press the Volume Up (+) button.
- **Volume Down:** Press the Volume Down (-) button.
- **Next Track:** Press and hold the Volume Up (+) button.
- **Previous Track:** Press and hold the Volume Down (-) button.

4.3 Call Functions

- **Answer/End Call:** Press the Play/Pause button once during an incoming call or to end an active call.
- **Reject Call:** Press and hold the Play/Pause button for 2 seconds during an incoming call.

5. MAINTENANCE

- Clean the headphones with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the headphones to extreme temperatures, humidity, or direct sunlight.
- Store the headphones in a cool, dry place when not in use, preferably in their folded position to protect them.
- Do not attempt to disassemble or modify the headphones, as this will void the warranty.

6. TROUBLESHOOTING

Problem	Solution
Headphones do not power on.	Ensure the headphones are fully charged. Connect to a power source and try again.
Cannot pair via Bluetooth.	Ensure headphones are in pairing mode (flashing blue/red LED). Turn off and on Bluetooth on your device. Move closer to the headphones. Forget the device on your phone and re-pair.
No sound in Bluetooth mode.	Check volume levels on both headphones and your device. Ensure headphones are properly paired and connected. Try playing different audio.

Problem	Solution
No sound in wired (Aux) mode.	Ensure the Aux cable is fully inserted into both the headphones and the audio device. Check volume levels on your device. Try a different Aux cable if available.
Microphone not working.	Ensure the headphones are connected via Bluetooth. Check microphone settings on your device to ensure the headphones are selected as the input device.

7. SPECIFICATIONS





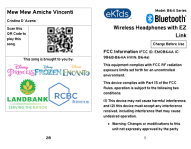

Feature	Detail
Model Name	Mi-B52BE
Connectivity Technology	Wireless (Bluetooth), Wired (3.5mm Aux)
Wireless Communication Technology	Bluetooth
Age Range (Description)	6 years and up
Compatible Devices	Various Devices (PC, Smart Watch, Game Device, Mobile Phone, Tablet, Notebook)
Cable Feature	Detachable (Aux)
Battery Life	Up to 45 Hours
Audio Driver Type	Dynamic Driver
UPC	092298958903
Manufacturer	KIDdesigns
Item Weight	10.9 ounces
Item Model Number	B52
Color	Pink
Form Factor	Bi-fold (Foldable)
Impedance	32 Ohm
Noise Control	None

8. WARRANTY AND SUPPORT

eKids products are designed for durability and performance. For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official eKids website. Keep your purchase receipt as proof of purchase.

Manufacturer: KIDdesigns

Related Documents - B52

	<p>eKids B50 Bluetooth Headphones User Manual and Guide</p> <p>Comprehensive user manual for the eKids B50 Bluetooth Headphones, covering setup, operation, controls, charging, and warranty information. Learn how to pair, use, and maintain your wireless headphones.</p>
	<p>eKids B64 Series Disney Themed Wireless Headphones with EZ Link - User Manual</p> <p>User manual for the eKids B64 Series wireless Bluetooth headphones featuring EZ Link technology and Disney themes (Princess, Frozen, Encanto). Includes setup, pairing, app usage, controls, safety, and warranty information.</p>
	<p>eKids DG-556 TR-556 Bluetooth MP3 Karaoke with Microphone User Manual</p> <p>Comprehensive user manual for the eKids DG-556 TR-556 Bluetooth MP3 Karaoke machine. Includes setup, operation for USB, MP3, and Bluetooth modes, voice control, troubleshooting, FCC/IC compliance, and warranty information.</p>
	<p>eKids DE-072 MP3 Microphone User Manual and Instructions</p> <p>User manual for the eKids DE-072 MP3 Microphone by Disney, detailing battery installation, maintenance, FCC compliance, and how to use the Song and MP3 playback modes.</p>
	<p>eKids B64 Series Wireless Headphones with EZ Link User Manual</p> <p>Comprehensive user manual for the eKids B64 Series Wireless Headphones with EZ Link. Learn about setup, Bluetooth pairing, EZ Link app features, controls, charging, battery information, warranty, and safety guidelines. Supports Disney Princess, Frozen, and Encanto themes.</p>
	<p>eKids B50 Bluetooth Headphones User Manual</p> <p>User manual for eKids B50 Bluetooth Headphones, providing instructions on setup, operation, controls, charging, pairing, and warranty information.</p>