

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Lavor](#) /

› LAVOR RUN PLUS 150 GL Pressure Washer User Manual

Lavor RUN PLUS 150 GL (36054-00113)

LAVOR RUN PLUS 150 GL Pressure Washer User Manual

Model: RUN PLUS 150 GL (36054-00113)

INTRODUCTION

The LAVOR RUN PLUS 150 GL is a powerful and compact high-pressure washer designed for various outdoor cleaning tasks. It is suitable for efficiently cleaning garden fences, driveways, patios, wooden and stone surfaces, house walls, facades, courtyards, and vehicles such as cars and bicycles. Its comprehensive accessory kit provides versatility for numerous applications around the home exterior.



Image: The LAVOR RUN PLUS 150 GL pressure washer, shown from the front with its integrated handle and wheels.

SAFETY INFORMATION

Always observe the following safety precautions when operating the pressure washer:

- **Read the entire manual:** Familiarize yourself with the controls and proper use before operation.
- **Wear protective gear:** Always wear safety glasses and appropriate clothing to protect against high-pressure spray.
- **Electrical safety:** Ensure the power outlet is grounded and suitable for the unit's power requirements (1900 W). Do not operate with damaged cords or plugs.
- **Water connection:** Connect the pressure washer only to a potable water supply. Do not use with contaminated water.
- **Keep clear:** Never direct the water jet at people, animals, electrical equipment, or the appliance itself.
- **Children and pets:** Keep children and pets away from the operating area.
- **Stable surface:** Operate the unit on a stable, level surface to prevent tipping.
- **Unplug when not in use:** Always disconnect the power supply before cleaning, servicing, or when the machine is left unattended.

PACKAGE CONTENTS

Verify that all components are present in the package:

- LAVOR RUN PLUS 150 GL Pressure Washer unit
- High-pressure gun
- High-pressure hose (5 meters long) with quick-connect for the gun
- Lance with turbo rotary jet nozzle
- Lance with Variojet adjustable jet nozzle
- Foam lance with detergent tank
- Water filter
- User Manual (this document)

SETUP

Follow these steps to prepare your pressure washer for first use:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble Handle (if necessary):** Ensure the integrated handle is securely in place.
3. **Connect Water Inlet:** Attach a standard garden hose to the water inlet connection on the pressure washer. Ensure the water filter is installed.

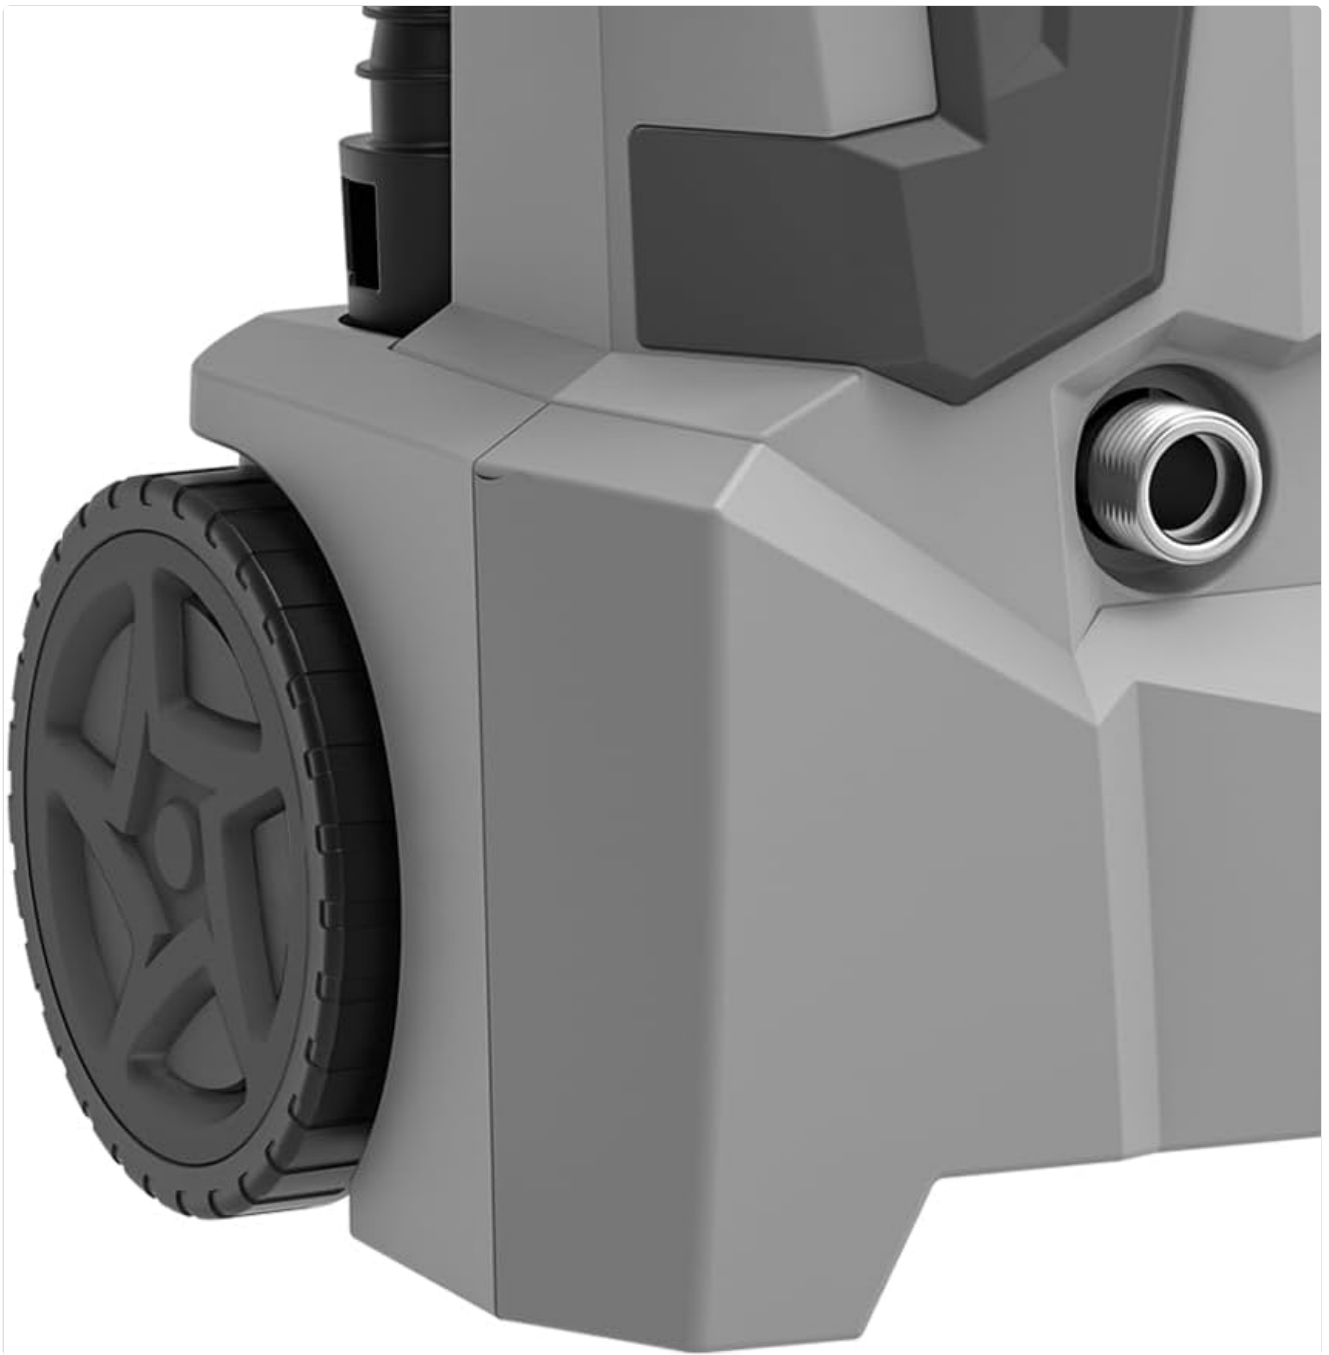


Image: Close-up of the water inlet connection and one of the transport wheels on the pressure washer.

4. **Connect High-Pressure Hose:** Connect one end of the 5-meter high-pressure hose to the high-pressure outlet on the unit and the other end to the high-pressure gun. Ensure connections are secure.
5. **Attach Lance/Nozzle:** Select the desired lance (turbo or Variojet) and attach it to the high-pressure gun. For foam application, attach the foam lance with its detergent tank.
6. **Connect Power:** Plug the power cable into a suitable, grounded electrical outlet.
7. **Water Supply:** Turn on the water supply to the pressure washer.
8. **Purge Air:** Before turning on the unit, squeeze the trigger on the gun to allow water to flow through and purge any air from the system. Continue until a steady stream of water emerges.

OPERATING INSTRUCTIONS

Operating the LAVOR RUN PLUS 150 GL is straightforward:

1. **Start the Unit:** Once the air is purged from the system, turn on the pressure washer using the main power switch. The pump will start, and pressure will build.
2. **Automatic Stop System:** The unit features an automatic stop system. The pump will automatically turn off when the trigger

on the gun is not activated, saving energy and extending pump life. It will restart when the trigger is squeezed again.

3. Adjusting Spray:

- **Variojet Nozzle:** Rotate the nozzle head to adjust the spray pattern from a concentrated jet to a wide fan spray.
- **Turbo Nozzle:** Provides a rotating jet for powerful cleaning of stubborn dirt.

4. Detergent Application (with Foam Lance):

- Fill the foam lance tank with appropriate pressure washer detergent.
- Attach the foam lance to the gun.
- Apply detergent to the surface. Allow it to soak for a few minutes (refer to detergent instructions), then rinse with a high-pressure jet.

5. Cleaning Applications:



Image: A person using the pressure washer to clean a blue car, demonstrating vehicle cleaning capability.



Image: A person using the pressure washer to clean a barbecue grill, illustrating its use for garden furniture and equipment.

The pressure washer is ideal for removing dirt from paths, patios, garden furniture, bicycles, and vehicles. Always start with a wider spray pattern or from a distance to avoid damaging delicate surfaces.

6. Shutting Down:

- Turn off the main power switch on the unit.
- Turn off the water supply.
- Squeeze the trigger on the gun to release any remaining pressure in the system.
- Disconnect the high-pressure hose and garden hose.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your pressure washer:

- **Clean Water Filter:** Regularly check and clean the water filter at the inlet to prevent debris from entering the pump.
- **Nozzle Cleaning:** If the spray pattern becomes irregular or pressure drops, clean the nozzle openings with the provided nozzle cleaning tool (if included) or a thin wire.
- **Hose and Connections:** Inspect the high-pressure hose and all connections for wear, damage, or leaks before each use. Replace damaged parts immediately.
- **Storage:**
 - Drain all water from the pump, hose, and gun before storing, especially in freezing temperatures. Run the unit for a few seconds with the water supply off and the trigger open to expel remaining water.
 - Store the pressure washer in a dry, frost-free location.
 - Utilize the compact storage compartment for accessories to keep them organized.

TROUBLESHOOTING

Here are solutions to common issues:

Problem	Possible Cause	Solution
No pressure or low pressure	Water supply off or restricted Air in the pump Clogged nozzle Water filter dirty	Ensure water supply is fully open. Purge air from the system (see Setup). Clean the nozzle. Clean the water filter.
Motor runs but no water flow	No water supply Inlet hose kinked Pump frozen (if stored in cold)	Check water connection and supply. Straighten the inlet hose. Allow unit to thaw in a warm environment.
Unit cycles on and off frequently	Air in the system Minor leak in hose or connections	Purge air from the system. Check all connections for leaks and tighten.

If problems persist, contact customer support.

SPECIFICATIONS

Key technical specifications for the LAVOR RUN PLUS 150 GL pressure washer:

- **Model Number:** 36054-00113
- **Maximum Pressure:** 150 bar
- **Maximum Flow Rate:** 420 liters per hour
- **Power Consumption:** 1900 W
- **Pump Type:** Axial pump with three steel pistons and aluminum head

- **Auto Stop System:** Integrated By-Pass valve
- **Power Source:** Electric cable
- **Hose Length:** 5 meters
- **Product Dimensions (L x W x H):** 25 x 22 x 60 cm
- **Item Weight:** 6.2 Kilograms
- **Color:** Grey
- **Manufacturer:** Lavorwash
- **Country of Origin:** China



Image: Official repairability index for the product, showing a score of 8.3 out of 10.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Lavor website. Keep your proof of purchase for warranty claims.

Spare parts availability in the EU is indicated for 10 years from the date of purchase, ensuring long-term support for your product.

© 2024 Lavor. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CYTJDWZJ>

More documents and user manuals: <https://manuals.plus/>