

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [RadioShack](#) /

› [RadioShack 1702-2 LM Cordless Phone System User Manual](#)

RadioShack 1702-2 LM

RadioShack 1702-2 LM Cordless Phone System User Manual

INTRODUCTION

Welcome to your new RadioShack 1702-2 LM Cordless Phone System. This system includes two handsets designed for clear communication in your home or office. This manual provides instructions for setting up, operating, and maintaining your phone system.

Key Features:

- Clear and easy-to-read display.
- Quick dialing and easy number editing before calls.
- Access to essential functions with a single button.
- Storage for up to 30 incoming numbers.
- Phonebook capacity for up to 50 numbers (12 characters, 20 digits).

1. SETUP

1.1 Unpacking

Carefully remove all components from the packaging. Ensure you have:

- 2 Handsets
- 2 Charging Bases
- 1 AC Power Adapter
- 1 Telephone Line Cord
- User Manual

1.2 Connecting the Base Unit

1. Connect the AC power adapter to the main charging base and plug it into a standard electrical outlet.
2. Connect the telephone line cord to the main charging base and plug the other end into your telephone

wall jack.

1.3 Charging the Handsets

Place each handset onto its respective charging base. The handsets will begin charging automatically. For optimal battery performance, allow the handsets to charge for at least 12-15 hours before initial use.

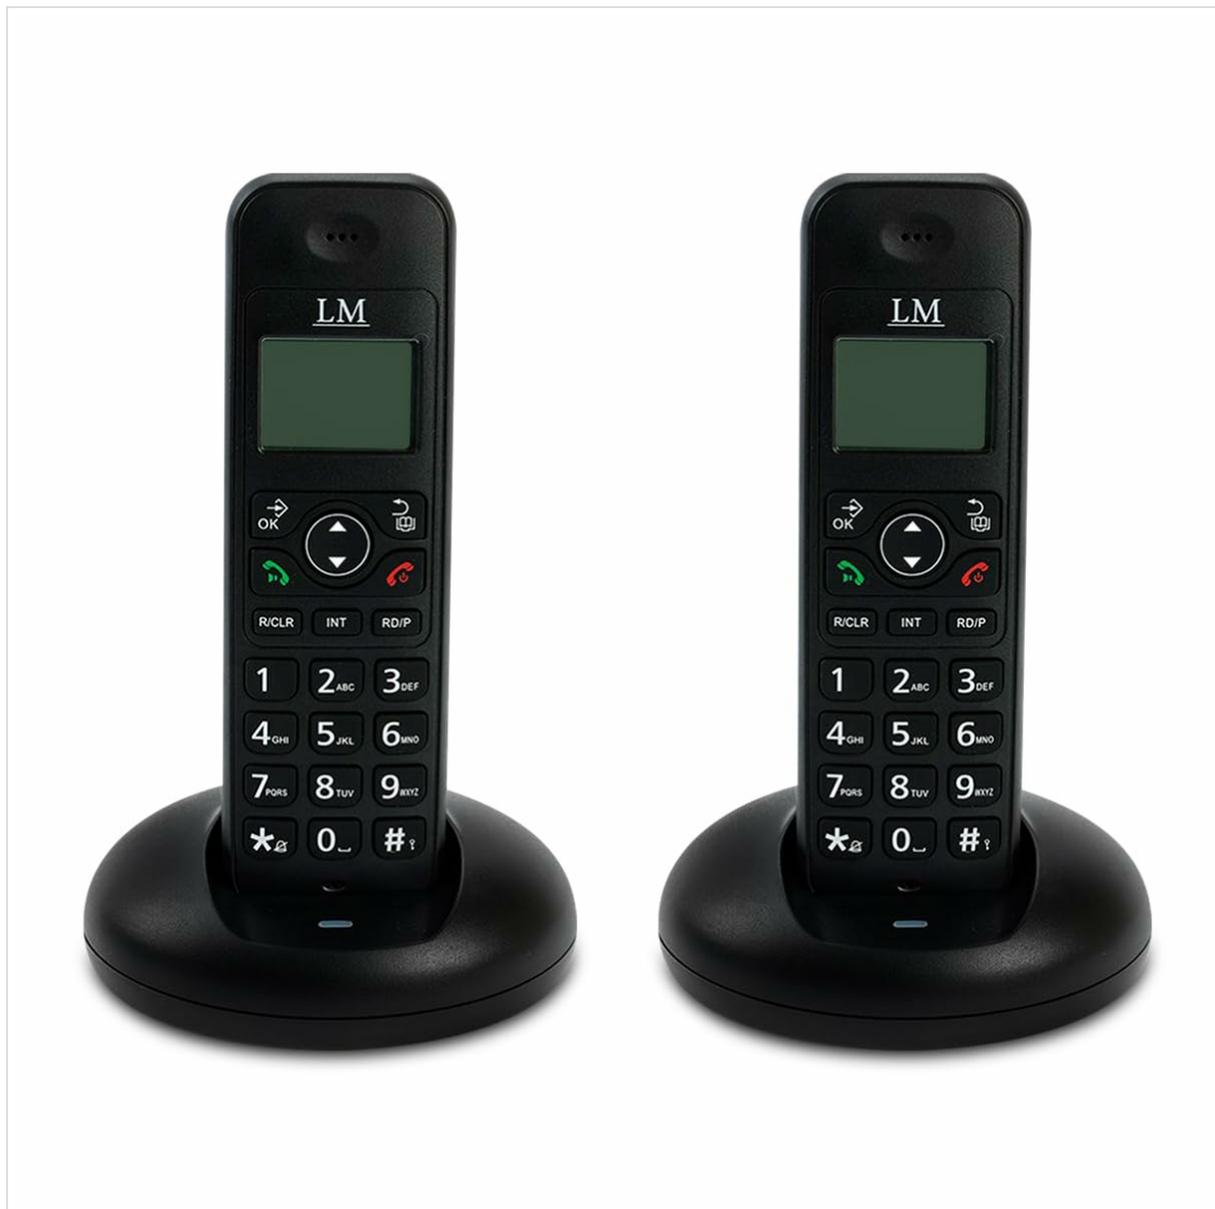


Image: Two RadioShack 1702-2 LM cordless phones on their charging bases, ready for setup.

2. OPERATING YOUR PHONE

2.1 Making a Call

1. Pick up a handset from its base or press the **TALK** button.
2. Dial the desired phone number. The number will appear on the display.
3. Press the **TALK** button again if you picked up the handset first, or wait for the call to connect.
4. To end the call, press the **END** button or place the handset back on its charging base.

2.2 Answering a Call

When the phone rings, pick up the handset or press the **TALK** button.

2.3 Phonebook

Your phone can store up to 50 contacts. Refer to the on-screen menu for adding, editing, and deleting entries.

2.4 Redial

Press the **REDIAL** button to call the last dialed number.

2.5 Intercom (Internal Calls)

To call another handset within your system, press the **INT** button and then the number of the desired handset (e.g., 1 or 2).



Image: Close-up of a single RadioShack 1702-2 LM cordless phone on its charging base, highlighting the keypad and display for operation.

3. MAINTENANCE

3.1 Cleaning

Wipe the phone and base units with a soft, damp cloth. Do not use abrasive cleaners or solvents.

3.2 Battery Care

The handsets use rechargeable batteries. If the battery indicator is low, place the handset on its charging base. Over time, rechargeable batteries may lose capacity. If you notice a significant decrease in talk time, consider replacing the batteries with compatible ones.

3.3 Storage

If storing the phone for an extended period, remove the batteries from the handsets.

4. TROUBLESHOOTING

Common Issues and Solutions:

- **No dial tone:**
 - Ensure the telephone line cord is securely connected to both the base unit and the wall jack.
 - Check if the AC power adapter is properly connected to the base unit and a working electrical outlet.
 - Verify that your telephone service is active.
- **Cannot make or receive calls:**
 - Check the battery level of the handset. Place it on the charging base if low.
 - Ensure the handset is within range of the base unit.
 - Temporarily disconnect the base unit's power adapter and telephone line cord, wait a few minutes, then reconnect them.
- **Display is blank or dim:**
 - Charge the handset battery.
 - Adjust contrast settings if available (refer to on-screen menu).
- **Poor sound quality or static:**
 - Move closer to the base unit.
 - Ensure the base unit is not near other electronic devices that may cause interference (e.g., microwaves, Wi-Fi routers).
 - Check the telephone line cord for damage.

5. SPECIFICATIONS

- **Brand:** RadioShack
- **Model:** 1702-2 LM
- **Color:** Black
- **Type:** Cordless Phone System (2 Handsets)
- **Material:** Plastic
- **Power Source:** Corded Electric
- **Phonebook Capacity:** 50 entries
- **Caller ID Memory:** 30 incoming numbers
- **Conference Call Capability:** 1-way
- **Multi-line Operation:** Single line operation

- **Package Dimensions:** 20.7 x 17.2 x 10.7 cm; 650 g



Image: Rear view of the RadioShack 1702-2 LM cordless phone and its base, illustrating the power input and telephone line port connections.

6. WARRANTY AND SUPPORT

6.1 Warranty Information

This RadioShack 1702-2 LM Cordless Phone System comes with an extended 5-year warranty. Please

retain your proof of purchase for warranty claims.

6.2 Customer Support

For technical assistance or warranty service, please contact RadioShack customer support. Refer to the product packaging or official RadioShack website for contact details.



Image: Product packaging for the LM Duo Wireless Phone, clearly indicating the '5 YEARS WARRANTY' for the system.