

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BODEGA](#) /

› [BODEGACOOLER Commercial Merchandiser Refrigerator 9 Cu.Ft \(Model SS-P360WD\) Instruction Manual](#)

BODEGA SS-P360WD

BODEGACOOLER Commercial Merchandiser Refrigerator 9 Cu.Ft (Model SS-P360WD) Instruction Manual

Model: SS-P360WD | Brand: BODEGA

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your BODEGACOOLER Commercial Merchandiser Refrigerator, Model SS-P360WD. This 9 cubic feet upright beverage display cooler is designed for commercial use, featuring a glass door, soft LED lighting, adjustable shelves, and strong castors for mobility. Please read these instructions thoroughly before installation and use, and retain them for future reference.



Figure 1: BODEGACOOLER Commercial Merchandiser Refrigerator (Model SS-P360WD) with key features and dimensions.

2. SAFETY INFORMATION

To prevent personal injury or property damage, always follow basic safety precautions when using electrical appliances. This section outlines critical safety guidelines.

- Ensure the refrigerator is placed on a stable, level surface to prevent tipping.
- Do not operate the appliance with a damaged power cord or plug.
- Keep ventilation openings clear of obstructions.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Unplug the refrigerator before cleaning or performing any maintenance.
- This appliance uses R290 refrigerant. Servicing should only be performed by authorized personnel.
- The unit is equipped with a safety lock. Keep keys out of reach of children.

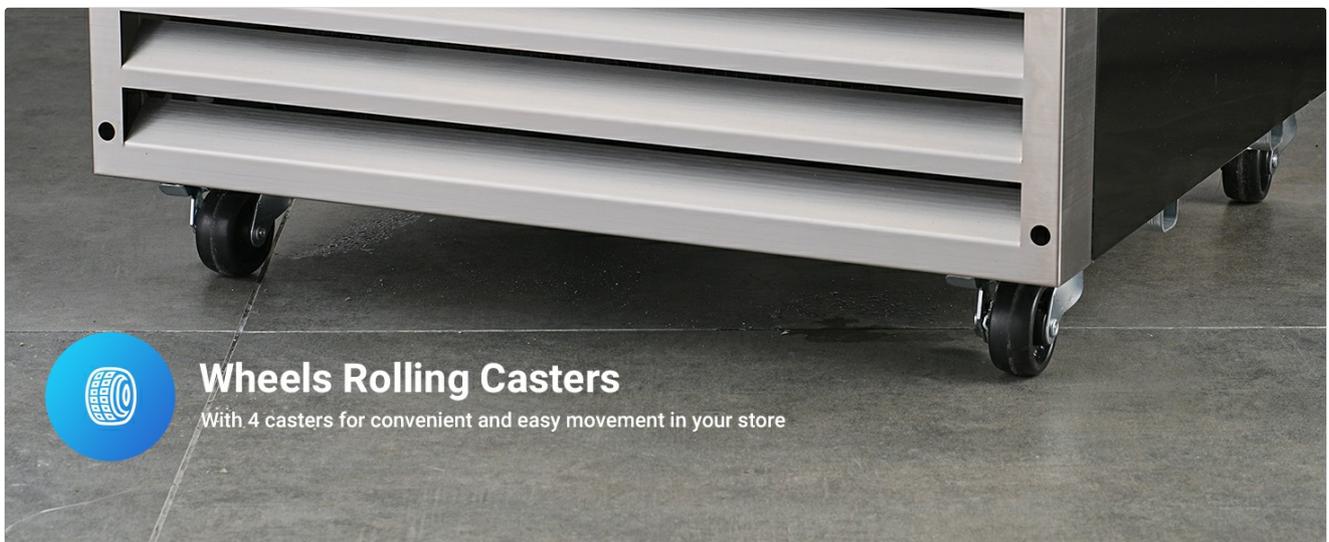


Figure 2: Safety lock mechanism for securing contents.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the refrigerator for any shipping damage. Report any damage immediately to the carrier and retailer.

3.2 Placement

Place the unit on a firm, level floor capable of supporting its weight when fully loaded. Allow adequate space around the unit for proper ventilation (at least 4 inches from walls). Avoid direct sunlight or heat sources.

3.3 Leveling and Mobility

The refrigerator is equipped with 4 strong castors for easy movement. Once in the desired location, ensure the unit is level. Lock the castors to prevent accidental movement.



Figure 3: Strong castors for convenient movement and positioning.

3.4 Power Connection

Connect the refrigerator to a dedicated, grounded electrical outlet. Do not use extension cords or adapter plugs.

4. OPERATING INSTRUCTIONS

4.1 Initial Start-up

After plugging in, allow the refrigerator to run for at least 2-4 hours empty before loading products. This allows the interior to reach the set temperature.

4.2 Temperature Control

The unit features a wide temperature range from 32°F to 50°F (0°C to 10°C). Temperature is adjusted via a dial, typically numbered 1 to 7. A lower number indicates a warmer temperature, while a higher number indicates a colder temperature. Adjust the dial to your desired setting.



Figure 4: Temperature control dial for precise cooling.

4.3 Adjustable Shelves

The refrigerator includes 4 adjustable shelves. To adjust, empty the shelf, lift it slightly, and reposition it to the

desired height using the shelf supports. Ensure shelves are securely seated before loading products.



Figure 5: Adjustable shelves for flexible storage organization.

4.4 LED Lighting

The interior is illuminated with soft LED lights to enhance product visibility. These lights typically operate automatically when the door is opened or can be controlled via a switch (if present).

4.5 Double-Layer Glass Door

The double-layer tempered glass door with Low-E coating reduces misting and condensation, providing clear visibility of contents while enhancing insulation. The door also features an automatic rebound mechanism to prevent cold air from escaping.

BODEGACOOLER Display Refrigerator

Double Layered Tempered Glass Door With Low-E Coating,
reduces misting and condensation



UV Protection



Heat Resistant



No Frost



No Cold Leakage



Save Energy



Easy to Clean



Figure 6: Double-layer glass door benefits for optimal display and efficiency.

BODEGACOOLER Commercial Merchandiser Refrigerator

Automatic Rebound Door,
Preventing Cold Air from Escaping



Fast
Cooling



Automatic
Defrosting



No Foul Odor



No Noise



Energy-Saving
Fan Motor



Self-Returning
Door



Figure 7: Automatic rebound door mechanism.

5. MAINTENANCE

5.1 Cleaning the Interior

Before cleaning, unplug the unit. Clean the interior with a mild detergent and warm water. Rinse thoroughly and dry with a soft cloth. Do not use abrasive cleaners or sharp objects.

5.2 Cleaning the Exterior

Wipe the exterior surfaces with a damp cloth and mild detergent. For stainless steel parts, use a stainless steel cleaner. Ensure the unit is dry before plugging it back in.

5.3 Automatic Defrost

This refrigerator features an automatic defrost system, eliminating the need for manual defrosting. During the defrost cycle, frost on the evaporator coil melts and drains into an evaporation pan. Ensure the drain is clear to

prevent water buildup.

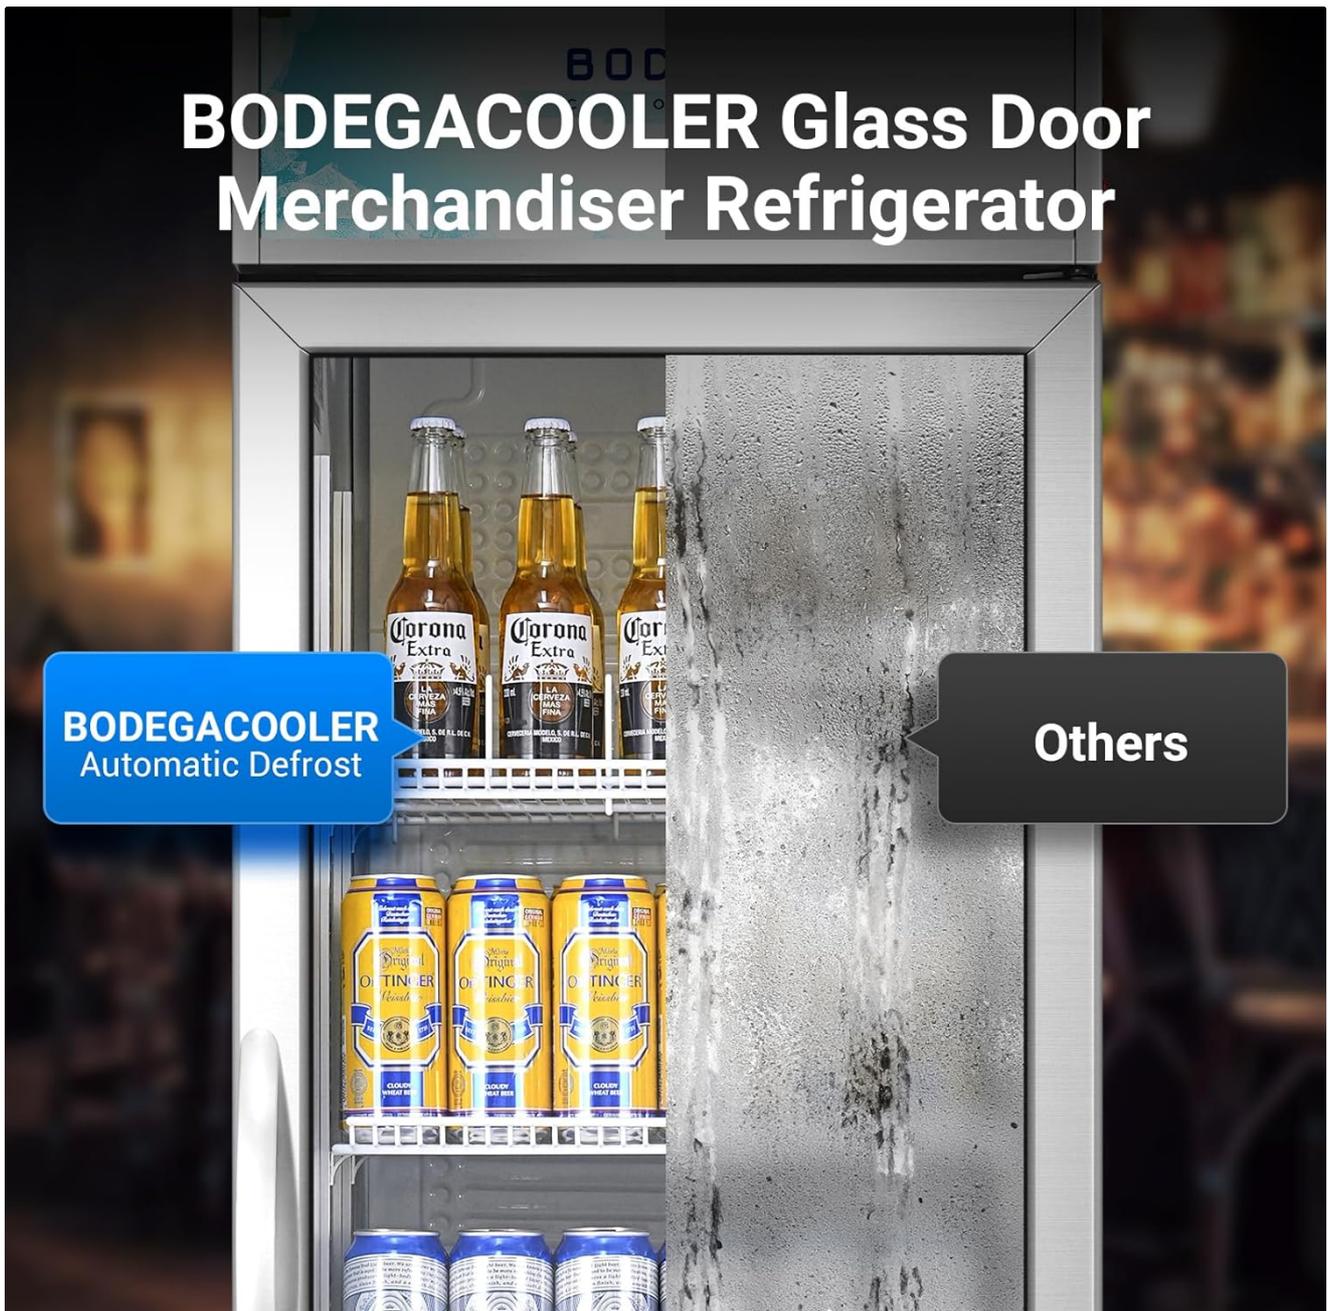


Figure 8: Automatic defrost system prevents ice buildup.

5.4 Condenser Coil Cleaning

Periodically clean the condenser coils (located at the bottom rear of the unit) to maintain cooling efficiency. Use a soft brush or vacuum cleaner to remove dust and debris. Ensure the unit is unplugged before cleaning the coils.

6. TROUBLESHOOTING

Review this section for common issues and their solutions before contacting customer support.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Refrigerator does not operate.	No power; power cord unplugged; circuit breaker tripped.	Check power supply; ensure plug is secure; reset circuit breaker.
Unit is not cold enough.	Temperature setting too high; door left open; excessive product load; poor ventilation; dirty condenser coils.	Adjust temperature dial to a colder setting; ensure door is closed properly; reduce product load; ensure adequate clearance around unit; clean condenser coils.
Excessive noise.	Unit not level; loose parts; fan obstruction.	Level the unit; check for and tighten any loose components; ensure fan is clear of obstructions.
Water on floor/inside unit.	Clogged drain line; door not sealing properly.	Clear the drain line; check door gasket for proper seal and replace if damaged.

7. SPECIFICATIONS

Feature	Detail
Brand	BODEGA
Model Number	SS-P360WD
Capacity	9 Cubic Feet
Product Dimensions (D x W x H)	20.7 x 21.2 x 69.8 inches
Item Weight	119.7 pounds
Installation Type	Freestanding
Temperature Range	32°F to 50°F (0°C to 10°C)
Defrost System	Automatic
Refrigerant	R-290
Shelves	4, Adjustable Stainless Steel
Door Type	Double-layer Glass with Low-E coating
Special Features	LED Light, Wheels (4 Strong Castors), Automatic Rebound Door, Safety Lock

BODEGACOOLER Commercial Cooler Refrigerator

BODEGACOOLER Efficient Compressor



Figure 9: Efficient compressor and cooling system details.



Figure 10: Insulation layers for optimal thermal performance.

8. WARRANTY AND SUPPORT

The BODEGACOOLER Commercial Merchandiser Refrigerator comes with a **1-year product warranty** and a **5-year compressor maintenance warranty**. For any questions, technical assistance, or warranty claims, please contact us via Amazon.

For further assistance, you may also refer to the [BODEGA Store on Amazon](#).

9. PRODUCT VIDEOS

Watch these official videos for visual guidance on setup, features, and operation.

Your browser does not support the video tag.

Video 1: Detailed overview of the BODEGACOOLER Commercial Refrigerator, showcasing its features and design.

(Duration: 2:57)

Your browser does not support the video tag.

Video 2: Demonstration of the refrigerator's cooling capabilities and temperature control. (Duration: 1:31)