

Homtone DS-1413-WI

Homtone 16 Cup Food Processor Instruction Manual

Model: DS-1413-WI | Brand: Homtone

INTRODUCTION

Thank you for choosing the Homtone 16 Cup Food Processor. This versatile appliance is designed to simplify your food preparation tasks with its powerful 600W motor and multiple functions. Please read this manual thoroughly before use to ensure safe and efficient operation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- To protect against risk of electrical shock, do not immerse the appliance base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Always ensure the lid is securely locked in place before operating the appliance. The safety lock feature

prevents operation if not correctly assembled.

- Blades are sharp. Handle with care.

PRODUCT COMPONENTS

Your Homtone 16 Cup Food Processor comes with a variety of components designed for different food preparation tasks. All attachments store neatly in the included storage box.

- **Main Unit:** Features a powerful 600W motor with 3-speed control (Off, Speed 1, Speed 2, Pulse).
- **16-Cup Processing Bowl:** Large capacity bowl with measurement markings and a convenient pour spout.
- **Lid with 3" Extra-Large Feed Chute:** Allows for processing whole fruits and vegetables without pre-cutting.
- **Pusher:** Used to guide food through the feed chute.
- **Chopper Blade:** For chopping, mincing, and pureeing.
- **Dough Blade:** For kneading dough.
- **Whisk:** For whipping creams and emulsifying.
- **Reversible Slicing/Shredding Discs:** Includes discs for fine/coarse shredding and thin/thick slicing.
- **French Fry Disc:** For cutting vegetables into french fry shapes.
- **Attachment Storage Box:** Keeps all accessories organized and protected.



Image: The Homtone Food Processor showcasing its 'All-in-One Functions' including fine shredding, coarse shredding, thin slicing, thick slicing, French fry cutting, shredding, emulsifying, chopping, kneading, and whisking.

ATTACHMENT STORAGE CASE



Organization & Space Saving

Preventing accessories from getting lost or scratched.



Easy Accessibility

Quick and hassle-free access come with 9 specialty attachments



Fine Reversible Disc



Medium Reversible Disc



French Fries Potato Cutter



Shredding Disc



Emulsifying Disc




Plastic Blade



Chopper Blade



Whisk/Twin Beater/Gear Whisk

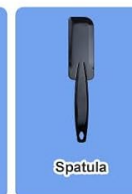

Spatula

Image: A clear storage case containing various blades and discs for the food processor, labeled 'Attachment Storage Case' for organization and easy access.

SETUP

Follow these steps to correctly assemble your food processor:

1. **Place the Bowl:** Position the 16-cup processing bowl onto the motor base. Align it with the unlock mark and twist clockwise to secure it until it clicks into place at the lock mark.
2. **Insert Blade/Disc:** Carefully place the desired blade (chopper, dough, whisk) or disc (slicing, shredding, French fry) onto the spindle in the center of the bowl. Ensure it is seated firmly.
3. **Attach the Lid:** Place the lid onto the bowl, aligning it with the unlock mark. Twist clockwise until it locks securely into place. The safety lock mechanism will prevent the appliance from operating if the lid is not properly secured.
4. **Insert Pusher:** Place the pusher into the feed chute.

4 EASY STEPS FOR USE

1



Place the bowl on the base, align it with the unlock mark, and twist to secure.

2



Align the spindle and insert the blade or disc.

3



Place the lid on the bowl, align it with the unlock mark, and twist to lock.

4



Add the food through the feed tube and turn the knob to start processing.

Image: A visual guide showing four easy steps to set up the food processor: placing the bowl, inserting the blade/disc, locking the lid, and adding food through the feed tube.

OPERATING INSTRUCTIONS

Once assembled, plug in the food processor. The control knob allows you to select different speeds and functions:

- **OFF (0):** Turns the appliance off.
- **Speed 1:** Lower speed for soft foods or delicate processing.
- **Speed 2:** Higher speed for hard foods or more intensive processing.
- **Pulse (P):** Provides short bursts of power for controlled chopping or mixing.

600W MOTOR

Powerful & Consistent Performance



2-SPEED SETTINGS & PULSE CONTROL

Customize the Processing Speed for Every Recipe
Pulse 、 Slower Speed、 Faster Speed



"1" for soft food



"2" for hard food



"P" for short bursts of power

Image: The food processor's control dial showing 'P' for pulse, '0' for off, '1' for low speed, and '2' for high speed, with examples of food types suitable for each setting.

Using Attachments:

- **Chopping/Pureeing:** Use the chopper blade. Place ingredients in the bowl, secure the lid, and use the Pulse setting or Speed 1/2 as needed.
- **Slicing/Shredding:** Use the reversible slicing/shredding discs. Place the desired side up on the spindle. Feed ingredients through the 3" extra-large chute using the pusher.
- **Dough Kneading:** Use the dough blade. Add ingredients to the bowl and use the Pulse setting or Speed 1 for kneading.
- **Whisking/Emulsifying:** Use the whisk attachment. This is ideal for whipping cream or emulsifying sauces.

3" WIDE FEED CHUTE

Fits Whole Foods
Easy Processing And Less Pre-Cutting



Image: A hand demonstrating how a whole potato fits into the 3-inch wide feed chute of the food processor, highlighting its ability to accommodate large foods.

Official Product Videos:

Your browser does not support the video tag.

Video: This video demonstrates the Homtone food processor's chopping and pureeing capabilities by preparing ingredients for a tofu burrito recipe. It highlights the ease of assembly, speed control, and efficient processing of various vegetables and tofu.

Your browser does not support the video tag.

Video: This video showcases the Homtone food processor's efficiency in preparing falafel. It demonstrates adding chickpeas, herbs, and spices, then blending them into a perfect mixture, highlighting the ease of use for complex recipes.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your food processor:

- **Unplug:** Always unplug the appliance before cleaning.
- **Disassemble:** Carefully remove the lid, processing bowl, and any attached blades/discs.
- **Dishwasher Safe:** All detachable parts (bowl, lid, blades, discs, pusher) are dishwasher safe for convenient cleaning. The upper and lower split design of the bowl allows for effortless removal and blade

cleaning.

- **Wipe Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water.



Image: Various detachable parts of the Homtome Food Processor, including the bowl, lid, and blades, are shown being cleaned in a dishwasher, emphasizing its 'Easy Clean & Dishwasher Safe' feature.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Lid or bowl not securely locked.	Ensure the bowl is twisted to the 'lock' position on the base and the lid is twisted to the 'lock' position on the bowl. The safety lock prevents operation if not correctly assembled.
Food is not processing evenly.	Too much food in the bowl or inconsistent food size.	Process smaller batches. Cut larger ingredients into more uniform pieces before adding to the chute or bowl. Use the pulse function for better control.

Problem	Possible Cause	Solution
Motor seems strained.	Overloading the motor or processing very hard ingredients.	Reduce the amount of food. For very hard ingredients, use short bursts with the pulse function or cut them into smaller pieces. Do not exceed the maximum fill line.

SPECIFICATIONS

Feature	Specification
Brand	Homtone
Model Name	DS-1413-WI
Power	600 Watts
Bowl Capacity	3.8 Liters (16 Cups)
Speeds	3 (2 speeds + Pulse)
Product Dimensions	48D x 25W x 23H Centimetres
Item Weight	4.49 kg
Material	Acrylonitrile Butadiene Styrene (ABS), Stainless Steel Blades
Special Feature	Safety Lock, Extra-Large 3" Feed Chute
Care Instructions	Dishwasher Safe Parts

WARRANTY AND SUPPORT

For any questions, concerns, or warranty claims regarding your Homtone 16 Cup Food Processor, please contact our customer support team:

- **Email:** cs@homtone.com

Please have your model name (DS-1413-WI) and purchase information ready when contacting support.