

jioeuinly Logicom Tab 130 10.1 Inch Tablet Case

jioeuinly Slim Case for Logicom Tab 130 10.1 Inch Tablet - Instruction Manual

Model: Logicom Tab 130 10.1 Inch Tablet Case

INTRODUCTION

Welcome to your new jioeuinly Slim Case. This manual provides instructions for the proper installation, use, and maintenance of your tablet case, designed for the Logicom Tab 130 10.1 Inch Tablet. Please read this guide thoroughly to ensure optimal performance and protection for your device.

PRODUCT FEATURES

- **Four Protective Corners:** Designed to minimize the risk of drop damage and absorb impact.
- **Magnetic Closure:** Side magnets ensure the cover remains securely closed for enhanced protection and ease of use.
- **Slim and Lightweight Design:** Manufactured using a voltage process for a thinner and lighter profile.
- **Exquisite Inkjet Pattern:** Features a vibrant, long-lasting pattern that resists fading.
- **Folding Stand Functionality:** Allows for multiple viewing and typing angles.
- **Integrated Storage:** Includes a card insertion slot and a stash compartment for small items.
- **Precise Cutouts:** Ensures full access to all device ports, speakers, and buttons.

WHAT'S IN THE BOX

- 1 x Tablet Case

INSTALLATION GUIDE

Follow these steps to correctly install your tablet into the case:

1. Gently align your Logicom Tab 130 10.1 Inch Tablet with the case, ensuring the camera and ports match the case's cutouts.
2. Insert one side of the tablet into the protective corners of the case.
3. Carefully press the remaining sides of the tablet into the case until all four corners are securely fitted. Verify that all ports and buttons are accessible and aligned with the case cutouts.

ALL-OVER PROTECTION

Goes into every side & corner



Device ports, speakers, buttons all work fine



Slim & Lightweight



Image Description: A close-up view of the tablet case corner, demonstrating the thickened anti-drop corner protector. The image also shows the side of the case with precise cutouts for device ports, speakers, and buttons, indicating full functionality.

OPERATING INSTRUCTIONS

Using the Stand Function

The case features a folding stand design, allowing for multiple viewing angles:

1. Open the front cover of the case.
2. Fold the cover back along the designated creases to create a stable triangular support structure.
3. Position your tablet to achieve the desired viewing or typing angle. The built-in magnets will help secure the position.

Ergonomic Structure



Built-in magnets bolster different positions.



Image Description: An illustration showing a tablet placed in the case, demonstrating two different stand positions: a steeper 'Viewing Angle' and a shallower 'Typing Angle.' The image highlights the ergonomic structure provided by the built-in magnets.

Magnetic Closure

The case is equipped with side magnets to ensure the cover remains securely closed when not in use. Simply close the front cover, and the magnets will engage, keeping your tablet protected.

Card and Change Storage

Utilize the integrated card insertion slot and stash compartment for small items like cards or change, providing convenient storage

on the go.

MAINTENANCE AND CARE

To ensure the longevity and appearance of your jioeuinly Slim Case, follow these care guidelines:

- **Cleaning:** Wipe the case with a soft, damp cloth. Avoid harsh chemicals, abrasive cleaners, or solvents, which may damage the material or pattern.
- **Protection:** Keep the case away from extreme temperatures, direct sunlight for prolonged periods, and sharp objects to prevent scratches, discoloration, or fading.
- **Handling:** Handle the case gently, especially when inserting or removing the tablet, to avoid undue stress on the corners and seams.

TROUBLESHOOTING

Tablet Does Not Fit

Ensure your tablet is a Logicom Tab 130 10.1 Inch model. This case is specifically designed for this model. Double-check the tablet's dimensions against the case specifications. If the tablet is the correct model, try re-inserting it carefully, ensuring all corners are properly aligned.

Stand is Unstable

Ensure the folding stand is correctly formed into a stable triangular shape. The built-in magnets should help secure the position. If the issue persists, check for any obstructions or damage to the folding mechanism or the case material.

Case Appears Damaged

If the case arrives damaged or develops damage during normal use, contact the seller or manufacturer for assistance and potential replacement.

SPECIFICATIONS

Feature	Detail
Product Dimensions	0.39 x 0.39 x 0.39 inches
Item Weight	2.46 ounces
Compatible Model	Logicom Tab 130 10.1 Inch Tablet
Form Factor	Flip Case
Special Features	Card insertion, Stash the change, Thickened anti-drop corner protector, Folding stand
Manufacturer	jioeuinly
Color (Variant)	DHD



Image Description: A top-down view of the Joeuinly Slim Case for Logicom Tab 130, showcasing its floral pattern. The case is closed, highlighting its slim profile and aesthetic design.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the seller's policies on the purchase platform or contact the manufacturer directly. Specific warranty details are not provided in this manual. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CYY8QZT3>

More documents and user manuals: <https://manuals.plus/>