

[Manuals.plus](#) /

> [jioeuinly](#) /

> jioeuinly Slim Flip Stand Case for Prosper Wireless G11 10.1 Inch Tablet User Manual

jioeuinly Prosper Wireless G11 10.1 Inch Tablet Case

jioeuinly Slim Flip Stand Case for Prosper Wireless G11 10.1 Inch Tablet

Model: Compatible with Prosper Wireless G11 10.1 Inch Tablet

INTRODUCTION

This manual provides instructions for the proper installation, operation, and maintenance of your jioeuinly Slim Flip Stand Case. Please read this manual thoroughly before use to ensure optimal performance and longevity of your tablet case.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x jioeuinly Slim Flip Stand Case

SETUP: INSTALLING YOUR TABLET

Follow these steps to correctly install your tablet into the case:

1. Gently align your Prosper Wireless G11 10.1 Inch Tablet with the case's interior frame.
2. Carefully press the tablet into the case, ensuring all four corners are securely seated within the protective corner guards.
3. Verify that all tablet ports, buttons, and speakers are accessible and unobstructed by the case.

ALL-OVER PROTECTION

Goes into every side & corner



Device ports, speakers, buttons all work fine



Slim & Lightweight



The case features thickened anti-drop corner protectors designed to minimize damage from accidental drops. Ensure your tablet is fully seated within these corners for maximum protection.

OPERATING THE CASE

This section details the functional aspects of your tablet case.

Magnetic Closure

The case is equipped with side magnets that ensure a secure closure when not in use, protecting your tablet screen from scratches and dust.

Folding Stand Function

The case can be folded to create a stand, offering multiple viewing angles for media consumption or typing.

1. To activate the stand function, open the front cover of the case.
2. Fold the cover backward, aligning it with the grooves or magnetic points on the back of the case.
3. Adjust the angle to your preferred viewing or typing position.

Ergonomic Structure



Built-in magnets bolster different positions.



The built-in magnets allow for stable positioning in both viewing and typing angles, enhancing usability for various tasks.

Card Insertion and Storage

The case includes a feature for card insertion and small item storage. Locate the designated slot(s) within the case interior to insert cards or stash small change.

Note on Keyboard Compatibility

This case is designed without a dedicated keyboard position. External keyboards are not integrated into the case structure.

MAINTENANCE

Proper care will extend the life and appearance of your tablet case.

- **Cleaning:** Wipe the exterior of the case with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the case in a cool, dry place away from direct sunlight when not in use.
- **Avoid Extreme Temperatures:** Do not expose the case to extreme heat or cold, as this may affect its material integrity.

TROUBLESHOOTING

This section addresses common concerns.

Tablet Not Fitting Securely

Ensure you have the correct model case for your Prosper Wireless G11 10.1 Inch Tablet. Re-align the tablet and apply gentle, even pressure to seat it fully within the protective corners.

Stand Function Instability

Verify that the magnetic points are properly engaged when folding the case into a stand. Ensure the tablet is placed on a flat, stable surface.

SPECIFICATIONS

Detailed specifications for the jioeuinly Slim Flip Stand Case.

Feature	Detail
Compatibility	Prosper Wireless G11 10.1 Inch Tablet
Dimensions (L x W x H)	Approximately 0.39 x 0.39 x 0.39 inches
Item Weight	Approximately 2.46 ounces
Special Features	Card insertion, Stash the change, Thickened anti-drop corner protector, Folding stand
Form Factor	Flip Case

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's return policy or contact the manufacturer directly through their official channels. Keep your purchase receipt for any warranty claims.