

FREDEES BL-97022-25/29

FREDEES Farmhouse Dresser Instruction Manual

Model: BL-97022-25/29

Brand: FREDEES

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Keep this manual for future reference.

- **Anti-Tip Device:** Always install the anti-tip device provided to prevent serious or fatal crushing injuries.
- **Weight Limits:** Do not exceed the maximum weight capacity for the top surface or drawers. Refer to the specifications section for details.
- **Assembly:** Assemble the dresser on a soft, clean surface to prevent scratches. Ensure all parts are securely fastened before use.
- **Children Safety:** Keep small parts and packaging materials away from children. Do not allow children to climb on or play with the dresser.
- **Electrical Safety:** When using the charging station, ensure cables are not pinched or damaged. Do not overload the electrical outlets.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.



Figure 2.1: Exploded view of dresser components.

This diagram illustrates the various parts of the dresser, including the frame, 8 wooden drawers, tempered glass tabletop, built-in charging station, retro metal handles, and solid sliding rails. All necessary hardware is included for assembly.

3. ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Follow the step-by-step instructions provided in the included assembly guide. All parts and screws are labeled for easy identification.

1. **Prepare the Area:** Clear a spacious, clean, and soft area for assembly to prevent damage to the dresser components.
2. **Identify Parts:** Unpack all components and hardware. Match each part to the corresponding label in the assembly guide.
3. **Assemble the Frame:** Begin by assembling the main frame of the dresser according to the diagrams. Ensure all connections are secure.
4. **Install Drawer Slides:** Attach the drawer slides to the dresser frame and to the drawer boxes as indicated.
5. **Assemble Drawers:** Construct each of the 8 drawers, ensuring the bottoms are properly seated and the handles are attached.
6. **Install Tempered Glass Top:** Carefully place the tempered glass top onto the dresser frame.
7. **Connect Electrical Components:** Follow instructions to connect the LED lighting and charging station. Ensure proper power connection.
8. **Insert Drawers:** Slide the assembled drawers into their respective slots.
9. **Install Anti-Tip Kit:** Secure the dresser to the wall using the provided anti-tip kit to prevent tipping.
10. **Final Check:** Verify that all screws are tightened and the dresser is stable before placing items inside.



Figure 3.1: Fully assembled dresser.

This image shows the dresser fully assembled and placed in a room, ready for use. Note the integrated LED lighting at the base and the clear glass top.

4. OPERATING INSTRUCTIONS

4.1. LED Lighting System

The dresser features integrated LED lighting with customizable color and brightness settings, along with a human sensor for automatic activation.

- **Power On/Off:** Locate the touch button on the top surface near the charging station. A short press will turn the lights on or off.
- **Change Color Mode:** With the lights on, short press the touch button repeatedly to cycle through the three available color modes: Warm Light, Natural Light, and White Light.
- **Adjust Brightness:** To adjust brightness, long press the touch button. The brightness will gradually increase

or decrease. Release the button when the desired brightness is reached.

- **Human Sensor:** The dresser is equipped with a human sensor. When activated, the lights will automatically turn on when motion is detected nearby and turn off after a period of inactivity. Refer to the specific controls on the dresser for sensor activation/deactivation.

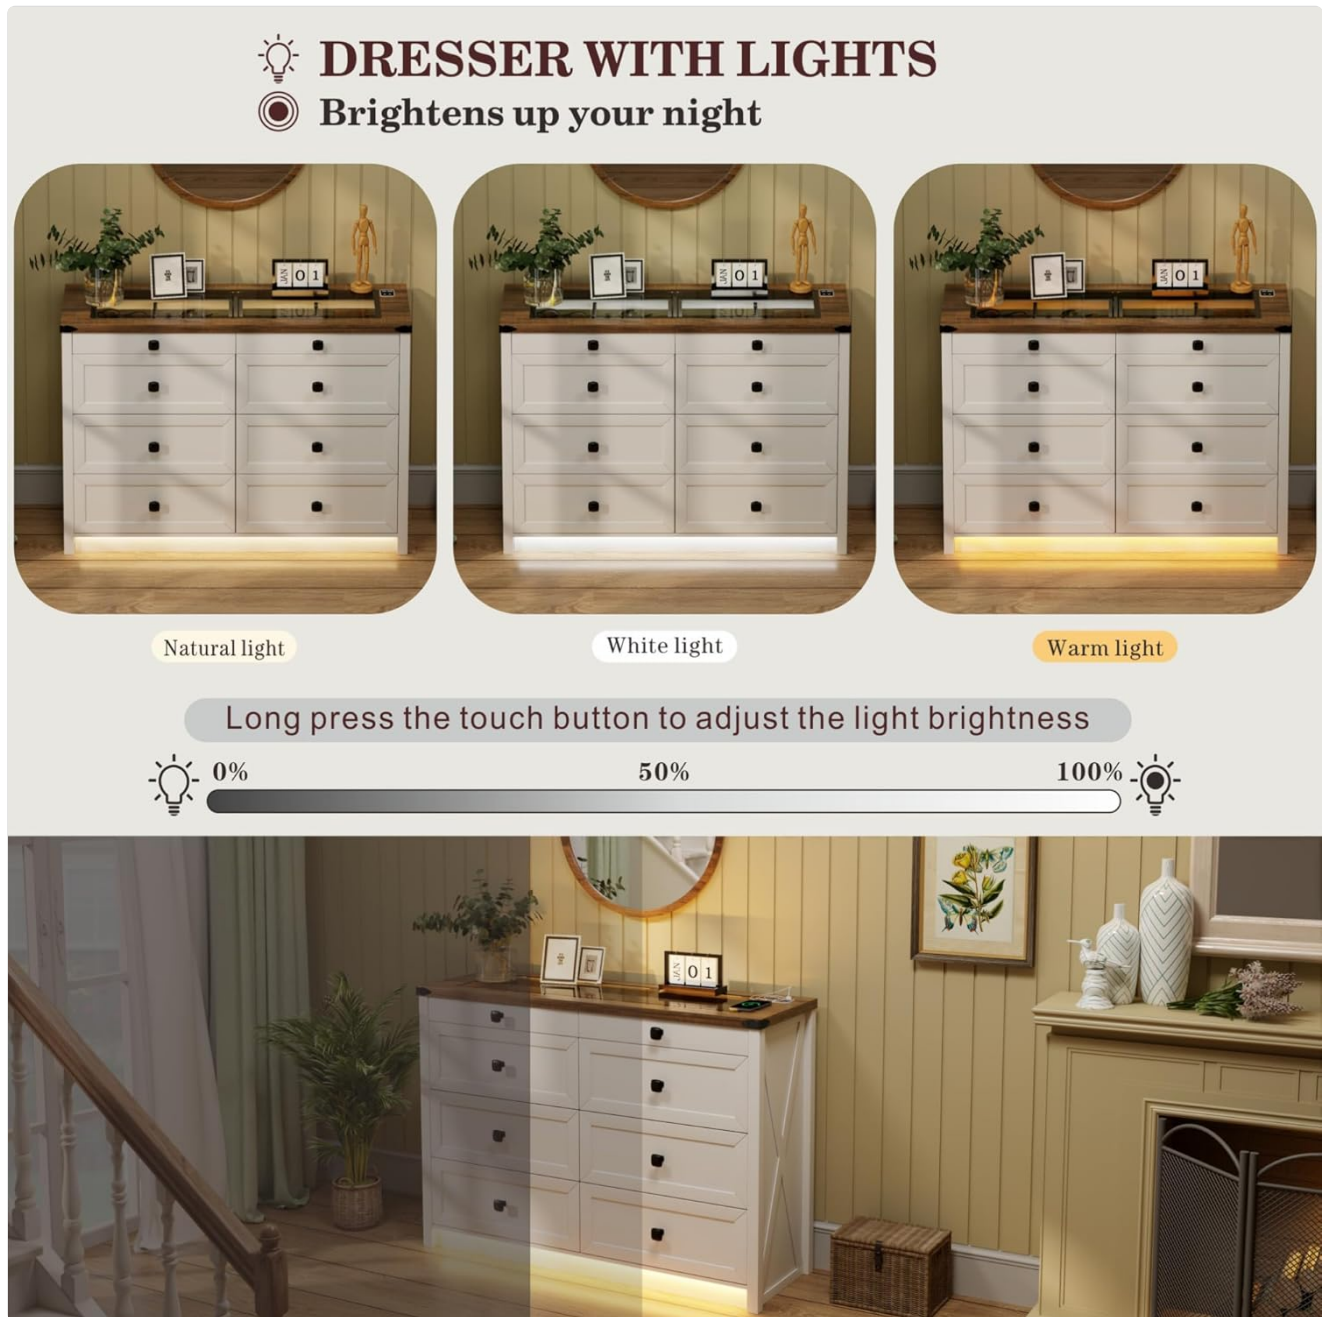


Figure 4.1: LED lighting color options.

This image demonstrates the visual difference between the Natural, White, and Warm light settings of the integrated LED strip, along with a brightness control slider.



EMBEDDED TEMPERED GLASS TABLETOP

A visible glass top enables you to locate your items or accessories at a glance



Waterproof



Easy to clean



Wear and scratch resistant

Figure 4.2: Tempered glass top with and without illumination.

This visual shows how the transparent black tea-tinted glass top allows visibility of stored items when the internal light is on, and provides privacy when the light is off.

4.2. Charging Station

The dresser is equipped with a convenient 2-in-1 charging station on its surface, featuring both USB and Type-C ports.

- **Connect Power:** Ensure the dresser's power cord is securely plugged into a functional wall outlet.
- **Charging Devices:** Connect your smartphone, tablet, or other electronic devices to the available USB (5V/2A) or Type-C ports using their respective charging cables.
- **Usage:** The charging station is designed for convenient access to power for your devices while keeping them organized on the dresser top.



CONVENIENT CHARGING STATION


5V/2A
 [USB Ports & Type-C Ports]


LIGHT CONTROL


HUMAN SENSOR


4.92FT
 [Power cord]

Figure 4.3: Integrated charging station.

A close-up of the dresser's surface, showing the integrated USB and Type-C charging ports, ready for device connection.

5. CARE AND MAINTENANCE

Proper care will extend the life and appearance of your dresser.

- **Cleaning:** Wipe the dresser surfaces with a dry, soft cloth. For stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Glass Top:** Clean the tempered glass top with a glass cleaner and a soft, lint-free cloth.
- **Dusting:** Regularly dust all surfaces to prevent buildup.
- **Avoid Moisture:** Do not place hot or wet items directly on the wood or glass surfaces without protection.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the wood finish.
- **Drawer Maintenance:** Periodically check drawer slides for smooth operation. If needed, a silicone-based

lubricant can be applied sparingly.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
LED lights not turning on.	Power cord not connected; loose connection; faulty LED strip.	Ensure power cord is securely plugged in. Check all electrical connections. If problem persists, contact customer support.
Charging station not working.	Power cord not connected; device cable faulty; device not compatible.	Verify dresser is plugged in. Try a different charging cable or device. Ensure device is compatible with USB/Type-C charging.
Drawers are difficult to open/close.	Overloaded drawer; misaligned slides; loose hardware.	Reduce contents in the drawer. Check if drawer slides are properly aligned. Tighten any loose screws on the drawer or slides.
Dresser feels wobbly.	Uneven floor; loose assembly hardware; anti-tip kit not installed.	Adjust furniture levelers if present, or place shims under the base. Retighten all assembly screws. Ensure the anti-tip kit is correctly installed and secured to the wall.

7. PRODUCT SPECIFICATIONS

Brand:	FREDEES
Model Name:	BL-97022-25/29
Product Dimensions:	15.75"D x 47.24"W x 33.46"H
Color:	White
Mounting Type:	Floor Mount
Number of Drawers:	8
Special Features:	Ample Storage Space, Convenient 2-in-1 Charging Solution (USB & Type-C), Customizable 3-Color Lighting, Tempered Glass Top Design, Human Sensor
Furniture Finish:	Brown (top) / White (body)
Item Weight:	110.2 Pounds
Assembly Required:	Yes
Product Care:	Wipe with Dry Cloth
UPC:	756940843978

PRODUCT DIMENSIONS

Takes little space,
and provides large storage space!



Clothes



Pants



Towels



Socks



Scarves



Hats



Books



Figure 7.1: Detailed product dimensions.

This diagram provides a comprehensive overview of the dresser's dimensions, including overall height, width, depth, and specific measurements for drawer height and top surface thickness.



Figure 7.2: Storage capacity illustration.

An illustrative image demonstrating the ample storage capacity of each large drawer, capable of holding approximately 20-25 t-shirts or 15-20 pairs of jeans.

8. WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please contact FREDEES customer service directly. Refer to the product packaging or the original purchase documentation for contact details.

Please have your model number (BL-97022-25/29) and purchase date available when contacting support.