



[Manuals.plus](#) /

› [Upstreman](#) /

› Upstreman 1.7 Cu.ft Mini Fridge with Freezer (Model FR17) - User Manual

Upstreman FR17

Upstreman 1.7 Cu.ft Mini Fridge with Freezer (Model FR17) - User Manual

Your guide to setup, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the Upstreman 1.7 Cu.ft Mini Fridge with Freezer, Model FR17. This compact and energy-efficient appliance is designed to provide convenient cooling for various spaces such as dorms, offices, bedrooms, and kitchens. This manual contains important information regarding the installation, operation, and maintenance of your new refrigerator. Please read it thoroughly before use and keep it for future reference.

KEEP COLD DRINKS AT YOUR REACH



Image: The Upstreman mini fridge seamlessly integrated into different environments, highlighting its versatility.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury when using your refrigerator, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not touch cold surfaces, especially when hands are wet.
- Never clean refrigerator parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Before performing any maintenance or cleaning, unplug the refrigerator from the power outlet.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Ensure proper ventilation around the appliance. Do not block any ventilation openings.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental

capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. SETUP GUIDE

3.1 Unpacking

Carefully remove all packaging materials. Ensure all components are present and undamaged. It is recommended to keep the original packaging for future transportation needs.

3.2 Placement

Place the refrigerator on a flat, stable surface away from direct sunlight and heat sources (e.g., stoves, heaters). Allow at least 4 inches of space between the back and sides of the refrigerator and any adjacent walls to ensure proper air circulation.

3.3 Leveling the Appliance

The refrigerator features adjustable leveling feet at the bottom. Turn the feet clockwise to raise the appliance or counter-clockwise to lower it. Ensure the refrigerator is perfectly level to optimize performance and prevent vibrations.

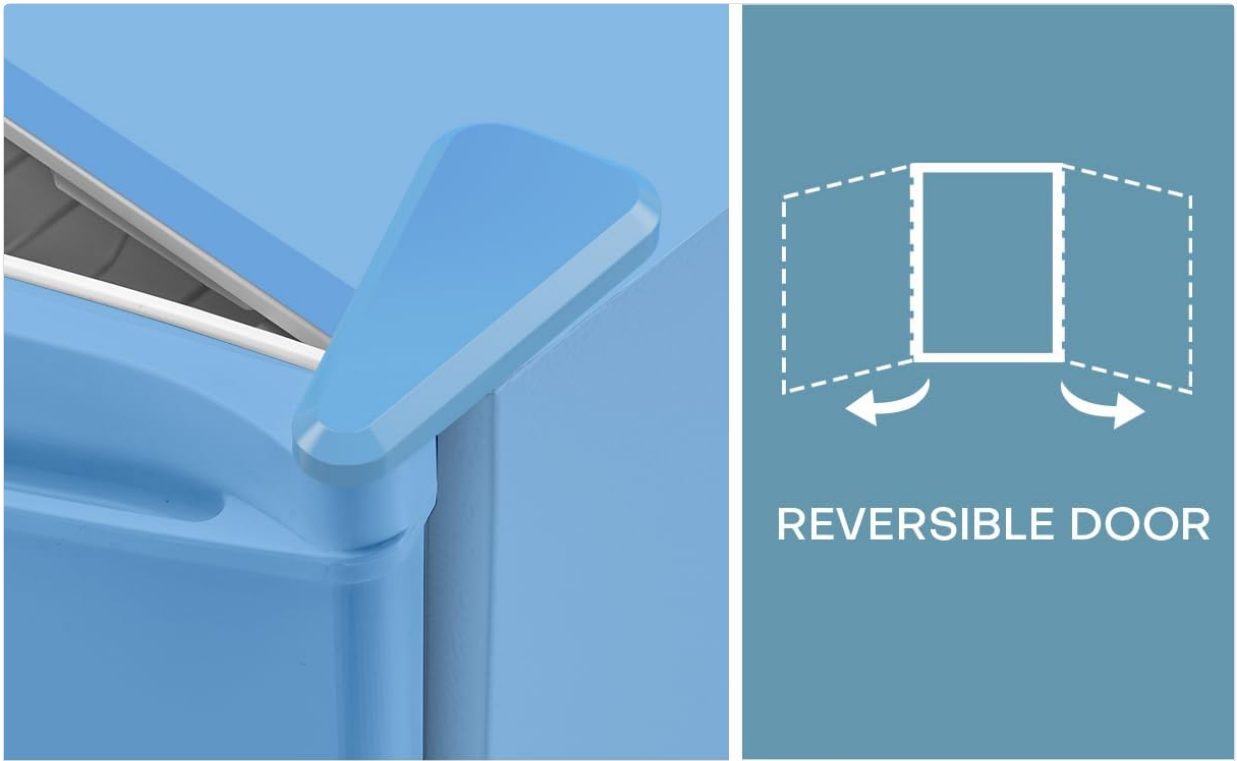


Image: Close-up of the adjustable leveling foot. The feet can be rotated to ensure the fridge is stable and level on any surface.

3.4 Reversible Door Installation

The door of your Upstreman mini fridge is reversible, allowing it to open from either the left or right side to suit your space. Refer to the detailed instructions in the included user manual for the step-by-step process of reversing the door hinge.



KEEP COOLING ANYWHERE



Image: Diagram illustrating the reversible door feature, allowing users to change the door's opening direction.

3.5 Initial Power-On

After placement and leveling, plug the refrigerator into a dedicated power outlet. Allow the appliance to stand for at least 2-4 hours before loading with food or beverages. This allows the refrigerant to settle, ensuring optimal cooling performance.


4. OPERATING INSTRUCTIONS

4.1 Temperature Control

Your refrigerator is equipped with an adjustable thermostat offering 5 variable temperature settings. The temperature range is from 33.8°F to 46.4°F. Turn the thermostat dial to your desired setting. A higher number indicates a colder temperature. Note that this appliance is not designed for storing ice cream.

5 TEMPERATURE SETTINGS

the warmest

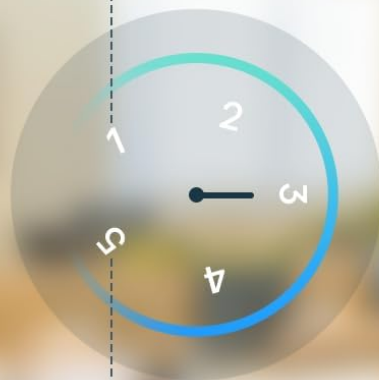

the coldest



Drink



Fruit



Vegetable



Ice Cube

Image: The temperature control dial with settings from 1 (warmest) to 5 (coldest), indicating a temperature range of 33.8°F to 46.4°F.

4.2 Freezer Compartment Use

The compact freezer compartment is suitable for making ice cubes and keeping small frozen items. For best results, ensure the temperature setting is at a colder level when using the freezer.

4.3 Storage Capacity

With a 1.7 cubic feet capacity, the refrigerator offers ample space for beverages, snacks, and small food items. The interior is designed to maximize storage efficiency.

COMPACT SIZE



Image: The interior of the mini fridge, showcasing its 1.7 cubic feet capacity filled with drinks, fruits, and other small items.

4.4 Quiet Operation

The Upstreman mini fridge operates at a low noise level of 38 dB, ensuring minimal disturbance in quiet environments like bedrooms or offices.



Image: Visual representation of the fridge's 38dB low noise operation, suitable for quiet spaces.

4.5 Energy Efficiency

This appliance is designed for energy efficiency, consuming approximately 0.5 kWh per day. It uses R600a refrigerant, which has a lower global warming potential compared to older refrigerants.



Image: Illustration of the fridge's energy efficiency, indicating a low daily operating cost.

4.6 Product Overview Video

Your browser does not support the video tag.

Video: An official overview of the Upstreman Mini Fridge, demonstrating its features and suitability for various environments like offices.

5. MAINTENANCE

5.1 Cleaning

Regular cleaning helps maintain the efficiency and hygiene of your refrigerator. Unplug the appliance before cleaning. Use a soft cloth with a mild detergent and warm water to clean the interior and exterior surfaces. Avoid abrasive cleaners or sharp objects that could damage the surfaces.

5.2 Manual Defrosting

This refrigerator features manual defrosting. When frost accumulates to a thickness of about 0.2 inches (5 mm) in the freezer compartment, it should be defrosted. To defrost, turn off the appliance, remove all contents, and allow the frost to melt naturally. Use a soft cloth to wipe away melted water. Do not use sharp objects to remove frost.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; thermostat set to "0".	Ensure plug is secure; reset circuit breaker; adjust thermostat to a higher setting.
Temperature is too warm.	Thermostat setting too low; door opened too frequently; warm food placed inside.	Increase thermostat setting; minimize door openings; allow hot food to cool before storing.
Excessive noise.	Appliance not level; contact with wall/cabinet; compressor noise (normal).	Adjust leveling feet; reposition appliance; normal operation may produce slight humming.
Frost buildup in freezer.	Door not sealed properly; high humidity; frequent door openings.	Check door seal; reduce humidity if possible; defrost manually as needed.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Upstreman
Model Number	FR17
Capacity	1.7 Cubic Feet
Product Dimensions (W x D x H)	18.9 x 17.7 x 19.3 inches
Item Weight	29.8 pounds
Temperature Range	33.8°F to 46.4°F
Noise Level	38 dB
Annual Energy Consumption	204 Kilowatt Hours
Defrost Type	Manual
Door Hinges	Reversible
Color	Blue

8. WARRANTY AND SUPPORT

Upstreman offers a one-year quality and service warranty for this product. For any inquiries, technical assistance, or warranty claims, please contact Upstreman customer support through their official channels. Please retain your proof of purchase for warranty validation.