

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [VGR](#) /
- > [VGR V-265 Professional Hair Trimmer User Manual](#)

## VGR V-265

# VGR V-265 Professional Hair Trimmer User Manual

Model: V-265 | Brand: VGR

## 1. INTRODUCTION

---

Thank you for choosing the VGR V-265 Professional Hair Trimmer. This device is designed for precise hair and beard trimming, offering convenience and professional results at home. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.



Figure 1: VGR V-265 Professional Hair Trimmer with included accessories.

## 2. SAFETY INFORMATION

To reduce the risk of injury, electric shock, fire, or damage to the product, always follow these basic safety precautions:

- Keep the device away from water. Do not use it in or near bathtubs, showers, basins, or other vessels containing water.
- Exercise caution when using on sensitive skin areas or near eyes.
- Keep fingers and other body parts away from the blades during operation.
- Do not use the trimmer if it is damaged or malfunctioning.
- Ensure the charging cable is not damaged and is properly connected during charging.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## 3. PACKAGE CONTENTS

The VGR V-265 Professional Hair Trimmer package includes the following items:

- VGR V-265 Hair Trimmer
- Three Guide Combs (1mm, 2mm, 3mm)

- Cleaning Brush
- Lubricating Oil
- Type-C Charging Cable
- User Manual

## 4. PRODUCT FEATURES

The VGR V-265 Hair Trimmer is equipped with advanced features for an efficient grooming experience:

- **Three Turbo Speeds:** Adjustable speeds of 6000 RPM, 6500 RPM, and 7000 RPM for various trimming needs.
- **Digital Display:** Luminous digital screen shows the current operating speed and remaining battery time in minutes.
- **Non-Slip Design:** Dotted body design ensures a secure and comfortable grip during use.
- **Fast Charging:** Type-C charging cable allows for quick charging.
- **Long Battery Life:** Provides up to 100 minutes of continuous operation after a 2-hour charge.
- **Portable:** Compact and travel-friendly design, suitable for trips and camping.
- **Stainless Steel Blades:** Durable and sharp blades for precise cutting.



Figure 2: Detail of the trimmer's blade and Type-C charging port.

## 5. SETUP

---

### 5.1 Initial Charging

1. Before first use, fully charge the trimmer.
2. Connect the Type-C charging cable to the trimmer's charging port.
3. Plug the other end of the cable into a suitable USB power adapter (not included) or a USB port.
4. The digital display will indicate charging status. A full charge typically takes 2 hours, providing up to 100 minutes of continuous use.

### 5.2 Attaching Guide Combs

1. Ensure the trimmer is turned off before attaching or detaching guide combs.
2. Select the desired guide comb (1mm, 2mm, or 3mm) for your preferred hair length.
3. Align the comb with the trimmer blade and push it firmly until it clicks into place.
4. To remove, gently pull the comb away from the blade.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Power On/Off

- To turn on the trimmer, press and hold the power button for three continuous seconds.
- To turn off the trimmer, press and hold the power button for three continuous seconds again.

### 6.2 Adjusting Speed

- Once the trimmer is on, press the power button briefly to cycle through the three available speeds (6000 RPM, 6500 RPM, 7000 RPM).
- The current speed will be displayed on the digital screen.

### 6.3 Trimming Hair/Beard

1. Ensure your hair or beard is clean and dry before trimming.
2. Attach the desired guide comb. For a closer trim, you may use the trimmer without a comb.
3. Turn on the trimmer and select your preferred speed.
4. Hold the trimmer with the blades facing the area to be trimmed.
5. Move the trimmer against the direction of hair growth for an even cut. Use slow, controlled movements.
6. For detailing or shaping, use the trimmer without a comb, being careful around edges.



Figure 3: Proper grip for using the VGR V-265 trimmer.

## 7. MAINTENANCE

---

Regular cleaning and maintenance will prolong the life of your trimmer and ensure optimal performance.

### 7.1 Cleaning the Blades

1. Turn off and unplug the trimmer before cleaning.
2. Remove any attached guide comb.
3. Use the provided cleaning brush to remove loose hairs from the blades and the trimmer head.
4. For a more thorough clean, you may carefully detach the blade head (refer to specific instructions if available for your model, otherwise proceed with caution).
5. Do not rinse the entire trimmer under water unless explicitly stated as waterproof. Clean blades with a damp cloth if necessary, then dry thoroughly.

### 7.2 Lubricating the Blades

1. After cleaning, apply 1-2 drops of the provided lubricating oil onto the blades.
2. Turn on the trimmer for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.

- Lubricate blades regularly (e.g., after every few uses) to maintain sharpness and smooth operation.

## 7.3 Storage

- Store the trimmer in a cool, dry place, away from direct sunlight and moisture.
- Keep out of reach of children.

## 8. TROUBLESHOOTING

---

If you encounter any issues with your VGR V-265 trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Low battery or no charge.	Charge the trimmer for at least 2 hours.
Poor cutting performance.	Blades are dull, dirty, or not lubricated.	Clean and lubricate the blades. If blades are dull, consider professional sharpening or replacement.
Trimmer makes unusual noise.	Blades are obstructed or require lubrication.	Clean and lubricate the blades. Ensure no hair or debris is stuck.
Battery does not hold charge.	Battery lifespan reached or charging cable/adaptor issue.	Ensure charging cable and adapter are working. If problem persists, contact customer support.

If the problem persists after trying these solutions, please contact VGR customer support.

## 9. SPECIFICATIONS

---

Feature	Detail
Model Number	V-265
Brand	VGR
Blade Material	Stainless Steel
Head Type	Pivoting
Speeds	6000 RPM, 6500 RPM, 7000 RPM
Battery Type	Rechargeable, Integrated
Charging Time	2 hours
Operating Time	Up to 100 minutes (continuous)
Power Source	Plug-in Electric (via Type-C cable)
Color	Black
Item Weight	190 grams
Shipping Dimensions	19.7 x 9.9 x 6.7 cm
Recommended Uses	Face hair trimming, beard and mustache trimming

Feature	Detail
Special Features	Travel-friendly, Fast Charging, Digital Display

## 10. WARRANTY AND SUPPORT

---

### 10.1 Warranty Information

VGR products are manufactured to high-quality standards. For specific warranty details, including coverage period and terms, please refer to the warranty card included in your product packaging or contact your retailer. Keep your purchase receipt as proof of purchase for any warranty claims.

### 10.2 Customer Support

If you have any questions, require assistance, or need to report an issue with your VGR V-265 Professional Hair Trimmer, please contact our customer support team or your local retailer. Please have your model number (V-265) and purchase details ready when contacting support.

For further assistance, visit the official VGR website or contact the seller directly through your purchase platform.