

GreenSweep B0CZ17WKMV

GreenSweep Reviver Artificial Grass Electric Power Brush User Manual

Model: B0CZ17WKMV

1. INTRODUCTION

The GreenSweep Reviver Artificial Grass Electric Power Brush is designed to maintain the appearance and longevity of your artificial turf. This mains-powered tool effectively lifts flattened turf fibers, restores volume, and removes ingrained dirt, dust, and debris, ensuring your artificial lawn remains fresh and vibrant.

2. SAFETY INFORMATION

Please read and understand all safety instructions before operating the GreenSweep Reviver. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always wear appropriate personal protective equipment, including safety glasses and sturdy footwear.
- Ensure the power cord is in good condition and free from damage. Do not operate the unit with a damaged cord.
- Keep children and pets away from the operating area.
- Do not operate the unit in wet conditions or expose it to rain.
- Unplug the unit from the power supply before performing any maintenance, cleaning, or brush changes.
- Avoid operating the unit on slopes that are too steep to maintain proper footing.
- Do not force the tool; allow the brush to do the work.

3. PRODUCT OVERVIEW

The GreenSweep Reviver features a robust design for effective artificial turf maintenance.

Key Components:

- **Brush Head:** Houses the 12-inch wide spinning brush.
- **Telescopic Handle:** Adjustable for comfortable operation.
- **Power Cord:** Mains-powered for consistent performance.
- **Variable Speed Control:** Allows adjustment of brush intensity.
- **Brush Release Buttons:** For tool-free brush changes.



Image: The GreenSweep Reviver in action, demonstrating how it restores volume to flattened artificial turf. The left side shows flat, matted turf, while the right side shows lifted and full turf after treatment.

4. SETUP

The GreenSweep Reviver is supplied fully assembled for convenience. Follow these steps for initial setup:

1. **Unpack:** Carefully remove the unit from its packaging.
2. **Handle Adjustment:** Adjust the telescopic handle to a comfortable operating height. Ensure all locking mechanisms are secure.
3. **Power Connection:** Connect the power cord to a suitable outdoor-rated extension cord, then plug

into a grounded electrical outlet. Ensure the power supply matches the unit's requirements.

Your browser does not support the video tag.

Video: This video provides a quick setup guide for the GreenSweep Reviver, demonstrating how to adjust the handle and prepare the unit for use.

5. OPERATING INSTRUCTIONS

Operating the GreenSweep Reviver is straightforward. Always ensure the area is clear of large debris before starting.

1. **Starting the Unit:** Press and hold the safety switch, then squeeze the trigger to start the brush. Release the trigger to stop.
2. **Movement:** Gently pull the unit backward across the artificial turf. The 1,300 RPM spinning brush will lift the pile and sweep away debris.
3. **Variable Speed:** Use the variable speed control to adjust the brush intensity according to the condition of your turf. Lower speeds are suitable for light cleaning, while higher speeds are effective for matted areas.
4. **Overlapping Passes:** For best results, make overlapping passes to ensure complete coverage and uniform lifting of the turf fibers.
5. **Debris Collection:** The unit employs a 'forward throw' cleaning action, which means debris is propelled forward. You may need to collect accumulated debris after sweeping.

Powerful & Effective



1300 RPM Spinning Brush

Image: An aerial view of the GreenSweep Reviver being used on artificial turf, demonstrating its powerful and effective cleaning action with a 1300 RPM spinning brush, clearing leaves and debris.

Remove Debris

Forward Throw Cleaning

Removes Ingrained Dirt, Dust & Debris

Image: A close-up of the GreenSweep Reviver's brush head actively removing ingrained dirt, dust, and debris from artificial turf using its forward throw cleaning mechanism.

Your browser does not support the video tag.

Video: This video demonstrates how the GreenSweep Reviver lifts and restores matted artificial turf, showing the brush in action and the resulting improved appearance of the grass.



Image: A person standing on artificial turf that has been treated with the GreenSweep Reviver, highlighting the rich color, soft feel, and full volume of the revitalized turf, making it look like new.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your GreenSweep Reviver.

Brush Cleaning and Replacement:

The brush roller can be removed quickly and easily without tools for cleaning or replacement.

1. **Disconnect Power:** Always unplug the unit from the power source before attempting any brush maintenance.
2. **Release Brush:** Locate the brush release buttons on the brush head. Press these buttons and slide the brush out.
3. **Clean Brush:** Remove any tangled debris, hair, or fibers from the brush. A stiff brush or comb can assist in this process.
4. **Replace Brush:** Align the new or cleaned brush with the slots in the brush head and slide it back into place until it clicks securely.

Storage:

Store the unit in a dry, protected area away from direct sunlight and extreme temperatures. The telescopic handle can be retracted for compact storage.



Image: A close-up demonstrating the tool-free brush change feature of the GreenSweep Reviver. A hand is shown pressing the release button while another hand removes the 12-inch brush span for cleaning or replacement.

7. TROUBLESHOOTING

If you encounter issues with your GreenSweep Reviver, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not start	No power supply Safety switch/trigger not engaged	Check power cord connection and outlet Ensure safety switch is pressed and trigger is squeezed

Problem	Possible Cause	Solution
Poor cleaning/lifting performance	Brush is clogged with debris Incorrect operating speed Worn brush	Clean the brush (refer to Maintenance section) Adjust variable speed control to a higher setting Replace the brush (refer to Maintenance section)
Excessive vibration or noise	Brush is unbalanced or damaged Debris caught in brush mechanism	Inspect and clean/replace brush Disconnect power and remove any obstructions

If the problem persists after attempting these solutions, please contact GreenSweep customer support.

8. SPECIFICATIONS

- **Brand:** GreenSweep
- **Model Number:** B0CZ17WKMV
- **Specific Uses For Product:** Artificial Grass
- **Surface Recommendation:** Artificial Grass
- **Number of Items:** 1
- **Brush Width:** 12 inches
- **Brush Speed:** Up to 1,300 RPM
- **Power Source:** Mains-Powered (Electric)

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official GreenSweep website. Keep your proof of purchase for any warranty claims. For technical assistance or replacement parts, contact GreenSweep customer service directly.