

JakMean B0CZ3HHPTW

JakMean Electric Automatic Toy Blaster with Scope

Instruction Manual

IMPORTANT SAFETY WARNINGS

WARNING: This toy gun has a bright orange tip and is non-firing. Altering its appearance is prohibited by law and may cause confusion. Always use this product responsibly and as intended.

WARNING: CHOKING HAZARD - small parts. Not for children under 3 years.

According to Minnesota state law, improper use of imitation firearms may result in criminal penalties. It is prohibited to use imitation firearms for threats, intimidation, disguise, or other illegal activities.

Prohibited activities:

- Do not bring imitation firearms into public places or schools.
- Do not use imitation firearms for any form of threat, intimidation, or criminal activity.
- Do not disguise imitation firearms to make them look like real firearms.
- Do not modify imitation firearms to make them capable of firing real bullets.

Child use and storage: Children must use imitation firearms under adult supervision and store them in a place inaccessible to children.



Image: Detailed view of safety warnings printed on the product packaging, highlighting legal compliance and prohibited uses.

WHAT'S IN THE BOX

Your JakMean Electric Automatic Toy Blaster package includes the following components:

- Toy gun body
- 100 Darts (foam)
- 30 Dart Clips (forming the belt)
- Scope attachment
- Shoulder stock
- Rechargeable battery
- USB charging cable

AUTO-ROTATING BELT

100 X



Image: A young boy holding the assembled JakMean Electric Automatic Toy Blaster, with 100 foam darts visible in the background, demonstrating the main product and its ammunition.

SETUP GUIDE

1. Charge the Battery

Before initial use, fully charge the included rechargeable battery using the provided USB charging cable. The charging indicator will show when charging is complete.

2. Assemble the Blaster

Follow these steps to assemble your toy blaster:

1. **Install the Scope:** Slide the scope onto the rail on top of the blaster until it clicks into place.
2. **Attach the Shoulder Stock:** Slide the shoulder stock into the designated slot at the rear of the blaster body until it is securely attached.
3. **Load Darts into Clips:** Insert the foam darts into the individual clips. Ensure the darts are fully seated.

4. **Connect Dart Clips:** Connect the loaded dart clips together to form a continuous belt.
5. **Insert Battery:** Open the battery compartment, typically located in the handle or magazine area. Connect the battery cable and carefully place the battery inside. Close the compartment securely.

EASY TO USE



Image: A visual guide showing the steps for assembling the toy blaster, including sight installation, butt mounting, magazine assembly, bullet loading, and battery installation.



Image: Close-up view of the automatic fast loading mechanism, illustrating how the dart belt feeds smoothly into the blaster and the switch between single shot and burst fire modes.

Video: Foam Dart Blaster-Gun Toy Overview

Your browser does not support the video tag.

Video Description: An official seller video providing a general overview of the JakMean Electric Automatic Toy Blaster, including its components and basic assembly.

OPERATING INSTRUCTIONS

1. Power On/Off

Locate the power switch on the blaster. Slide it to the 'ON' position to activate the blaster. Slide it to the 'OFF' position when not in use to conserve battery life and for safety.

2. Load the Dart Belt

Insert the connected dart belt into the designated loading port on the side of the blaster. Ensure it feeds smoothly into the mechanism.

3. Select Firing Mode

The blaster features two firing modes:

- **Single Shot:** Press the trigger briefly for a single dart.
- **Full-Auto:** Hold down the trigger for continuous firing.

4. Firing the Blaster

Aim at your target, ensuring no people or animals are in the line of fire. Press the trigger to fire. The automatic rotating belt system will feed darts continuously in full-auto mode.



Fun Shooting Modes



Image: A graphic illustrating the two firing modes: single shot and multiple bursts, showing darts being fired individually and in rapid succession.

5. Range and Performance

The blaster can fire darts approximately 65-100 feet at 65 FPS (feet per second).

POWERFUL BLASTER



65-100FEET

65FPS



Image: A visual representation of the blaster's powerful performance, showing a dart traveling 65-100 feet at 65 FPS.

Video: 360-degree Rotation Display of Toy Guns

Your browser does not support the video tag.

Video Description: An official seller video showcasing a 360-degree view of the JakMean Electric Automatic Toy Blaster, highlighting its design and features.

MAINTENANCE

1. Battery Care

- Always fully charge the battery before storage if the blaster will not be used for an extended period.
- Do not overcharge the battery.
- Remove the battery from the blaster when not in use to prevent discharge.

2. Dart Care

- Use only official JakMean foam darts to ensure optimal performance and prevent damage to the blaster.
- Inspect darts for damage before use. Do not use bent, torn, or otherwise compromised darts.
- Store darts in a clean, dry place to maintain their shape and integrity.

3. General Cleaning

- Wipe the blaster with a dry or slightly damp cloth to remove dust and debris.
- Do not immerse the blaster in water or use harsh cleaning chemicals.
- Ensure all moving parts are free from obstructions.

TROUBLESHOOTING

1. Blaster Not Firing

- Check if the power switch is in the 'ON' position.
- Ensure the battery is fully charged and correctly inserted.
- Verify that the dart belt is properly loaded and feeding into the mechanism.

2. Darts Not Firing Consistently or Jamming

- Ensure only official JakMean foam darts are used.
- Check darts for any damage or deformation. Replace damaged darts.
- Inspect the dart feeding mechanism for any obstructions. Clear any debris carefully.
- Ensure the dart belt is not too tight or too loose.

3. Darts Not Shooting Far

- Confirm the battery is fully charged. Low battery can affect dart velocity.
- Ensure darts are in good condition and not worn out.

SPECIFICATIONS

Feature	Detail
Product Dimensions	17.32 x 8.86 x 3.03 inches
Item Weight	2.25 pounds
ASIN	B0CZ3HHPTW
Manufacturer Recommended Age	0 - 12 years (Note: Always supervise young children during play)
Manufacturer	JakMean
Dart Capacity	30 darts per belt (expandable with additional belts)
Firing Modes	Single Shot, Full-Auto
Dart Velocity	Up to 65 FPS

Feature	Detail
Max Firing Range	Up to 100 feet
Battery Life	6+ hours per charge



Image: Various angles of the JakMean Electric Automatic Toy Blaster, showcasing its design from top, side, and front views.

WARRANTY AND SUPPORT

Return Policy

This product is eligible for a refund or replacement within 30 days of purchase, subject to the retailer's return policy.

Customer Service

For any questions or support, please contact JakMean Direct customer service. Online customer service is available to assist you.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question