

[Manuals.plus](#) /

› [SIUMAL](#) /

› SIUMAL Universal IR Remote Control User Manual for TV, DVD, and Blu-Ray Players

## SIUMAL B0CZ5WT8W5

# SIUMAL Universal IR Remote Control User Manual

Model: Universal IR Remote Control (B0CZ5WT8W5)

## INTRODUCTION

---

The SIUMAL Universal IR Remote Control is designed to replace multiple original remote controls, offering a convenient solution for managing various infrared-compatible audio-video devices. This remote is compatible with a wide range of brands, including Samsung, LG, Sony, Panasonic, Philips, TCL, Toshiba, Sharp, and Haier, among others. It operates solely via infrared (IR) signal, requiring no Bluetooth or Wi-Fi connection.

This manual provides detailed instructions for setting up, operating, and maintaining your universal remote control.

## PACKAGE CONTENTS

---

- 1 x SIUMAL Universal IR Remote Control
- 1 x User Manual (this document)

**Note:** 2 AAA batteries are required and are not included in the package.

## SETUP

---

### 1. Battery Installation

Before using the remote control, install two AAA batteries.

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring correct polarity (+ and -).
3. Close the battery compartment cover securely.



Figure 1: Battery installation in the remote control.

## 2. Programming the Remote Control

The remote control can be programmed using either manual code entry or automatic code search.

### Method A: Manual Code Entry

This method requires you to find the specific code for your device brand from the provided code list (usually included in a separate leaflet or available online).

1. Turn on the device (TV, DVD, Blu-Ray player, etc.) you wish to control.
2. Press and hold the **SETUP** button on the universal remote until the indicator light stays on.
3. Enter the 3-digit code for your device brand using the number buttons.
4. Point the remote at your device and press the **POWER** button. If the device turns off, the code is correct.
5. If the device does not respond, repeat steps 2-4 with the next code listed for your brand.
6. Once the device responds, press the **SETUP** button again to save the code and exit programming mode. The indicator light will turn off.

## Method B: Automatic Code Search

If you cannot find the code or prefer an automated process, use the automatic code search.

1. Turn on the device you wish to control.
2. Press and hold the **SETUP** button until the indicator light stays on.
3. Press the **POWER** button once. The indicator light will flash, indicating the remote is searching for a code.
4. Point the remote at your device. The remote will automatically send power signals.
5. As soon as your device turns off, immediately press any button (e.g., **OK** or **TV**) to stop the search and save the code.
6. Test other functions (volume, channels) to ensure proper operation. If not all functions work, repeat the automatic search to find a more compatible code.



Figure 2: Top section of the remote control with Power and Setup buttons.

## OPERATING THE REMOTE CONTROL

Once programmed, the universal remote functions like your original remote for basic operations.

### Key Functions Overview

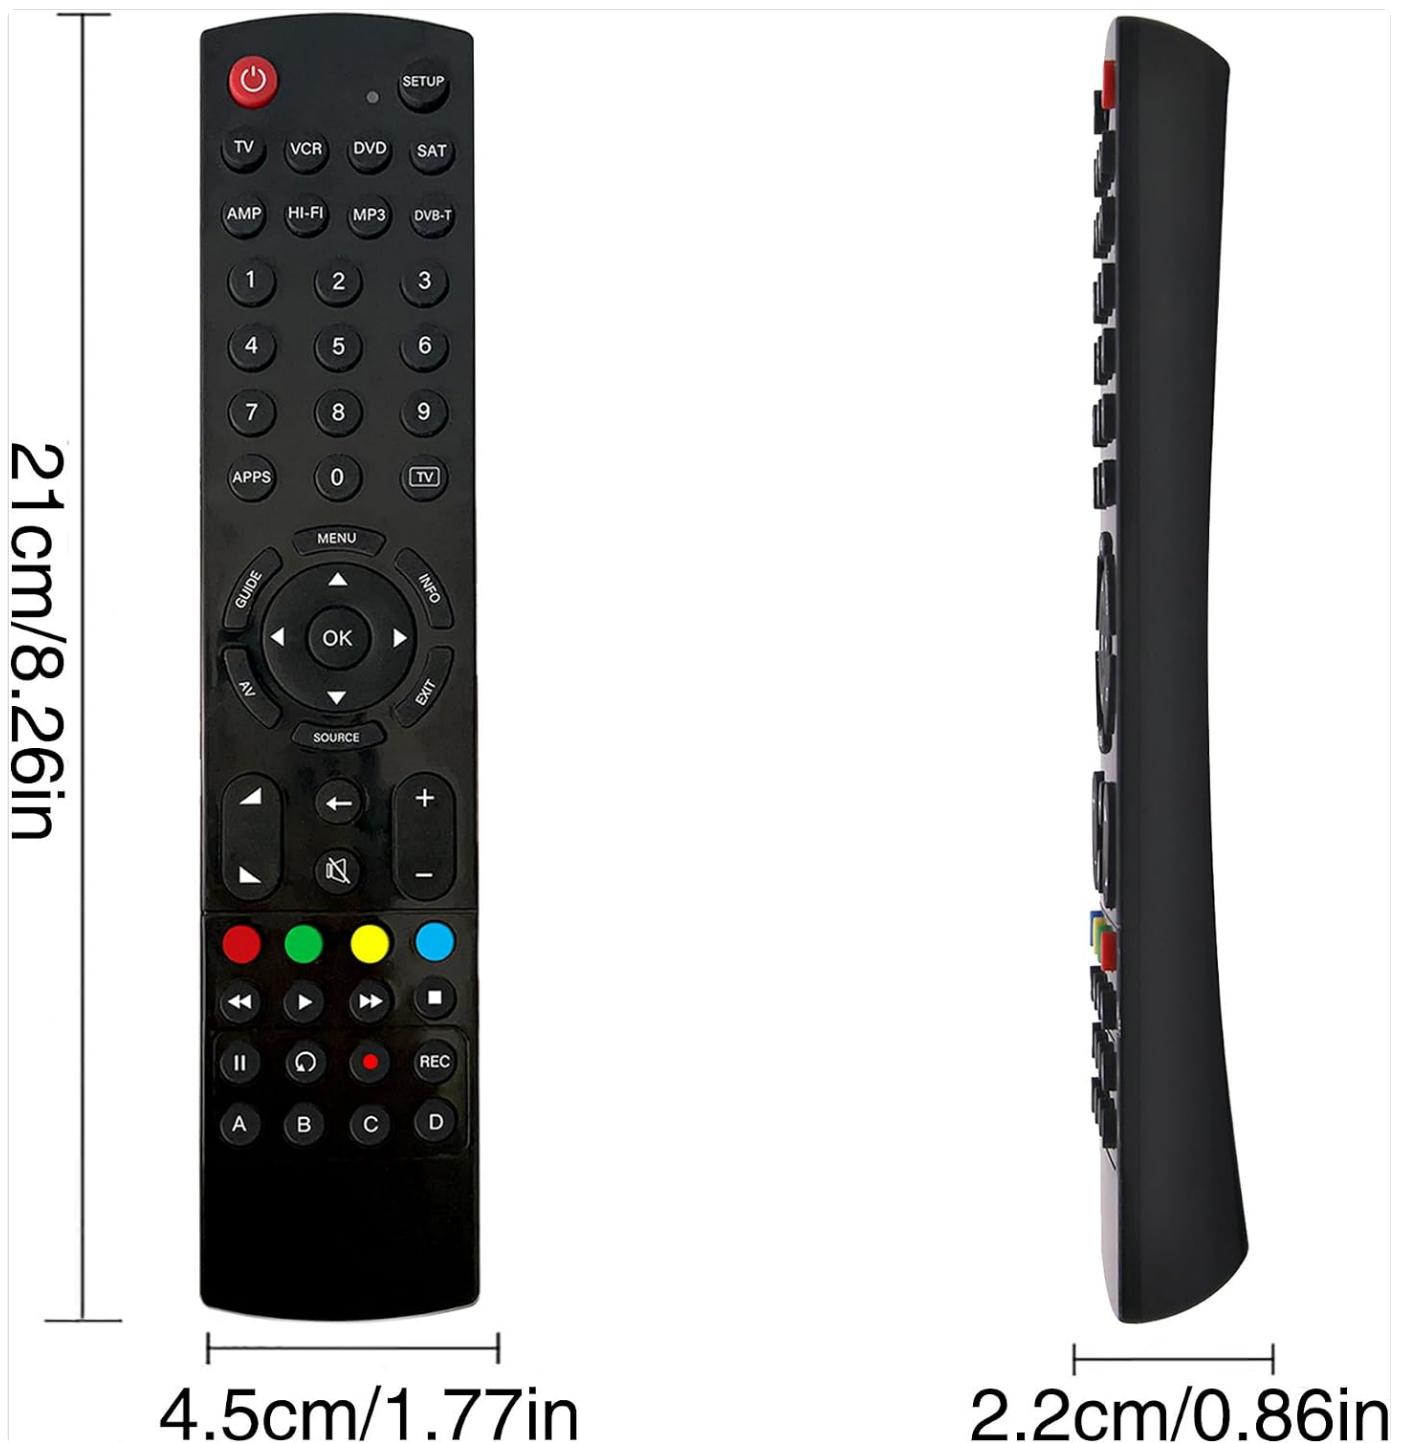


Figure 3: Overview of remote control buttons.

- **POWER (Red Button):** Turns the device on or off.
- **TV/VCR/DVD/SAT/AMP/HI-FI/MP3/DVB-T:** Device selection buttons. Press the corresponding button to control a specific device if multiple devices are programmed.
- **Number Buttons (0-9):** For direct channel selection or code entry.
- **APPS:** Accesses smart TV applications.
- **MENU/GUIDE/INFO/EXIT:** Navigation and information buttons.
- **Directional Arrows (Up/Down/Left/Right) & OK:** For menu navigation and selection.
- **AV/SOURCE:** Selects input source.
- **Volume (+/-):** Adjusts volume.
- **Channel (Up/Down):** Changes channels.
- **Mute:** Mutes or unmutes audio.
- **Colored Buttons (Red, Green, Yellow, Blue):** Often used for specific functions in Smart TV menus or teletext.

- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Record):** For controlling media playback on compatible devices.
- **A/B/C/D Buttons:** Additional function buttons, often programmable or used for specific features on certain devices.





Figure 4: Ergonomic design for comfortable daily use.

## MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or the indicator light does not illuminate. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** While designed to be durable, avoid dropping the remote control to prevent damage.

## TROUBLESHOOTING

| Problem                                        | Possible Cause                                                                                                                                                                                              | Solution                                                                                                                                                                                          |
|------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remote does not work at all.                   | <ul style="list-style-type: none"><li>◦ Batteries are dead or incorrectly inserted.</li><li>◦ Remote is not programmed.</li></ul>                                                                           | <ul style="list-style-type: none"><li>◦ Check battery polarity and replace with new AAA batteries.</li><li>◦ Follow the "Programming the Remote Control" instructions.</li></ul>                  |
| Remote controls some functions but not others. | <ul style="list-style-type: none"><li>◦ The programmed code is not fully compatible.</li></ul>                                                                                                              | <ul style="list-style-type: none"><li>◦ Try programming the remote again using a different code for your device brand (if available) or repeat the automatic search.</li></ul>                    |
| Device does not respond to remote commands.    | <ul style="list-style-type: none"><li>◦ Remote is not pointed directly at the device's IR receiver.</li><li>◦ Obstruction between remote and device.</li><li>◦ Remote is too far from the device.</li></ul> | <ul style="list-style-type: none"><li>◦ Ensure a clear line of sight between the remote and the device.</li><li>◦ Move closer to the device (maximum range is approximately 10 meters).</li></ul> |
| Indicator light does not turn on during setup. | <ul style="list-style-type: none"><li>◦ SETUP button not held long enough.</li><li>◦ Batteries are low or dead.</li></ul>                                                                                   | <ul style="list-style-type: none"><li>◦ Hold the SETUP button until the light stays on.</li><li>◦ Replace batteries.</li></ul>                                                                    |

## SPECIFICATIONS

| Feature                   | Detail                                                                                              |
|---------------------------|-----------------------------------------------------------------------------------------------------|
| Brand                     | SIUMAL                                                                                              |
| Model Name                | Universal IR Remote Control (B0CZ5WT8W5)                                                            |
| Connectivity Technology   | Infrared (IR)                                                                                       |
| Compatible Devices        | TV, Samsung, LG, Sony, Panasonic, Toshiba, Haier, Philips, TCL, Smart TV, DVD, Blu-Ray, Set-top Box |
| Maximum Supported Devices | 1 (at a time, programmable for multiple types)                                                      |
| Controller Type           | Button Control                                                                                      |
| Maximum Range             | Approximately 10 meters (33 feet)                                                                   |
| Power Source              | 2 x AAA Batteries (not included)                                                                    |
| Material                  | ABS (Lightweight and durable)                                                                       |
| Weight (Package)          | Approximately 60 g                                                                                  |
| Dimensions                | 6.57 x 1.85 x 0.78 inches (16.7 x 4.7 x 2 cm)                                                       |
| Country of Origin         | China                                                                                               |



Figure 5: Remote control dimensions.

## WARRANTY INFORMATION

---

This SIUMAL Universal IR Remote Control comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper battery installation.

Please retain your proof of purchase for warranty claims.

## SUPPORT

---

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact SIUMAL customer support through the retailer where you purchased the product.

Please have your product model number (B0CZ5WT8W5) and proof of purchase ready when contacting support.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**