

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TELESIN](#) /

› [TELESIN S2 Quick Release Backpack Clip + Magnetic Mount Instruction Manual](#)

TELESIN S2 Quick Release Backpack Clip + Magnetic Mount

TELESIN S2 Quick Release Backpack Clip + Magnetic Mount Instruction Manual

1. PRODUCT OVERVIEW

The TELESIN S2 Quick Release Backpack Clip + Magnetic Mount is a versatile accessory designed for attaching action cameras and smartphones to various surfaces. It features a quick-release mechanism for fast camera attachment and detachment, a magnetic base for metal surfaces, and a robust clip for backpack straps. This mount is ideal for capturing point-of-view (POV) footage and vlogs during outdoor activities such as climbing, cycling, hiking, skiing, and more.

Its lightweight design (70g / 0.15lb) ensures portability and comfort during use. The integrated 360° rotation ball head allows for flexible horizontal and vertical shooting angles.

2. PACKAGE CONTENTS

Please verify that all the following items are included in your package:

- 1 x Quick Adapter Base
- 1 x Magnetic Backpack Clip
- 1 x Locking Screw

Note: Cameras, frame cases, and other accessories shown in product images are not included.

3. SETUP INSTRUCTIONS

3.1 Attaching the Quick Adapter Base to your Camera

1. Align the Quick Adapter Base with your action camera's mounting interface.
2. Insert the provided Locking Screw through the adapter and into your camera's mount.
3. Tighten the Locking Screw securely to ensure the camera is firmly attached to the Quick Adapter Base.

3.2 Attaching the Magnetic Backpack Clip

The Magnetic Backpack Clip offers two primary attachment methods:

- 1. Backpack Strap Attachment:** Open the clip by pressing the two sides. Position the clip over a backpack strap or belt, ensuring the strap is securely seated within the serrated jaws of the clip. Release the clip to secure it. The strong springs and multi-row serrations provide a firm grip, preventing slippage during activity.
- 2. Magnetic Surface Attachment:** The back of the clip features powerful magnets. Attach the clip directly to any suitable metal surface for quick and easy mounting.

Quick Release System

*Some accessories require additional purchase


Suitable for all kinds of quick release systems



Image: The TELESIN S2 Quick Release System illustrating its adaptability to different mounting scenarios, including tripods, chest harnesses, and backpack straps.

Enhanced stability and strong locking

Bold springs and large serrations for enhanced grip, preventing camera slippage

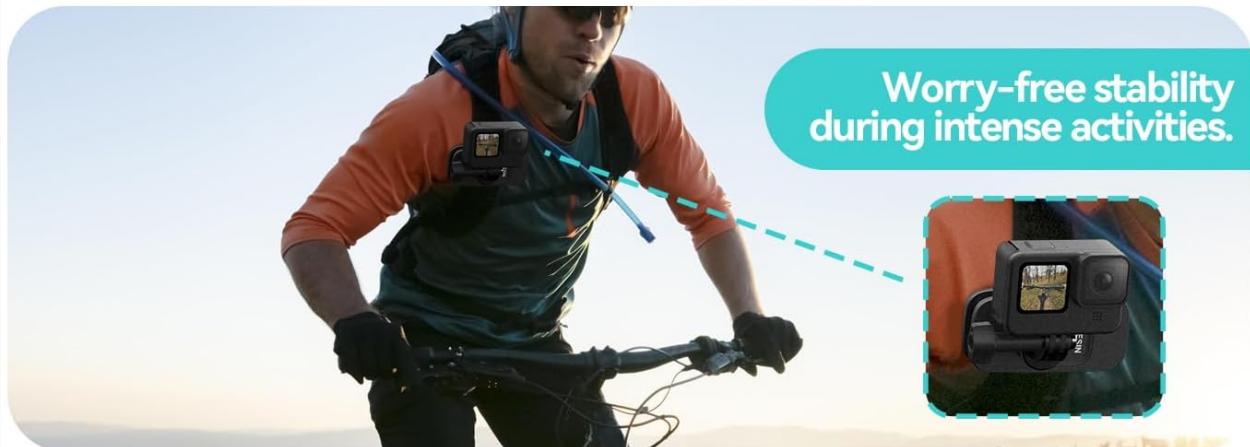

Multi-row serrat



Strong spring

Image: Close-up view of the TELESIN S2 Backpack Clip highlighting its multi-row serrat and strong springs for enhanced stability and grip on fabric.

3.3 Connecting the Camera to the Backpack Clip

1. With the Quick Adapter Base attached to your camera, align it with the receiving slot on the Magnetic Backpack Clip.
2. Press the camera and adapter firmly into the clip until you hear an audible click, indicating it is securely locked.
3. To release, press the quick-release button on the clip and pull the camera upwards.

Single-handed operation

Experience effortless single-handed operation with clear audible feedback.



Image: Demonstration of the TELESIN S2 Quick Release mechanism, allowing for effortless single-handed attachment and detachment of the camera.

4. OPERATING INSTRUCTIONS

4.1 Adjusting Camera Angle (360° Rotation)

The TELESIN S2 mount features a 360° rotation ball head, allowing you to easily adjust your camera's angle for various shooting perspectives:

- To adjust the angle, loosen the knob connector on the Quick Adapter Base by turning it counter-clockwise.
- Rotate the camera to your desired horizontal or vertical orientation, or tilt it for specific shots.
- Once the desired angle is achieved, tighten the knob connector by turning it clockwise to lock the camera in place.

Circular Arc Joint

Efficient use of space and avoidance of interference



Image: Illustration of the Circular Arc Joint design, which optimizes space and prevents interference, allowing for greater adjustability compared to common joints.

4.2 Compatibility

The TELESIN S2 Quick Release Backpack Clip + Magnetic Mount is widely compatible with a variety of action cameras and smartphones, including but not limited to:

- GoPro Max, Hero 13, Hero 12, Hero 11, Hero 10, Hero 9, Hero 8, Hero 7, Hero 6, Hero 5, Hero 4/3+/3/2/1, Fusion Session
- DJI Action 5 Pro, DJI Action 3, Action 4, Osmo Pocket 3
- Insta360 ONE R RS X2 X3 X4, GO2 GO3, ACE Pro
- AKASO, Xiaoyi, Dragon Touch, APEMAN, Crosstour, Apexcam, VEMONT, AKAIRIO, AKASO
- Most smartphones (requires a separate phone adapter, not included)

4.3 Product Video Guide

Your browser does not support the video tag.

Video: Official TELESIN video demonstrating the S2 Quick Release Magnetic Mount Backpack Clip for Action Cam, showcasing its features and usage scenarios.

5. MAINTENANCE

To ensure the longevity and optimal performance of your TELESIN S2 mount, follow these maintenance guidelines:

- **Cleaning:** Wipe the mount with a soft, damp cloth to remove dust, dirt, or debris. Avoid using harsh chemicals or abrasive cleaners, as they may damage the ABS material.
- **Drying:** Ensure the mount is completely dry before storage, especially after exposure to moisture, to prevent corrosion of metal components.
- **Storage:** Store the mount in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check the springs, quick-release mechanism, and locking screw for any signs of wear or damage. Replace components if necessary.

6. TROUBLESHOOTING

If you encounter any issues with your TELESIN S2 Quick Release Backpack Clip + Magnetic Mount, consider the following:

- **Camera not securely attaching:** Ensure the Quick Adapter Base is correctly aligned with the clip and pressed firmly until it clicks. Check for any obstructions in the locking mechanism.
- **Clip slipping on backpack strap:** Verify that the strap is fully inserted into the clip's jaws and that the serrations are gripping the fabric. The clip is designed for standard strap thicknesses; very thin or very thick straps might affect grip.
- **Magnetic mount not holding:** Ensure the metal surface is clean, flat, and free of debris. The magnetic strength may vary depending on the thickness and material of the metal surface.
- **Difficulty with 360° rotation:** Loosen the knob connector sufficiently before attempting to rotate. If it's too tight, rotation will be restricted.

7. SPECIFICATIONS

Feature	Detail
Weight	70g (0.15 lbs)
Dimensions	9.6cm x 4.9cm (approx. 3.78 x 1.93 inches)
Material	ABS
Mounting Type	Backpack Strap Mount, Magnetic Mount
Rotation	360° Ball Head

8. WARRANTY AND SUPPORT

TELESIN offers a **90-day free money-back and return warranty** for this product. We are committed to the quality of our products and aim to resolve any issues quickly and efficiently.

If you experience any quality problems or require assistance, please do not hesitate to contact our online customer support. For the fastest service, please visit the official TELESIN website or refer to your purchase platform for specific contact details.