

GLAKER MC5136

GLAKER Beard Trimmer User Manual

Model: MC5136

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your GLAKER MC5136 Beard Trimmer. Please read all instructions carefully before first use and retain this manual for future reference.

2. SAFETY INFORMATION

Adherence to the following safety guidelines is crucial for preventing injury and ensuring proper device function:

- **Travel Lock:** To activate or deactivate the travel lock mode, press and hold the ON/OFF button for 5 seconds. This prevents accidental power-on during transport.
- **Charging:** Use only a 5V/1A adapter for charging. The adapter is not included with the product.
- **Water Usage:** The device has an IPX6 waterproof rating, allowing for use in showers. Ensure the magnetic blade is properly attached before use in wet conditions.
- **Blade Handling:** Blades are sharp. Handle with care to avoid cuts.
- **Children:** Keep the device out of reach of children.
- **Damage:** Do not use the device if it is damaged. Contact customer support for assistance.

3. PACKAGE CONTENTS

Verify that all items are present in your GLAKER MC5136 grooming kit:

- GLAKER MC5136 Trimmer Handle
- 6 Interchangeable Magnetic Trimmer Heads (Beard Trimmer, Precision Trimmer, Foil Shaver, Hair Trimmer, Nose & Ear Trimmer, Body Trimmer)
- 4 Guide Combs (3mm, 6mm, 9mm, 12mm)
- Beard Bib Apron
- Storage Bag
- USB-C Charging Cable (adapter not included)

- Cleaning Brush



Image: The GLAKER MC5136 Beard Trimmer kit, showcasing the main unit, six magnetic cutting heads, four guide combs, beard bib, storage bag, and charging cable.

4. PRODUCT OVERVIEW

The GLAKER MC5136 is a versatile 6-in-1 grooming kit designed for various trimming needs. It features a main handle with a powerful motor and interchangeable magnetic heads for different applications.

4.1. Magnetic Cutting Heads

The trimmer utilizes magnetic cutting heads for easy attachment and removal, ensuring a secure fit during use.

x6

Magnetic Cutting Heads

Securely hold, easy to attach and remove



Image: A detailed view of the trimmer's magnetic cutting head attachment point, highlighting the secure and easy-to-use design.

4.2. Blade Technology

Equipped with 440C stainless steel blades, the trimmer provides precise cutting without pulling, ensuring a smooth grooming experience.

Ultra Sharp Blades

440C Stainless steel blades cut precisely without pulling



Image: A magnified view of the trimmer's sharp stainless steel blades, designed for efficient and comfortable cutting.

4.3. Motor Performance

The trimmer features an improved powerful motor operating at 7000 RPM, designed for smooth cutting through longer and thicker hair.



Image: An internal diagram illustrating the powerful 7000 RPM motor of the GLAKER trimmer, indicating its capability for efficient hair cutting.

5. SETUP AND CHARGING

5.1. Initial Charge

Before first use, fully charge the trimmer. Connect the USB-C charging cable to the trimmer and a 5V/1A adapter (not included). The LED display will indicate charging status. A full charge provides up to 150 minutes of cordless runtime.



Image: A close-up of the GLAKER trimmer's USB-C charging port, demonstrating its convenient charging capability.



140 Mins

**Cordless
Runtime**

Outstanding Cordless
Performance

Image: The GLAKER trimmer highlighting its long cordless runtime of 140 minutes on a full charge.

5.2. Attaching/Detaching Trimmer Heads

To attach a trimmer head, align it with the magnetic connection points on the main unit and gently push until it clicks into place. To detach, simply pull the head away from the unit.

5.3. Activating/Deactivating Travel Lock

To prevent accidental activation during travel, press and hold the power button for 5 seconds to engage or disengage the travel lock. The LED display will indicate the lock status.



Image: A visual guide demonstrating how to activate the travel lock feature on the GLAKER trimmer by pressing and holding the power button.

6. OPERATION

The GLAKER MC5136 offers versatile grooming options for various body parts.

Style Head to Toe

 
 
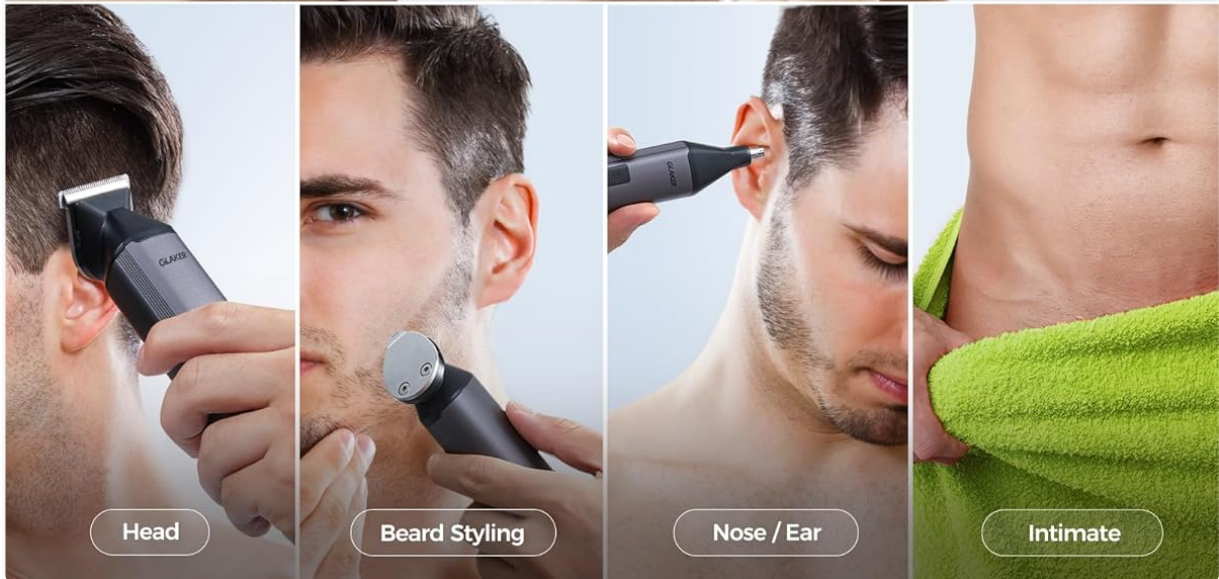 


Image: A composite image illustrating the GLAKER trimmer's multi-purpose functionality for grooming hair on the head, beard, nose/ears, and sensitive body areas.

6.1. Using Different Trimmer Heads

Select the appropriate magnetic head for your grooming needs:

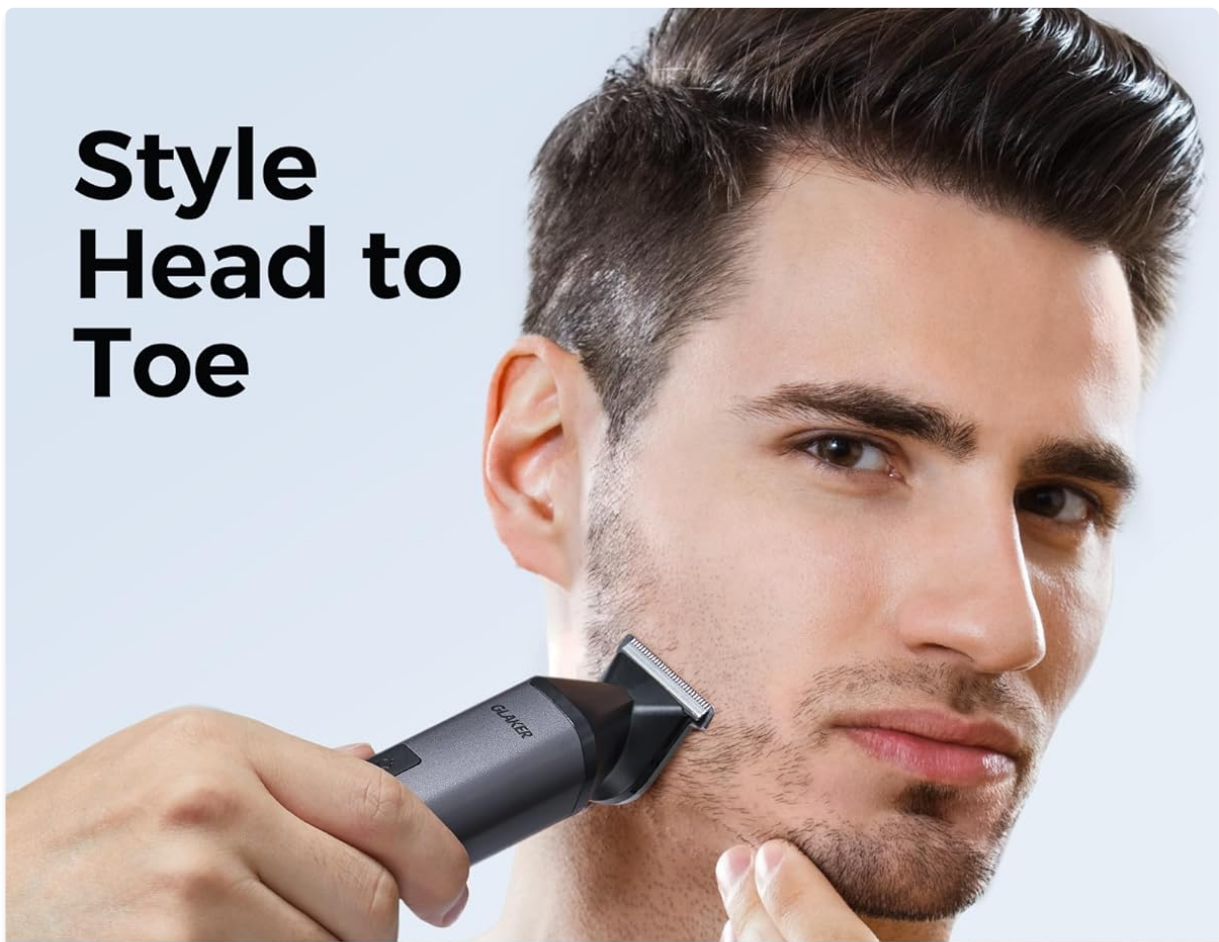

Beard Trimmer: For styling and maintaining beard length. Use with guide combs for desired length.



Precision Trimmer: Ideal for creating sharp lines and detailed styling for beards and sideburns.



Foil Shaver: For achieving a close shave on stubble, suitable for facial hair.



Hair Trimmer: For general hair cutting and styling on the head.



Nose & Ear Trimmer: Designed for painlessly removing unwanted hair from the nose and ears.



Body Trimmer: Suitable for sensitive areas and general body grooming.

Attachment for Sensitive Areas

Underarms



Chest



Intimate Areas



Image: The GLAKER trimmer demonstrating its use for sensitive body areas, including underarms, chest, and intimate regions.

6.2. Using Guide Combs

Attach one of the four adjustable guide combs (3mm, 6mm, 9mm, 12mm) to the beard or hair trimmer head to achieve desired hair length. Ensure the comb is securely attached before trimming.

6.3. Wet and Dry Use

The GLAKER MC5136 is IPX6 waterproof, allowing for both dry and wet shaving, including use in the shower. For wet shaving, apply shaving foam or gel for a smoother experience.



IPX6

Can be use in the shower



Image: A man using the GLAKER trimmer while showering, illustrating the device's IPX6 waterproof capability for convenient wet grooming.



Image: A man applying shaving foam and using the GLAKER trimmer on his face, emphasizing its gentle contact with the skin during shaving.

7. MAINTENANCE

7.1. Cleaning

After each use, detach the trimmer head and rinse it under running water. The main unit can also be rinsed due to its IPX6 waterproof rating. Use the included cleaning brush to remove any trapped hairs from the blades.

Improved Powerful Motor

For smooth cutting on longer, thicker hair

 7000RPM



Image: The GLAKER trimmer and its detachable heads positioned near a sink, illustrating the ease of cleaning under running water.

7.2. Blade Care

For optimal performance and longevity, periodically apply a small drop of lubricating oil (not included) to the blades after cleaning and drying. This helps maintain sharpness and smooth operation.

7.3. Storage

Store the trimmer and all accessories in the provided storage case when not in use. Ensure the device is clean and dry before storing. Store in a cool, dry place away from direct sunlight.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted; Travel lock is active.	Charge the trimmer fully. Deactivate travel lock by pressing and holding the ON/OFF button for 5 seconds.
Poor cutting performance or pulling hair.	Blades are dull or clogged with hair; Battery is low.	Clean the blades thoroughly. Apply lubricating oil. Ensure the trimmer is fully charged.
Trimmer turns off accidentally during use.	Accidental press of the power button.	Adjust grip to avoid accidental contact with the power button. Engage travel lock if not actively trimming.
Trimmer head is difficult to attach/detach.	Debris in magnetic connection; Incorrect alignment.	Ensure connection points are clean. Align the head correctly with the magnetic points before pushing.

9. SPECIFICATIONS

Feature	Detail
Model Number	MC5136

Feature	Detail
Power Source	Rechargeable Lithium-Ion Battery
Charging Time	Approximately 2 Hours
Runtime	2 hours and 20 minutes
Waterproof Rating	IPX6
Motor Speed	7000 RPM
Product Dimensions	1.97 x 3.94 x 6.3 inches
Weight	6.88 ounces

10. WARRANTY AND SUPPORT

GLAKER products come with a **1-Year Warranty**, ensuring reliable support and a worry-free experience. For product support, troubleshooting assistance, or warranty claims, please contact GLAKER customer service through the official GLAKER store on Amazon or visit the GLAKER website.

Online Resources:

- [GLAKER Official Amazon Store](#)