

## AULCMEET RC4390

# AULCMEET RC4390 Replacement Remote Control User Manual

Model: RC4390

## 1. INTRODUCTION

This manual provides comprehensive instructions for the AULCMEET RC4390 Replacement Remote Control. This remote is engineered to function as a direct replacement for a wide range of Telefunken TV models, ensuring seamless compatibility without the need for complex programming or setup. Simply insert the required batteries, and the remote will be ready for immediate use.

Compatible models include, but are not limited to: RC4390, L24H472F4CWV-WI, D65U400N4CWH, D50U293N4CWH, JT-55UBS300, TE43292S31Y2P, D43U297N4CWH, D32H287M4CWI, SOMNIA24ESTV, 40DTF531, D50U600M4CWH, XU43E512, TFL 32 SWB17/2, D32H289N4CWI, L55U405N4CWH, D43U700M4CWH, SOMNIA40DSTV, 49DTU652, D32H289N4CWD, D40U297M4CW, D40U298N4CWH, D49U700M4CWH, XU55E512, JT-65UBS300, D55U297N4CWH, D32F289M4CWII, 55DTU652, 32DTH531, and D43U600M4CWI.





Figure 1: Front view of the AULCMEET RC4390 replacement remote control, displaying the full button layout including the number pad, navigation controls, volume, channel, and dedicated Netflix and YouTube buttons.

## 2. SETUP

---

### 2.1 Battery Installation

The AULCMEET RC4390 remote control operates on two (2) AAA alkaline batteries, which are not included with the product. Please ensure you have fresh batteries available for installation.

1. Locate the battery compartment on the rear side of the remote control.
2. Gently slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries into the compartment. Pay close attention to the positive (+) and negative (-) polarity markings inside the compartment and align the batteries accordingly.
4. Slide the battery compartment cover back into its original position until it securely clicks into place.





Figure 2: Back view of the remote control with the battery cover removed, illustrating the correct orientation for inserting AAA batteries into the compartment.

## 2.2 Initial Use

Upon successful battery installation, the remote control is immediately ready for use. There is no requirement for programming, pairing, or any complex setup procedures. Simply point the remote control towards your compatible Telefunken TV and begin operating it as you would with the original remote.

## 3. OPERATING INSTRUCTIONS

---

The RC4390 remote control offers comprehensive functionality for your compatible Telefunken television. Below is a general overview of its primary functions and button usage:

- **Power Button** (⏻): Located at the top-left, this button is used to switch the television on or off.
- **Number Pad (0-9)**: Allows for direct input of channel numbers or other numerical data.
- **Volume Control** (+ / -): Adjusts the audio output level of the television.
- **Channel Control** (▲ / ▼): Navigates through television channels sequentially.
- **Mute Button** (⏻): Toggles the television's sound on and off.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Used for navigating through on-screen menus, selecting options, and confirming choices. The central 'OK' button confirms selections.
- **Back Button**: Returns to the previous screen, menu, or step.
- **Exit Button**: Closes the current menu, application, or on-screen display.
- **Netflix Button**: Provides direct, one-touch access to the Netflix streaming application.
- **YouTube Button**: Provides direct, one-touch access to the YouTube streaming application.
- **Media Playback Controls**: Includes standard buttons such as Play, Pause, Stop, Fast Forward, Rewind, Next Track, and Previous Track for controlling media playback.



Figure 3: Angled view of the remote control, showcasing its ergonomic design and the clear arrangement of all functional buttons for easy access.

## 4. MAINTENANCE

### 4.1 Cleaning

To maintain the cleanliness and functionality of your remote control, use a soft, dry cloth for regular dusting. For more persistent dirt or smudges, lightly dampen the cloth with water or a mild, non-abrasive cleaning solution. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface, buttons, or internal electronics.

### 4.2 Battery Replacement

Replace the batteries when you notice a decrease in the remote's responsiveness, or if it ceases to function entirely. Always replace both AAA batteries simultaneously with new, fresh alkaline batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to improper operation or battery leakage.

## 4.3 Storage

Store the remote control in a cool, dry environment, away from direct sunlight, extreme temperatures, and high humidity. If the remote control will not be used for an extended period, it is advisable to remove the batteries to prevent potential leakage and damage to the device.

## 5. TROUBLESHOOTING

If you encounter any issues while using your AULCMEET RC4390 remote control, please refer to the troubleshooting table below for common problems and their solutions.

Problem	Possible Cause	Solution
Remote control is unresponsive.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity (+/-).
Poor remote control range or intermittent response.	Weak batteries; Obstruction between remote and TV; TV's infrared sensor is blocked.	Replace batteries. Ensure a clear, unobstructed line of sight between the remote's infrared emitter and the TV's infrared sensor. Remove any objects blocking the signal.
Specific buttons are not functioning.	Dirt or debris lodged under the button; Remote control malfunction.	Clean the remote control thoroughly, especially around the affected buttons. If the issue persists, the remote may be faulty.
Remote works for some TV models but not others.	TV model not listed as compatible.	Verify that your specific Telefunken TV model is included in the list of compatible models provided in Section 1.

## 6. SPECIFICATIONS

Detailed technical specifications for the AULCMEET RC4390 Replacement Remote Control:

- **Model Name:** RC4390
- **Brand:** AULCMEET
- **Connectivity Technology:** Infrared (IR)
- **Maximum Operating Range:** Approximately 10 Meters (33 feet)
- **Power Supply:** 2 x AAA Alkaline Batteries (not included)
- **Product Dimensions (L x W x H):** 21.5 x 5 x 2 cm (8.46 x 1.97 x 0.79 inches)
- **Item Weight:** 83 grams (0.18 lbs)
- **Manufacturer:** AULCMEETFAC

## 7. SUPPORT

For any further questions, technical assistance, or support regarding your AULCMEET RC4390 Replacement Remote Control, please do not hesitate to contact our customer support team. We are committed to providing timely assistance and aim to respond to all inquiries within 24 hours.

Please refer to your product's purchase documentation or the retailer's website for specific contact information or to access official AULCMEET support channels.