

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [maysida](#) /

> [maysida Kids BBQ Grill Playset with Smoke, Sound & Light, Model WD-809A Instruction Manual](#)

maysida WD-809A

maysida Kids BBQ Grill Playset with Smoke, Sound & Light, Model WD-809A Instruction Manual

Model: WD-809A | Brand: maysida



1. INTRODUCTION

This instruction manual provides essential information for the safe assembly, operation, and maintenance of your maysida Kids BBQ Grill Playset. Please read this manual thoroughly before use and retain it for future reference.



Image: The maysida Kids BBQ Grill Playset, showcasing its vibrant red and grey design, complete with various play food items and utensils, set against a lush green background.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Adult supervision is recommended during play.
- Ensure all parts are securely assembled before allowing children to play.
- The smoke effect is generated by water vapor and is safe. Do not use any other liquids.
- Requires 3 AA batteries (not included). Ensure batteries are inserted correctly according to polarity markings.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the toy is not used for an extended period.
- Keep small accessories away from very young children to prevent choking.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- BBQ Grill Set (main unit with lid, grill grates, side tables, base)
- Play Food Items: Charcoal, Lighter, Corn, Broccoli, Mushroom, Bell Peppers, Potato, Mini Sausages, Burger, Hot Dog, Beef, Sausage, Hamburger components (bun, patty, cheese, lettuce, tomato)
- Utensils: Spatula, Tong, Kitchen Knife, Table Knife, Spoons, Fork
- Condiments & Accessories: Cup, Plates, Ketchup, Honey Mustard, Sea Salt, Oil Bottle, Chili, Tablecloth



Image: A comprehensive display of all accessories included with the playset, featuring various play food items, cooking utensils, and condiment bottles, arranged neatly around the grill unit.

4. SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble Base:** Attach the four legs to the main grill body, ensuring they click securely into place. The bottom storage shelf can be placed between the legs.
3. **Attach Side Tables:** Secure the two side tables to the main grill unit. These tables provide additional space for

play food and accessories.

4. **Insert Grill Grates:** Place the main grill grate into the designated slot on the grill. The playset features a double-deck design; attach the upper grill rack if desired.
5. **Battery Installation:** Locate the battery compartment (usually on the underside of the main grill unit or within the charcoal tray). Insert 3 AA batteries (not included), observing correct polarity. Close the battery compartment securely.
6. **Water for Smoke Effect:** For the smoke function, locate the water reservoir (often within the charcoal tray or smoke stack). Fill it with a small amount of clean water. Do not overfill.
7. **Organize Accessories:** Hang utensils on the hooks provided on the grill lid or side tables. Arrange play food and condiments as desired.



Image: Detailed view of the grill's features, including the battery compartment for power, the water reservoir for the smoke effect, and the interactive lighter for activating lights and sounds.

5. OPERATING INSTRUCTIONS

5.1 Activating Smoke, Sound, and Light Effects

- Ensure batteries are installed and the water reservoir is filled (if using smoke effect).
- Turn on the main power switch (usually located near the battery compartment or on the grill's control panel).
- Use the special lighter accessory to touch the designated sensor on the grill grate. This will activate realistic grilling sounds, glowing charcoal lights, and a safe water vapor smoke effect.
- To turn off the effects, touch the sensor again with the lighter accessory.



Image: Children engaging with the playset, highlighting the realistic smoke, charcoal light, and sound effects that enhance the pretend play experience.

5.2 Pretend Cooking Activities

- **Grilling:** Place play food items like hot dogs, sausages, steaks, corn, and vegetables directly on the grill grates.
- **Frying:** Use the included play pans to "fry" items like steak or sausages on the designated cooking areas.
- **Food Preparation:** Utilize the play knife and cutting board to "slice" vegetables or other food items that feature self-stick tabs for a realistic "crunch" sound.

- **Serving:** Use the plates, cups, and utensils to serve the prepared meals. Condiment bottles can be used for added realism.



Image: A visual guide demonstrating various pretend cooking actions, such as pan-searing steak, preparing hot dogs, and assembling hamburgers, encouraging imaginative play.

5.3 Official Product Video

Your browser does not support the video tag.

Video: An official product video from maysida toys showcasing the BBQ Grill Set in action, highlighting its features and play possibilities.

6. MAINTENANCE

- **Cleaning:** Wipe down all plastic surfaces with a damp cloth and mild soap. Do not immerse electronic components in water.
- **Drying:** Ensure all parts are completely dry before storage to prevent mold or mildew.
- **Storage:** Store the playset in a cool, dry place away from direct sunlight. The grill lid can be closed to keep

accessories contained.

- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No smoke/sound/light effect	Batteries are dead or incorrectly installed. Water reservoir is empty. Lighter not touching sensor correctly.	Replace batteries or ensure correct polarity. Refill water reservoir. Ensure firm contact between lighter and sensor.
Accessories fall when closing lid	Utensils are not securely hung or are too bulky.	Ensure utensils are properly seated on hooks. Consider storing some accessories separately if they prevent the lid from closing.
Smoke effect is weak or inconsistent	Insufficient water or air blockage.	Ensure water reservoir is adequately filled. Check for any obstructions in the smoke stack.

8. SPECIFICATIONS

- **Model Number:** WD-809A
- **Product Dimensions:** 0.1 x 0.1 x 0.1 inches (Note: These dimensions appear to be placeholder/incorrect from source data, actual product dimensions may vary)
- **Item Weight:** 5.1 pounds
- **Recommended Age:** 3 years and up
- **Material:** Quality ABS Plastic (Non-toxic, Non-BPA)
- **Power Source:** 3 AA batteries (not included)
- **Features:** Realistic smoke (water vapor), LED lights, sound effects, double-deck grill, expanding side tables.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact maysida customer service through the retailer where the product was purchased or visit the official maysida brand store online.

Online Store: [maysida Store on Amazon](#)



© 2023 maysida. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.