

ZdalaMit CT90479

ZdalaMit Universal Replacement Remote Control for Toshiba Regza TVs

Model: CT90479

INTRODUCTION

This instruction manual provides essential information for the proper use and maintenance of your ZdalaMit Universal Replacement Remote Control (Model CT90479) for Toshiba Regza TVs. This remote is designed to be a direct replacement for several original Toshiba Regza remote models, offering immediate functionality without complex setup.

Compatibility: This remote control is compatible with a wide range of Toshiba Regza TV models, including but not limited to: 40/50/58M510X, 49/55BZ710X, 43/49/55J10X, 50/58/65/84Z9X, 43/49/55Z700X, 32/40V30, 32/40V31, 43/49/55G20X, 40/50/58M500X, 43/49C310X, 43/49/55J10. It also replaces original remote models such as CT-90467, CT-90466, CT-90453, CT-90478, CT-90479, CT-90475, CT-90463, CT-90481, and CT-90480.

以下のリモコンは互換性がある、幅広い用途に対応し、快適な生活をもたらします。
一部のボタンの位置は純正の toshiba テレビリモコンとは異なりますが、リモコンの機能性は純正の regza リモコンと一致しているので安心して下さい。

 


リモコンの設定を変更する

2台のREGZAをそれぞれのリモコンで操作する

- 同じ室内で東芝のテレビを2台使用している場合などに、リモコンを操作すると2台とも反応してしまうことがあります。このような場合、リモコンコードの設定を変えれば1台だけが操作できるようになります。
- ※ 必ず以下の手順で操作してください。手順が異なるとリモコン操作ができなくなります。

3 ◀▶で「はい」を選び、決定を押す




- 今までと異なるコードに設定した場合、次の手順4を終えるまでの間リモコン操作ができなくなります。

テレビ本体のボタンで設定するとき

- テレビ本体のリモコンコードを、本体の操作ボタンを使って以下の手順で設定することもできます。

 1 設定 を押し、▲▼と決定で「機能設定」⇒「リモコン設定」⇒「リモコンコード設定」の順に進む



4 決定を押したままで、1または2を約2秒間以上押し続ける

- 手順2～3で「リモコンコード1」に設定した場合は1を、「リモコンコード2」に設定した場合は2を押し続けます。
- ※ この操作ができるのは、付属のリモコンだけです。

 
1 本体の決定 を押し続ける

- 「リモコンコード設定」のメニュー画面が表示されたらボタンから手を離します。

2 決定でリモコンコードを選び、決定を押す

3 決定で「はい」を選び、決定を押す

2 ▲▼で「リモコンコード1」または「リモコンコード2」を選び、決定を押す




5 リモコンでテレビが操作できることを確認する

リモコンの乾電池を取りはずした場合(電池交換などの際)、「リモコンコード1」になることがあります。

1 設定 を押し、▲▼と決定で「機能設定」⇒「リモコン設定」⇒「操作無効設定」の順に進む

 2 ▲▼でボタンを選び、決定を押す



- 決定を押すたびに「有効」と「無効」が交互に切り替わります。

使わない放送選択ボタンの操作を無効にする

- リモコンの放送選択ボタン(地デジ、BS、CS)のうち、使用しないボタンの操作を無効にすることができます。

Image: A visual comparison showing the ZdalaMit remote alongside several original Toshiba Regza remote models (CT-90453 to CT-90481), illustrating its broad compatibility.

SETUP

Battery Installation

This remote control requires two AAA alkaline batteries (sold separately). No programming or complex setup is needed. Simply insert the batteries, and the remote is ready for use with your compatible Toshiba Regza TV.

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the indicators inside the compartment.
3. Close the battery compartment cover securely.

設定不要



リモコンの信号のシンクロを設定済みなので、
複雑な設定の必要がなく電池を入れただけで
すぐに使えるリモコンです。

Image: A hand holding the remote control in front of a television, emphasizing the 'No Setup Required' feature. The remote is ready to use after battery insertion.

外観も人工工学を考慮して設計され、右手でも左手でも親指がカーソルボタンにしっかり届き、握り心地が快適です。



Image: Side and back views of the remote control, illustrating its dimensions (240mm length, 52mm width, 19mm thickness) and the battery compartment for two AAA batteries.

OPERATION

The ZdalaMit remote control is designed for intuitive operation, mirroring the functions of original Toshiba Regza TV remotes. Point the remote directly at your TV's infrared receiver for optimal performance.

Button Functions

Refer to the diagram below for a detailed overview of each button's function:



Image: A comprehensive diagram illustrating the layout and function of each button on the ZdalaMit remote control. Key functions include: Input Selection, Power, Screen Display, Clear Audio, Program Guide, Netflix, Number Buttons (1-12), Channel Up/Down, Volume Up/Down, Mute, Sub-menu, Data, Time Shift Link, Scene Search, Record List, Program Guide, Navigation (Up/Down/Left/Right), OK/Enter, Back, Exit, Playback Controls (Play, Fast Forward, Rewind, Stop, Pause, Skip), Settings, Subtitles, Audio, and various colored function buttons.

Comfortable and Wide-Range Operation

The remote features soft, durable silicone buttons and an ergonomic design for comfortable handling. Its infrared signal provides an operating distance of approximately 10 meters (33 feet) and a wide control angle of up to 120 degrees, allowing flexible use within your room.



Image: Close-up views of the remote control, highlighting the comfortable silicone buttons and the ergonomic design that enhances usability and tactile feedback.



Image: A person using the remote control in a living room, demonstrating its wide operating range of approximately 10 meters and broad control angle, allowing for comfortable use from various positions.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Make sure you are within the operating range (approximately 10 meters) and pointing the remote directly at the TV.
- **Some buttons do not work:**
 - While this remote is highly compatible, some specific functions or buttons on your original TV remote might not be present or might operate differently on this replacement remote. This is generally due to variations in TV models and original remote designs.
 - Ensure your TV model is listed as compatible.
- **Interference with other devices:**
 - This remote uses infrared technology, which is generally not prone to interference from other infrared devices unless

they are directly in the line of sight and operating on the same frequency. If you experience interference, try to minimize other infrared device usage or reposition devices.

SPECIFICATIONS

Feature	Description
Brand	ZdalaMit
Model Number	CT90479
Compatibility	Toshiba Regza TVs (various models), replaces CT-90467, CT-90466, CT-90453, CT-90478, CT-90479, CT-90475, CT-90463, CT-90481, CT-90480
Special Feature	No programming required
Color	As shown (typically silver/black)
Max Number of Supported Devices	1 (Television)
Communication Interface	Infrared (IR)
Number of Buttons	60
Controller Type	Button Control
Maximum Range	10 meters (approx. 33 feet)
Battery Type	AAA Alkaline (x2, not included)
Product Dimensions (L x W x H)	24 cm x 5.3 cm x 2.1 cm (approx. 9.45 x 2.09 x 0.83 inches)

WARRANTY INFORMATION

Please refer to the retailer or manufacturer's website for specific warranty terms and conditions. Typically, replacement remote controls come with a limited warranty covering manufacturing defects.

CUSTOMER SUPPORT

For further assistance or inquiries regarding your ZdalaMit Universal Replacement Remote Control, please contact the seller or refer to the product listing page where you made your purchase. Ensure you have your product model number (CT90479) and purchase details ready when contacting support.