

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VENTY](#) /

› [VENTY Portable Fan Instruction Manual](#)

VENTY 2022

VENTY Portable Fan Instruction Manual

Model: 2022

INTRODUCTION

Thank you for choosing the VENTY Portable Fan. This wireless, battery-operated fan is designed for ultimate portability and convenience, featuring 4 fan speeds, integrated LED lighting, and a remote control. It is perfect for travel, home, office, or outdoor use, and can also function as a power bank for your devices.

This manual provides essential information for the safe and efficient operation of your VENTY Portable Fan. Please read it thoroughly before use and retain it for future reference.



Image: The VENTY Portable Fan in its compact form, alongside its remote control and protective carry case.

SETUP

Unboxing and Initial Inspection

Your VENTY Portable Fan comes pre-assembled and stored within its protective carry case. Carefully remove the fan and accessories from the packaging. Inspect all components for any signs of damage. If any parts are missing or damaged, please contact customer support.

Charging the Fan

Before first use, fully charge the fan. The VENTY fan features a 16,000 mAh battery, providing up to 48 hours of operation on a single charge, and doubles as a power bank.

1. Locate the USB-C charging port on the fan's base. This is an upgraded single port for both input (charging the fan) and output (charging other devices).
2. Use one of the included USB cables (USB-C to A or USB-C to C).

3. Connect the cable to a compatible power adapter. For optimal charging, it is recommended to use a single-port charger, such as an Apple or Android charger, ideally a 27W Power Delivery (PD) type.
4. Plug the power adapter into a wall socket.
5. The fan can be used while charging.

Important Charging Notes:

- Avoid using multi-USB adapters or USB outlets for charging the fan.
- Do not use extension cords for charging.
- Using an underpowered charger (e.g., 5W) will significantly increase charging time.

CHARGING YOUR VENTY

MOST COMPLAINTS FAILED TO READ THIS

UPGRADED SINGLE PORT
Charging INPUT & OUTPUT

 
1

INCLUDED CABLES



2

PLUG CABLE INTO
YOUR APPLE OR ANDROID
PHONE CHARGING BLOCK

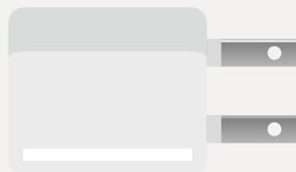

3

PLUG INTO
WALL SOCKET



AVOID USING THESE!



USB Outlets



Multi Ports



Extension Cords

Image: Visual guide for charging the VENTY fan, highlighting the single USB-C port and advising against multi-port chargers or extension cords.

Adjusting Fan Height and Orientation

The VENTY fan is designed to be highly adjustable, extending and folding for various uses.

- **Folding/Unfolding:** The fan folds compactly to 3.5 inches (9 cm) for storage and transport. To unfold, gently extend the telescopic stand.

- **Height Adjustment:** The fan can extend to over 3 feet (91 cm) in height. Pull the telescopic stand upwards to achieve the desired height.
- **Angle Adjustment:** The fan head can be manually tilted to direct airflow as needed.

EXTENDS TO OVER 3 FEET FOLDS TO 3 INCHES



Image: The fan's extendable and foldable design, demonstrating its compact storage and full height capabilities.

OPERATING INSTRUCTIONS

Controls Overview

The VENTY fan can be operated using the touch controls on its base or the included wireless remote control.

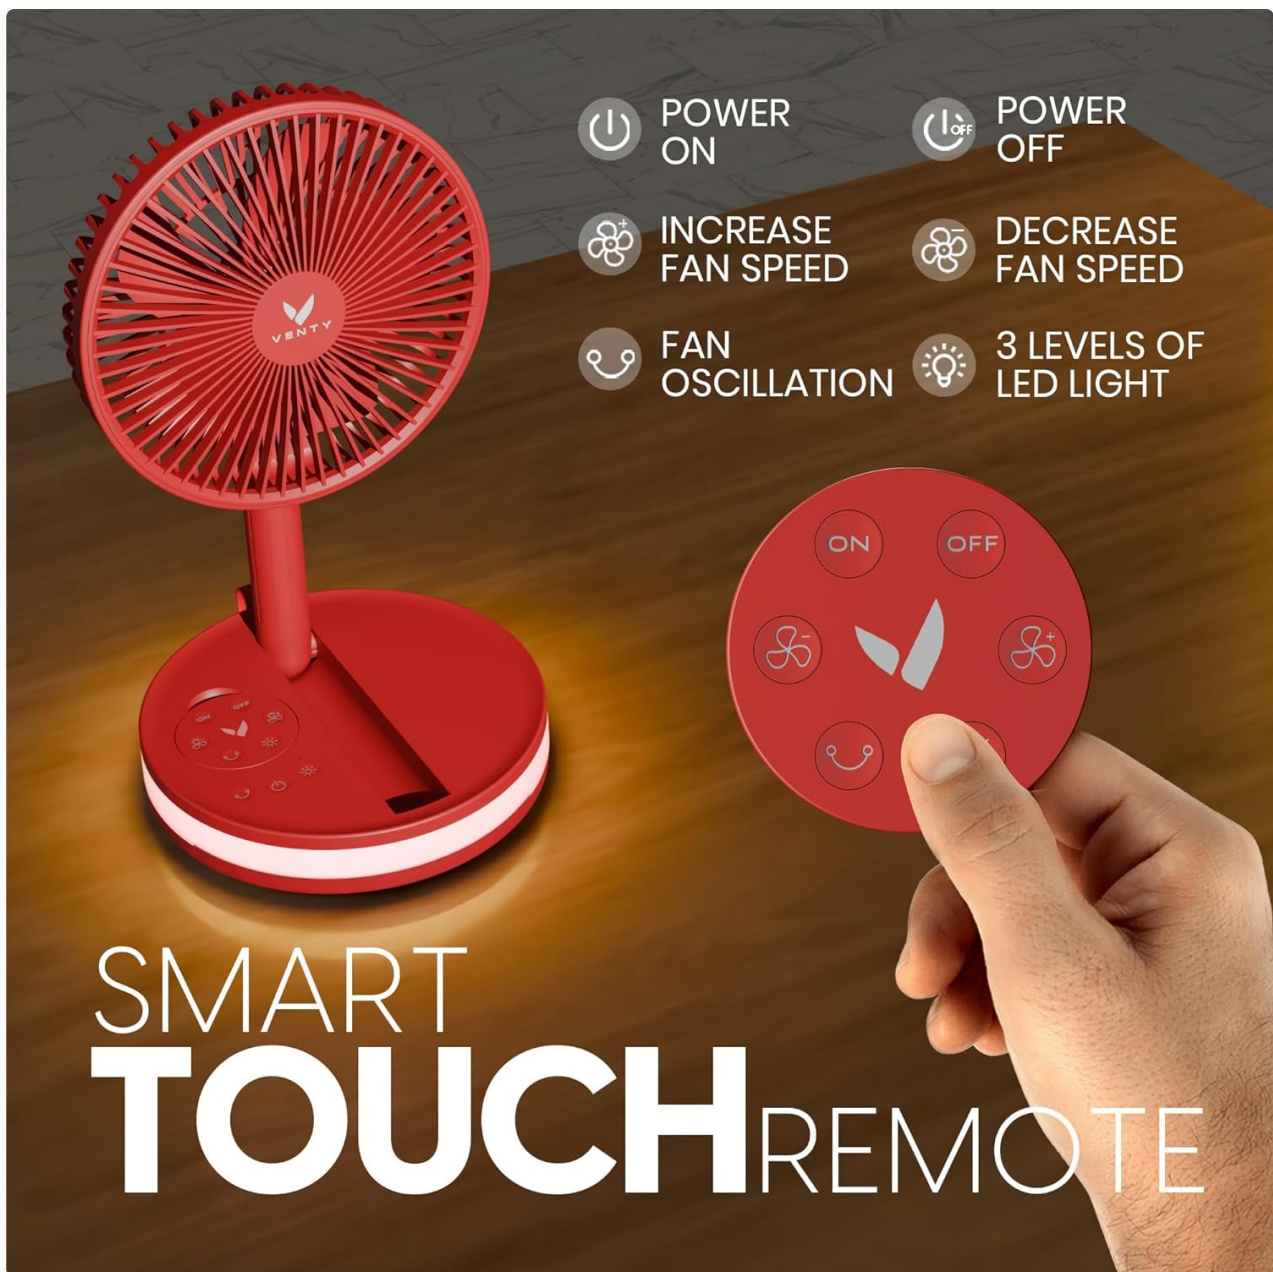 


Image: The fan's control panel and remote, illustrating the various function buttons.

Power On/Off

- **On Fan Base:** Press the power icon () to turn the fan on or off.
- **On Remote:** Press the 'ON' or 'OFF' button.

Fan Speed Adjustment

The fan has 4 adjustable speed settings.

- **On Fan Base:** Repeatedly press the fan speed icon () to cycle through speeds 1 to 4.
- **On Remote:** Use the '+' and '-' buttons to increase or decrease the fan speed incrementally.

CHILL OUT WITH VENTY FAN

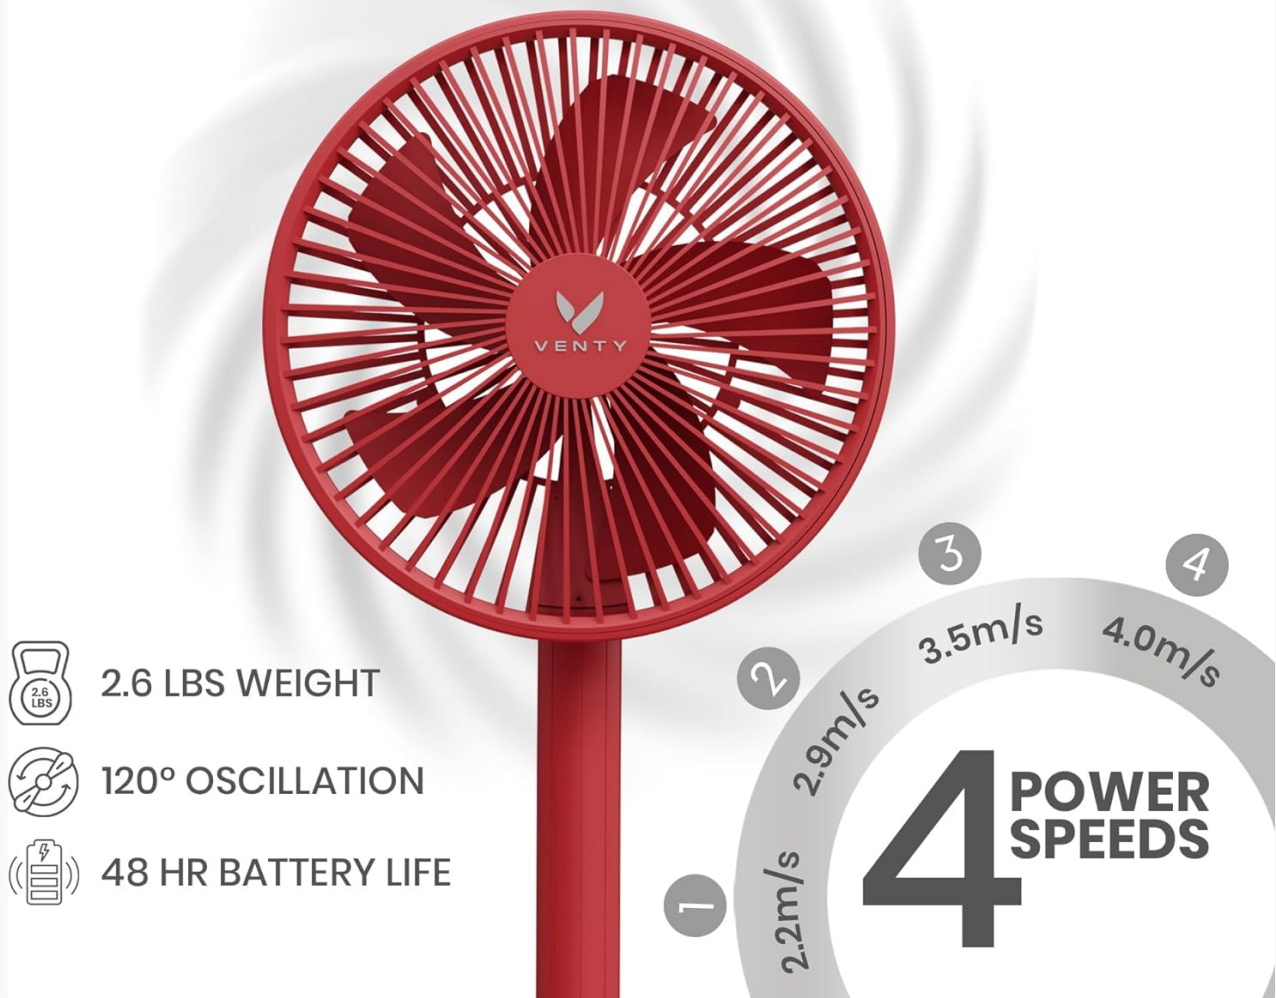 


Image: Overview of the fan's four power speeds and other specifications.

Oscillation Function

The fan offers a 120° oscillation feature to distribute airflow across a wider area.

- **On Fan Base:** Press the oscillation icon (🌀) to turn oscillation on or off.
- **On Remote:** Press the oscillation button (🌀).



Image: Visual representation of the fan's 120° oscillation capability.

LED Lighting

The fan base features warm 3-level LED ambient lighting.

- **On Fan Base:** Press the light bulb icon () to cycle through the 3 brightness levels or turn the light off.
- **On Remote:** Press the light bulb button () to cycle through brightness levels.



Image: The fan's LED lighting feature providing ambient illumination in a room.

Using as a Power Bank

The VENTY fan's 16,000 mAh battery can be used to charge other devices.

- Connect your device's charging cable to the USB-C port on the fan's base.
- The fan will begin charging your device.



USB C RECHARGEABLE

POWER THAT KEEPS YOU GOING



16,000 MAH POWER



2 FULL DAYS PER CHARGE



DOUBLES AS A POWER BANK

Image: The fan's power bank functionality, charging a smartphone via its USB-C port.

MAINTENANCE

Cleaning the Fan

Regular cleaning ensures optimal performance and extends the life of your fan.

1. Ensure the fan is turned off and unplugged from any power source before cleaning.
2. To clean the fan blades, twist the front face plate counter-clockwise to remove it. This mechanism is tool-less for easy access.
3. Wipe the fan blades and the inside of the grille with a soft, damp cloth. Do not use abrasive cleaners or solvents.
4. Wipe the exterior of the fan with a dry or slightly damp cloth.
5. Once clean and dry, align the face plate and twist clockwise to secure it back in place.

Storage

When not in use, fold the fan into its compact form and store it in the included hard shell carry case. This protects the fan from dust and damage, making it ideal for travel.



TRAVEL BUDDY

CARRY-ON & CRUISESHIP FRIENDLY

Image: The VENTY fan compactly stored within its dedicated travel case.

TROUBLESHOOTING

If you encounter issues with your VENTY Portable Fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan fully using a compatible charger and wall socket.

Problem	Possible Cause	Solution
Fan does not charge.	Incorrect charger or power source used.	Ensure you are using a single-port wall charger (e.g., 27W PD type) directly into a wall socket. Avoid multi-port adapters or extension cords.
Short battery life.	Fan is consistently used on high speed settings.	Battery life is reduced at higher fan speeds. Use lower speeds for extended operation. Ensure the fan is fully charged before use.
Remote control not responding.	Remote battery depleted or obstruction.	Ensure there is no obstruction between the remote and the fan. The remote is magnetically attached to the fan base; ensure it is properly seated or try using it detached. (Note: The remote does not use replaceable batteries, it charges with the fan).
Fan makes unusual noise.	Obstruction in fan blades or dirty blades.	Turn off and unplug the fan. Remove the front grille and clean the blades. Check for any foreign objects.

SPECIFICATIONS

Feature	Detail
Brand	VENTY
Model Name	Ventyfan
Model Number	2022
Color	Red
Power Source	Battery Powered
Battery Type	1 Lithium Polymer (included)
Battery Capacity	16,000 mAh (approx.)
Fan Speeds	4
Oscillation	120°
LED Light	3-level warm ambient light
Control Method	Remote, Touch Control
Product Dimensions (Folded)	8"D x 8"W x 3.5"H (approx.)
Product Dimensions (Extended)	8"D x 8"W x 36"H (approx.)
Item Weight	2.64 pounds (1.2 Kilograms)

Feature	Detail
Voltage	5 Volts
Included Components	Fan, Remote, Carry Case, USB-C to A Cable, USB-C to C Cable
Indoor/Outdoor Usage	Indoor
UPC	860011698418

WARRANTY AND SUPPORT

For any questions, concerns, or support needs regarding your VENTY Portable Fan, please contact our customer service team. Our team is based in Las Vegas and ready to assist you.

Please refer to your purchase documentation for specific warranty details. Keep your proof of purchase for any warranty claims.