

[Manuals.plus](#) /

> [TOPTECH](#) /

> BRAZE-4 Audio 3" Woofer Rechargeable Party Portable Speaker with 7 Colored LED Light, Powerful Sound Output, Precision-Tuned Stereo Sound, 10M Wireless Range User Manual

TOPTECH BRAZE-4-BK

BRAZE-4 Portable Party Speaker User Manual

Model: BRAZE-4-BK | Brand: TOPTECH

1. INTRODUCTION

Thank you for choosing the TOPTECH BRAZE-4 Portable Party Speaker. This speaker is designed to deliver powerful sound with vibrant LED lighting, perfect for parties, outdoor gatherings, or personal enjoyment. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.



Figure 1.1: Front view of the BRAZE-4 Portable Party Speaker, showcasing its integrated LED lights and central control panel.

2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- BRAZE-4 Portable Party Speaker
- Remote Control
- Wired Microphone
- Power Adapter
- User Manual (this document)
- Warranty Card

3. PRODUCT FEATURES

The BRAZE-4 speaker is equipped with a range of features for an enhanced audio experience:

- **Powerful Sound Output:** Features 3-inch buffer drivers for clear and robust audio.
- **Vibrant LED Light Show:** Integrated 7-colored LED lights that dance to the music, offering multiple light modes.
- **Wireless Connectivity:** Bluetooth enabled for seamless audio streaming from compatible devices within a 10-meter range.
- **Multiple Playback Options:** Supports USB, SD/TF card, FM Radio, and AUX input.
- **True Wireless Stereo (TWS):** Connect two BRAZE-4 speakers wirelessly for an immersive stereo sound experience.
- **Wired Microphone Support:** Includes a port for the wired microphone, ideal for karaoke or announcements.
- **Rechargeable Battery:** Provides up to 5 hours of standby time on a full charge.
- **Portable Design:** Compact and easy to transport for various occasions.
- **Waterproof Design:** Designed to be waterproof for outdoor use.



Figure 3.1: Overview of key features including 7 vibrant light modes and audio capabilities.



Figure 3.2: Visual representation of the speaker's various input options and features.

4. SETUP

4.1 Charging the Speaker

1. Connect the provided power adapter to the speaker's charging port.
2. Plug the adapter into a standard wall outlet.
3. The charging indicator light will illuminate. Allow approximately 3-4 hours for a full charge.
4. Once fully charged, the indicator light may change color or turn off. Disconnect the adapter.

4.2 Powering On/Off

- To power on, press and hold the **Power button**  located on the control panel until the speaker powers on.
- To power off, press and hold the **Power button** again until the speaker powers off.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (it usually defaults to Bluetooth mode upon power-on). A voice prompt or indicator light will confirm Bluetooth mode.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "BRAZE-4" from the list of found devices.
4. Once paired, the speaker will indicate a successful connection, and you can begin playing audio.

4.4 True Wireless Stereo (TWS) Pairing

To connect two BRAZE-4 speakers for a stereo experience:

1. Ensure both BRAZE-4 speakers are powered on and not connected to any Bluetooth device.
2. On one of the speakers (this will be the primary speaker), press and hold the **TWS button**  for a few seconds.
3. The speakers will attempt to pair with each other. A successful connection will be indicated by a sound prompt.
4. Once TWS paired, connect your mobile device to the primary speaker via Bluetooth as described in Section 4.3.



Figure 4.1: Illustration of connecting two BRAZE-4 speakers for True Wireless Stereo (TWS) functionality.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Functions

The central control panel on the speaker provides easy access to various functions:

- **Power Button:** Press and hold to turn the speaker on/off.
- **Play/Pause/TWS Button:** Press to play or pause audio. In Bluetooth mode, press and hold to initiate TWS pairing.
- **Volume Down / Previous Track Button (⏮):** Press to decrease volume. Press and hold to go to the previous track.
- **Volume Up / Next Track Button (⏭):** Press to increase volume. Press and hold to go to the next track.
- **Mode / LED Button (🎛):** Press to cycle through input modes (Bluetooth, USB, SD/TF, FM, AUX). Press and hold to change LED light modes.

5.2 LED Light Modes

The BRAZE-4 speaker features 7 multi-color LED lights with dynamic effects:

- **Multicolor Gradation:** Colors transition smoothly, moving back and forth and swirling.
- **Reactive Color Show:** Vivid colors run through and change to the rhythm of the music, with slowly rotating rings.
- **Sound Responsive:** Shades of colors go up and down repeatedly, synchronized with the rhythm of your music or voice.

Press and hold the **Mode / LED button** to cycle through the available light modes.



Figure 5.1: Detailed explanation of the speaker's various LED light modes.

5.3 Using USB/SD/TF Card

1. Insert a USB drive or SD/TF card (with pre-loaded audio files) into the respective port.
2. The speaker will automatically switch to USB/SD/TF mode and begin playing audio. If not, press the **Mode / LED button** to select the correct input.

5.4 FM Radio Operation

1. Press the **Mode / LED button** to switch to FM Radio mode.
2. The speaker will automatically scan and save available radio stations.
3. Use the **Previous Track** and **Next Track** buttons to navigate between saved stations.

5.5 AUX Input

1. Connect an external audio device (e.g., MP3 player, computer) to the speaker's AUX port using a 3.5mm audio cable (not included).
2. Press the **Mode / LED button** to switch to AUX mode.
3. Audio will now play through the speaker from your connected device.

5.6 Using the Wired Microphone

1. Plug the wired microphone into the designated microphone input port on the speaker.
2. Adjust the microphone volume using the speaker's controls or the remote control if available.
3. The microphone can be used simultaneously with music playback.

6. MAINTENANCE

6.1 Cleaning

- Always power off the speaker and disconnect it from any power source before cleaning.
- Use a soft, dry cloth to wipe the exterior of the speaker.
- For stubborn dirt, lightly dampen the cloth with water. Do not use harsh chemicals, cleaning solvents, or abrasive cleaners.
- Do not allow water to enter any openings or ports.

6.2 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% every 3-6 months to maintain battery health.

6.3 Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the battery to high temperatures or direct heat.
- Use only the provided or recommended charging adapter.

6.4 Waterproof Information

The BRAZE-4 speaker is designed to be waterproof. While it can withstand splashes and light rain, it is not intended for submersion in water. Ensure all port covers are securely closed before exposing the speaker to water. After exposure to water, wipe the speaker dry before charging.

7. TROUBLESHOOTING

If you encounter issues with your BRAZE-4 speaker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully using the provided adapter.
No sound from speaker.	Volume is too low or muted. Incorrect input mode. Device not connected.	Increase volume on speaker and connected device. Press Mode button to select correct input. Re-pair Bluetooth device.
Bluetooth connection fails.	Speaker not in pairing mode. Device too far. Interference.	Ensure speaker is in Bluetooth mode. Move device closer (within 10m). Turn off other Bluetooth devices. Forget and re-pair on your device.
Poor sound quality / Distortion.	Volume too high. Low battery. Source audio quality.	Reduce volume. Charge speaker. Try a different audio source.

Problem	Possible Cause	Solution
LED lights not working.	Lights turned off. Malfunction.	Press and hold the Mode / LED button to cycle through light modes. If issue persists, contact support.
TWS pairing fails.	Speakers already connected to other devices.	Ensure both speakers are disconnected from all Bluetooth devices before attempting TWS pairing.

8. SPECIFICATIONS

Feature	Specification
Model Name	BRAZE-4-BK
Speaker Type	Woofer
Special Feature	LED Light
Recommended Uses	For Smartphones or Tablets, Home, Parties, Outdoors, Beaches, Swimming Pools, Camping, Hiking, Birthday Gifts, Other Occasions
Compatible Devices	Smartphone
Controller Type	Button
Color	Black
Battery Life	5 Hours (standby time)
Included Components	Remote control, wired microphone, adapter, user manual, warranty card
Product Dimensions (DxWxH)	17.24"D x 14.17"W x 23.62"H
Is Waterproof	TRUE
Maximum Range	32.81 Feet (10 Meters)
Wireless Communication Technology	Bluetooth
Speaker Size	3 Inches
Power Source	Battery Powered
Woofer Diameter	3 Inches
Audio Driver Type	Dynamic Driver
Bluetooth Range	10 Meters
Connectivity Protocol	Bluetooth
Speaker Maximum Output Power	8 Watts

Feature	Specification
Connectivity Technology	Wireless, Bluetooth, Auxiliary, USB
Audio Output Mode	Stereo
Mounting Type	Freestanding, Plug Mount

9. WARRANTY AND SUPPORT

9.1 Limited Warranty

The BRAZE-4 Portable Party Speaker comes with a limited warranty. Please refer to the included warranty card for detailed terms and conditions, including coverage period and what is covered.

9.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact TOPTECH customer support. Refer to the contact information provided on the warranty card or the official TOPTECH website for the most up-to-date support details.

© 2025 TOPTECH. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

