

[Manuals.plus](#) /

> [RIVIERA](#) /

> RIVIERA UTV-1803 Replacement Remote Control User Manual for Roku TVs and Roku Streaming Box Players

## RIVIERA UTV-1803

# RIVIERA UTV-1803 Replacement Remote Control User Manual

For Roku TVs and Roku Streaming Box Players

## 1. INTRODUCTION

---

This manual provides instructions for the RIVIERA UTV-1803 Replacement Remote Control. This remote is designed to operate most Roku TVs and Roku Streaming Box players. It is not compatible with Roku Stick devices. Please read this manual thoroughly before use to ensure proper setup and operation.

## 2. PRODUCT OVERVIEW

---

The RIVIERA UTV-1803 is a universal 2-in-1 remote control, offering a comprehensive set of buttons for TV and streaming box functions, including dedicated app buttons.





**Image 2.1:** Front view of the RIVIERA UTV-1803 remote control, showing all buttons including power, input, navigation, volume, channel, and dedicated app buttons for Netflix, Prime Video, Sling, Hulu, Roku Channel, Disney+, ESPN+, YouTube, Vudu, Pandora, Spotify, Vue, Google Play, FandangoNOW, Cinema Now, Crackle, HBONOW, NOW, and five customizable APP buttons.

## 2.1 Compatibility

This remote is compatible with:

- Most Roku TVs (e.g., TCL, Sharp, Hisense, RCA, JVC, Hitachi, Philips, Sanyo, Element, Magnavox, Onn, Westinghouse).
- Roku Streaming Box Players.

**Note:** This remote is **NOT** compatible with Roku Stick devices.



**Image 2.2:** Visual representation of compatible devices, including various Roku TV brands and Roku Box players. Clearly indicates incompatibility with Roku Stick devices.

### 3. SETUP

#### 3.1 Battery Installation

1. Open the battery cover on the back of the remote control.
2. Insert two (2) AAA batteries, ensuring correct polarity (+/-). Batteries are not included.
3. Close the battery cover securely.

# How to install batteries for the remote control



Image 3.1: Step-by-step guide for installing AAA batteries into the remote control, showing opening the cover, inserting batteries, and closing the cover.

## 3.2 Pairing Instructions

### 3.2.1 Pairing with Roku TV (Built-in Roku)

1. Press and hold the **TV Power** button and the **OK** button simultaneously for 3 seconds until the red LED light on the remote turns on.
2. Enter the 3-digit code **202**. The LED light will turn off, indicating successful pairing.
3. Test the remote functions. If it does not work, refer to the troubleshooting section or try alternative codes if available in the full instruction manual (not provided here).



Image 3.2: Visual guide for pairing the remote with a Roku TV, showing the buttons to press and the code to enter.

### 3.2.2 Pairing with Roku Box and TV (Separate Devices)

**A. For Roku Box:** The remote can be used directly for Roku Box players without any setup.

**B. For TV (Non-Roku Built-in):**

1. **Step 1:** Press and hold the **TV Power** button and the **OK** button simultaneously for 3 seconds until the red LED light turns on.
2. **Step 2:** Input the 3-digit TV code from the list below. The LED light will turn off.
3. Test the remote functions. If it does not work, refer to the troubleshooting section or try alternative codes.

# Universal TV+Streaming BOX Remote Control



Image 3.3: Instructions for pairing the remote with a Roku Box (direct use) and a separate TV, including a table of TV brand codes.

## TV Code List:

Brand	Code List TV	Brand	Code List TV
LG	101, 115	PHILIPS	105, 116, 117, 118
SAMSUNG	102, 208	SHARP	106, 109, 110, 111, 112, 113, 114
SONY	103	VIZIO	107, 119
Panasonic	104	HISENSE	110, 111, 112, 113
INSIGNIA	121	TOSHIBA	108, 120, 206

If the remote does not function after entering a code, try other codes for your brand or proceed to the learning functions section.

### 3.2.3 Pairing with TV Only (Not Built-in Roku)

- Step 1:** Press and hold the **TV Power** button and the **Sleep** button simultaneously for 3 seconds until the red LED light turns on.
- Step 2:** Input the 3-digit TV code from the list provided in Section 3.2.2. The LED light will turn off.
- Test the remote functions. If it does not work, refer to the troubleshooting section or try alternative codes.



Image 3.4: Visual instructions for pairing the remote with a TV that does not have Roku built-in, showing the specific buttons to press and the code entry process.

## 4. OPERATING INSTRUCTIONS

Once paired, the remote control functions similarly to your original Roku remote. The buttons are intuitively laid out for ease of use.

### 4.1 Basic Functions

- **Power (TV):** Turns the TV on or off.
- **Input:** Cycles through TV input sources.
- **Menu:** Accesses the TV or Roku menu.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and selects options.
- **Volume (+/-):** Adjusts TV volume.
- **Channel (CH +/-):** Changes TV channels.
- **Mute:** Mutes or unmutes TV audio.
- **Home:** Returns to the Roku home screen.
- **Return:** Goes back to the previous screen.
- **Play/Pause, Fast Forward, Rewind:** Controls media playback.

### 4.2 Dedicated App Buttons

The remote features dedicated buttons for popular streaming services, allowing quick access:

- Netflix
- Prime Video
- Sling
- Hulu
- Roku Channel

- Disney+
- ESPN+
- YouTube
- Vudu
- Pandora
- Spotify
- Vue
- Google Play
- FandangoNOW
- Cinema Now
- Crackle
- HBONOW
- NOW

Additionally, there are five customizable APP buttons (APP1-APP5) that can be programmed using the learning function.

## 5. LEARNING FUNCTIONS

---

The UTV-1803 remote control can learn functions directly from your original remote, allowing you to customize buttons or add functions not natively supported.

1. Ensure both the UTV-1803 remote and your original remote have working batteries.
2. Place the UTV-1803 remote and your original remote head-to-head, approximately 1-3 cm (0.4-1.2 inches) apart.
3. Press and hold the **TV Power** button and the **Volume Up (+)** button on the UTV-1803 remote simultaneously for 4 seconds until the red LED light is lit.
4. Press the key on your original remote that you wish to learn. The red LED light on the UTV-1803 will blink.
5. While the LED is blinking, press the corresponding key on the UTV-1803 remote where you want to store the function. The LED will blink 3 times and then stay lit, indicating successful learning.
6. Repeat steps 4 and 5 for all other keys you wish to learn.
7. To save the settings, press and hold the **TV Power** button, then press the **Volume Down (-)** button.

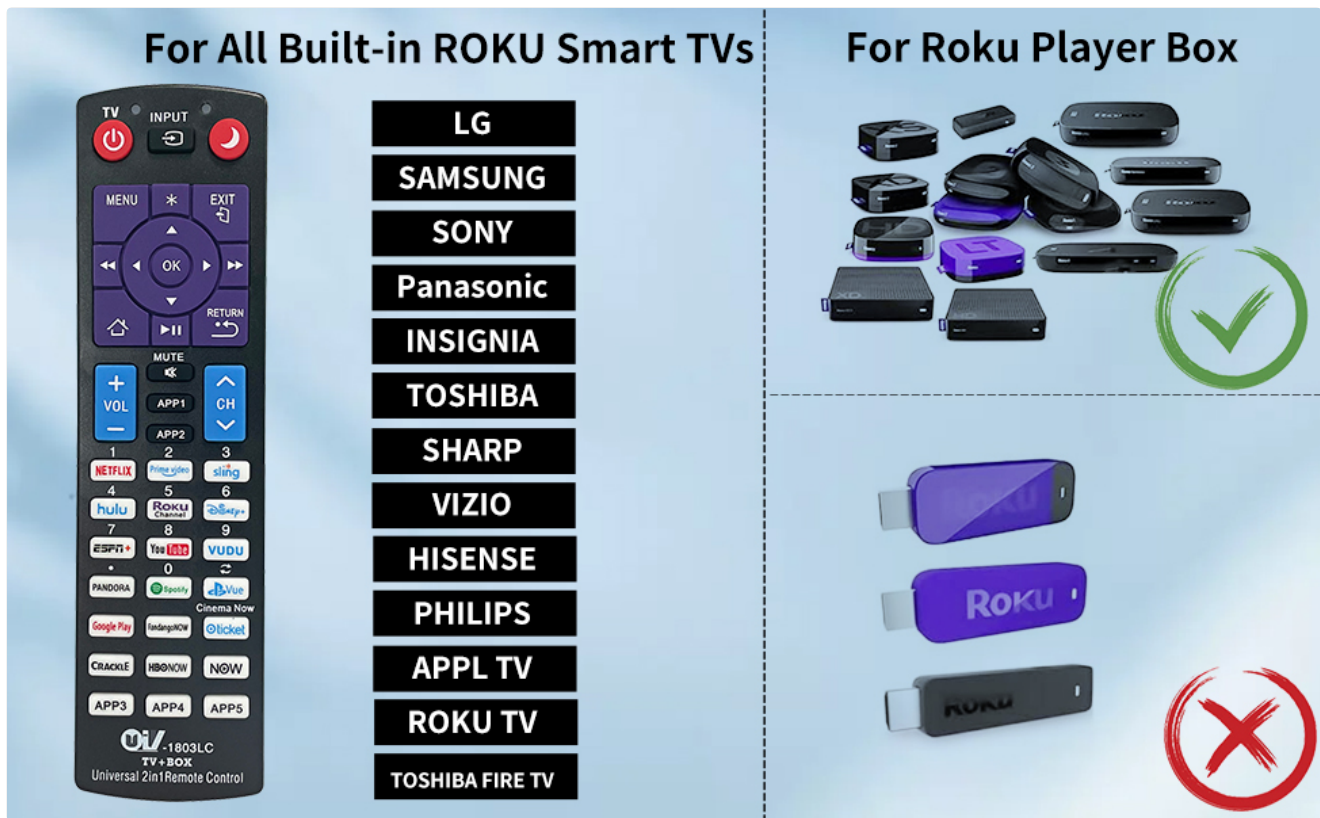


Image 5.1: Detailed visual instructions for using the learning function, showing remote positioning and button sequences.

## 6. MAINTENANCE

- Keep the remote control dry. Avoid exposure to moisture or liquids.
- Clean the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid dropping the remote or subjecting it to strong impacts.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

## 7. TROUBLESHOOTING

- **Remote not responding:**
  - Check if the batteries are inserted correctly and have sufficient charge. Replace if necessary.
  - Ensure there are no obstructions between the remote and the device's IR receiver.
  - Re-attempt the pairing process as described in Section 3.2.
- **Specific buttons not working:**
  - If a button was programmed using the learning function, try re-learning that specific function.
  - Ensure the remote is pointed directly at the device.
- **Remote controls Roku Box but not TV:**
  - Verify that you have correctly performed the TV pairing steps (Section 3.2.2 or 3.2.3) and entered the correct code for your TV brand.
  - Try other codes listed for your TV brand.
- **Remote controls TV but not Roku Box:**
  - The remote should work directly with Roku Box players without setup. Ensure the Roku Box is powered on and responsive to its original remote (if available).

## 8. SPECIFICATIONS

---

- **Model:** UTV-1803
- **Dimensions:** 6.5 x 2 x 0.79 inches (16.5 x 5.1 x 2 cm)
- **Item Weight:** 2.39 ounces (67.7 grams)
- **Power Source:** 2 x AAA batteries (not included)
- **Material:** ABS
- **Special Features:** Ergonomic, Universal, Learning Function
- **Compatible Devices:** Roku TVs, Roku Streaming Box Players (Not Roku Stick)

## 9. WARRANTY AND SUPPORT

---

For warranty information or technical support, please contact RIVIERA customer service through the retailer where the product was purchased. Please have your model number (UTV-1803) and purchase details available.

For additional assistance, you may visit the RIVIERA store on Amazon: [RIVIERA Store](#)