

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PRITECH](#) /

› [PRITECH Silicone Facial Cleansing Brush with Heat Massage End \(Model US-BCM-1485-0\) Instruction Manual](#)

PRITECH US-BCM-1485-0

PRITECH Silicone Facial Cleansing Brush with Heat Massage End

Brand: PRITECH

Model: US-BCM-1485-0

PRODUCT OVERVIEW

The PRITECH Silicone Facial Cleansing Brush is a rechargeable, waterproof device designed for deep facial cleansing and massage. It features ultra-soft silicone bristles, multiple vibration levels, and a unique heated metal end for enhanced skincare product absorption. This manual provides detailed instructions for safe and effective use of your device.

KEY FEATURES

- Vibration Deep Cleaning:** Offers 5 adjustable vibration levels (3 for cleansing, 2 for massage) to effectively remove oils, dirt, and makeup residue, promoting cleaner skin and stimulating circulation.
- Ultra-Soft Silicone:** Made with soft, odorless silicone bristles that are gentle on all skin types, preventing damage to the skin barrier and helping to address issues like enlarged pores and blackheads.
- Heated Massage Metal Head:** Features a metal end with a 40°C constant temperature heating function. This helps skincare products penetrate the skin more effectively after cleansing.
- Compact and Convenient:** Small, waterproof, and rechargeable design makes it ideal for daily home use and travel.
- Practical Stand Base:** Includes a stand for easy storage, keeping the brush head clean and preventing tilting.

SETUP

Charging the Device

Before first use, fully charge the device. Connect the provided USB cable to the charging port located at the bottom of the device. The indicator light will show charging status. A full charge takes approximately 2 hours and provides up to 210 minutes of use.

CONCEALED CHARGING PORT

Long battery lasting



Puncture and charge

2hours full charge=210minutes uses

Image: Concealed charging port for the PRITECH facial cleansing brush.

Initial Preparation

Ensure the device is clean before its first use. Rinse the silicone bristles under warm water.

OPERATING INSTRUCTIONS

Cleansing Mode (Vibration Levels 1-3)

1. Wet your face and apply your preferred facial cleanser.
2. Press the power button to turn on the device.
3. Press the speed button to select vibration levels 1-3 for cleansing.
4. Gently move the silicone brush in circular motions across your face to remove dirt, oil, and makeup.
5. Rinse your face thoroughly after cleansing.

Massage Mode with Heat (Vibration Levels 4-5)

1. After cleansing, apply your essence or serum to your face.
2. Press the speed button to select vibration levels 4-5 for massage.
3. Press the heating button (marked with a temperature symbol) to activate the 40°C constant temperature

function on the metal end.

4. Use the heated metal end to make circular motions on your face, helping skincare products penetrate more effectively.



Image: Control buttons and 5 vibration patterns for the facial cleansing brush.

METAL HEAT END

Soothing - promotes absorption

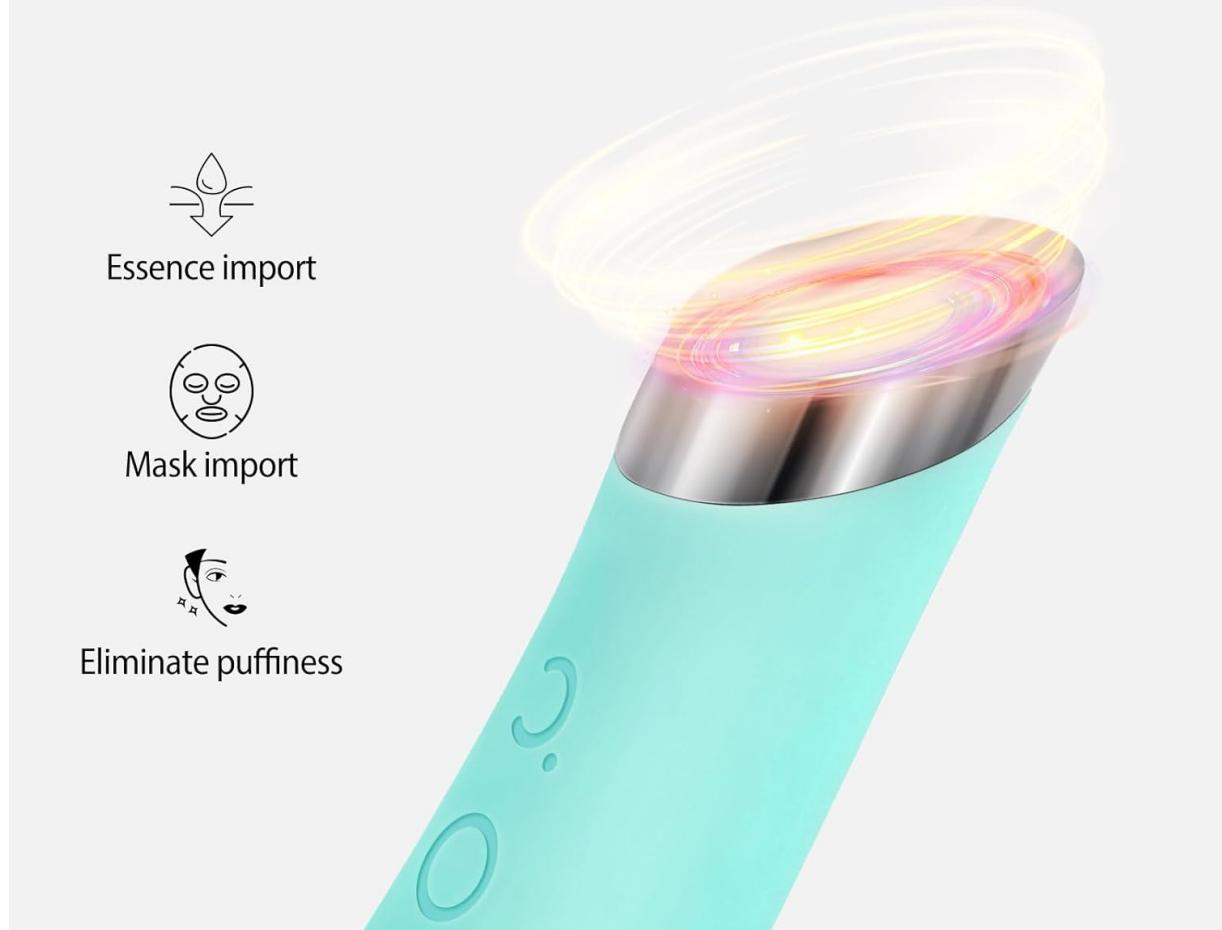


Image: The metal heat end promoting absorption of skincare products.

Video: An overview of the PRITECH Silicone Face Scrubber's features and usage.

MAINTENANCE

Cleaning the Brush

After each use, rinse the silicone bristles thoroughly with water. You may use a mild soap if necessary. Ensure all cleanser residue is removed. Do not use abrasive cleaners or brushes that could damage the silicone.

Storage

After cleaning, allow the device to air dry. Store the facial cleansing brush securely on its provided stand in a clean, dry place to maintain hygiene and prevent damage.

BRACKET DESIGN

Keeping it clean & Easy to store



Image: The facial cleansing brush stored on its practical stand base.

TROUBLESHOOTING

If you experience any issues with your PRITECH Silicone Facial Cleansing Brush, please consider the following:

- Device not turning on:** Ensure the device is fully charged. Connect it to the USB cable and allow sufficient time for charging.
- Weak vibration:** The battery might be low. Recharge the device.
- Heat function not working:** Ensure the heating button is pressed and the device has enough charge.
- Ineffective cleaning:** Ensure you are using an appropriate facial cleanser and moving the brush in circular motions as directed. Clean the brush head regularly.

For further assistance, please refer to the warranty and support section.

PRODUCT SPECIFICATIONS

Item Model Number	US-BCM-1485-0
Package Dimensions	7.01 x 3.54 x 2.44 inches

Item Weight	7.05 ounces
Material	Silicone
Power Source	Battery Powered (Rechargeable)
Batteries	1 9V battery required (included)
Manufacturer	WENZHOU PRITECH INDUSTRIAL CO.,LTD.

SAFETY INFORMATION

- Do not submerge the brush in water for extended periods. It is waterproof for shower use but not for prolonged submersion.
- Always turn off the brush and allow it to cool before storing.
- Keep the brush out of reach of children and pets.
- Do not use the brush if the charging cord is damaged or if the device malfunctions.
- Always follow the care instructions to maintain the brush's hygiene and functionality.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

WARRANTY AND SUPPORT

For warranty information or product support, please contact PRITECH customer service. Refer to the product packaging or the official PRITECH website for contact details.