

[Manuals.plus](#) /

› [Jesebang](#) /

› Jesebang BD86 Wireless Earbuds User Manual

Jesebang BD86

Jesebang BD86 Wireless Earbuds User Manual

Model: BD86 | Brand: Jesebang

INTRODUCTION

Thank you for choosing the Jesebang BD86 Wireless Earbuds. These earbuds are designed to provide a superior audio experience with advanced Bluetooth 5.3 technology, HiFi stereo sound, and effective noise cancellation. This manual will guide you through the setup, operation, and maintenance of your new earbuds to ensure optimal performance and longevity.

SAFETY INFORMATION

- Do not expose the earbuds or charging case to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Keep out of reach of children and pets.
- Do not disassemble, repair, or modify the product. This may void the warranty and pose safety risks.
- Use only the provided charging cable or a certified equivalent.
- Prolonged listening at high volume levels may cause hearing damage. Adjust volume to a safe level.

PACKAGE CONTENTS

Please check the package for the following items:

- Jesebang BD86 Wireless Earbuds (Left and Right)
- Charging Case with LED Display
- USB-C Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your Jesebang BD86 Wireless Earbuds.



Image: The Jesebang BD86 Wireless Earbuds, shown in their open charging case. The case features an LED display indicating battery levels for both earbuds and the case itself. The earbuds are light blue with silver accents.

Tiny Size, Lightweight Build

BD86 slim profile and lightweight build fit comfortably in your ears throughout the night, even if you sleep on your side or move around a lot.



Image: A close-up view of the Jesebang BD86 earbuds nestled in their charging case, emphasizing their compact and lightweight design. The LED display on the case is visible, showing battery indicators.

A New Acoustic Paradigm

It far exceed your hearing range — from 14 Hz to 48 kHz.



13MM Drivers



ENC Noise
Cancelling



HD Call

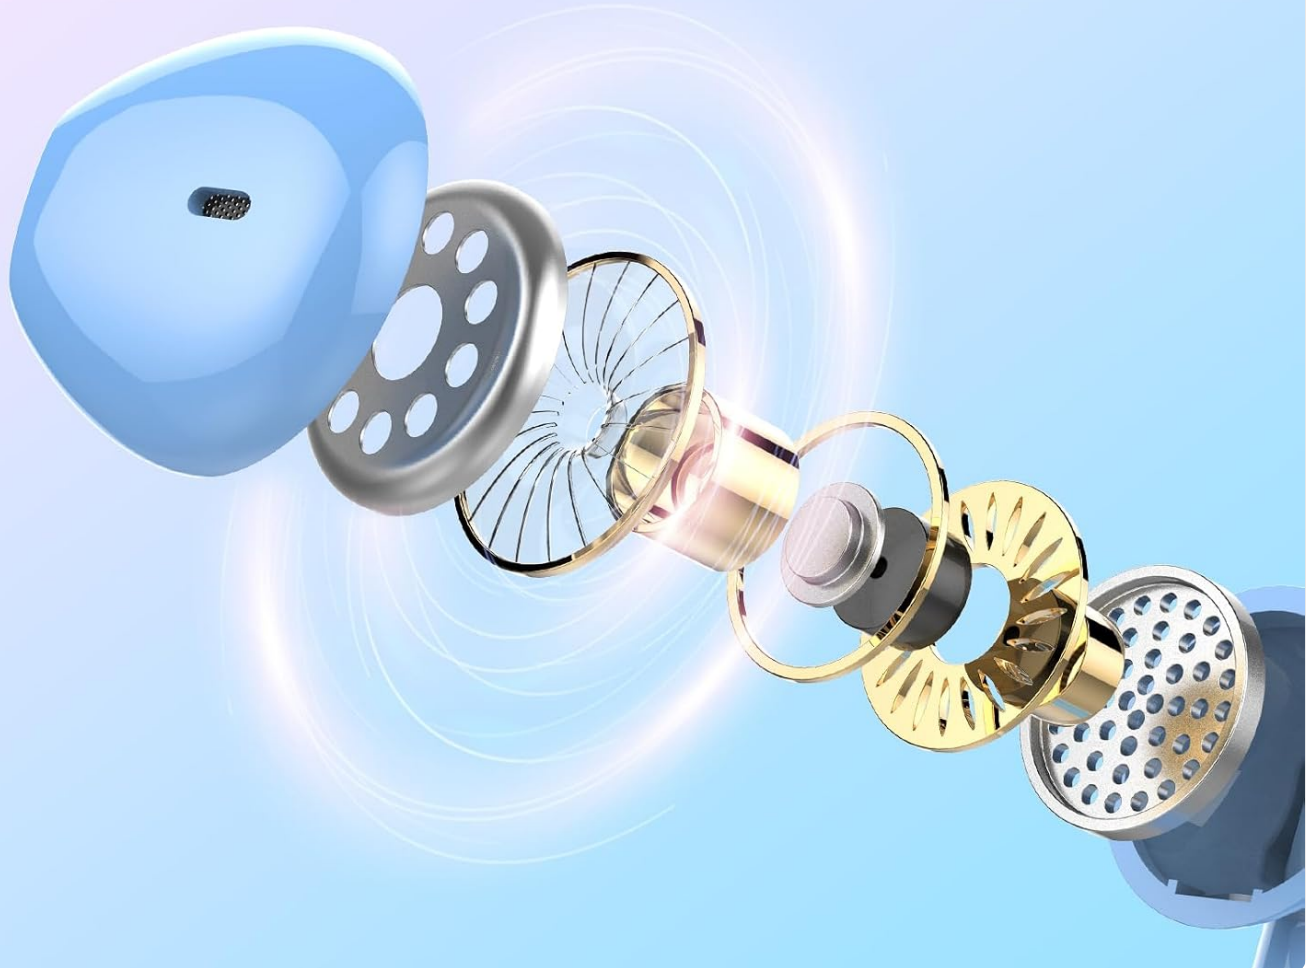


Image: An exploded view diagram illustrating the internal components of a Jesebang BD86 earbud, including the 13mm driver, ENC Noise Cancelling microphone, and other acoustic elements, highlighting its advanced sound technology.

SETUP

Charging the Earbuds and Case

Before first use, fully charge both the earbuds and the charging case.

1. Place the earbuds into the charging case. Ensure they are correctly seated.
2. Connect the USB-C charging cable to the charging port on the case and the other end to a USB power source (e.g., wall adapter, computer USB port).
3. The LED display on the charging case will show the battery percentage of the case and individual earbuds.
4. A full charge for the earbuds takes approximately 1 hour, providing 6-7 hours of playback. The charging case provides an additional 4 charges, totaling up to 30 hours of playtime.

Melodious Sound 30H Long battery life

6Hrs
On a single Charge

1Hrs
Fast Charging

30Hrs
charging case



Image: An illustration detailing the battery life and charging capabilities of the Jesebang BD86 earbuds. It shows 6 hours on a single charge, 1 hour for fast charging, and 30 hours total with the charging case.

Pairing with a Device

The earbuds utilize Bluetooth 5.3 for a stable and efficient connection.

1. Open the charging case. The earbuds will automatically enter pairing mode (indicated by flashing lights on the earbuds).
2. On your device (smartphone, tablet, computer), enable Bluetooth.
3. Search for "BD86" in the list of available Bluetooth devices and select it to connect.
4. Once connected, the earbud lights will stop flashing.
5. For subsequent uses, simply open the charging case, and the earbuds will automatically reconnect to the last paired device.

Upgrade Bluetooth 5.3

Long transmission distance, Strong signal stability.
Clear powerful sound that has evolved by producing
a well-balanced low to high tone.



Image: A graphic highlighting the "Upgrade Bluetooth 5.3" feature of the Jesebang BD86 earbuds, illustrating improved transmission distance, strong signal stability, and lower power consumption compared to older Bluetooth versions.

OPERATING INSTRUCTIONS

Touch Controls

The Jesebang BD86 earbuds feature intuitive touch controls on each earbud. The following table outlines the common functions:

Action	Function
Single Tap (L/R)	Play/Pause Music, Answer/End Call
Double Tap (L)	Previous Track
Double Tap (R)	Next Track

Action	Function
Triple Tap (L)	Volume Down
Triple Tap (R)	Volume Up
Long Press (2s) (L/R)	Activate Voice Assistant (Siri, Google Assistant)
Long Press (2s) during call (L/R)	Reject Call

Wearing the Earbuds

For optimal sound quality and comfort, ensure the earbuds are properly seated in your ears.

1. Identify the Left (L) and Right (R) earbuds.
2. Gently insert each earbud into the corresponding ear canal.
3. Rotate the earbud slightly until it feels secure and comfortable. A snug fit helps with sound isolation and bass response.

Feel the breeze, whole without noise

Double anti-wind noise structure ensures clear call quality even when cycling fast.



Image: A person wearing the Jesebang BD86 earbuds, demonstrating their comfortable and secure fit during use. The image highlights the discreet design and how they sit in the ear.

MAINTENANCE

Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Gently remove any earwax or debris from the earbud mesh using a small, soft brush or cotton swab.

Storage

- When not in use, always store the earbuds in their charging case to protect them and keep them charged.
- Store the device in a cool, dry place, away from direct sunlight and extreme temperatures.

Water Resistance (IP7)

The Jesebang BD86 earbuds are rated IP7 waterproof, meaning they are protected against immersion in water up to 1 meter for up to 30 minutes. This makes them suitable for workouts and use in light rain or sweat.

- Do not intentionally submerge the earbuds in water for extended periods.
- The charging case is not waterproof. Avoid exposing it to liquids.
- Ensure earbuds are completely dry before placing them back into the charging case to prevent damage.

IP7 Dust and Water Resistance

IP7 rating means that you can enjoy music with your BD86 in daily life.



Image: The Jesebang BD86 earbuds and charging case are depicted with water droplets, illustrating their IP7 dust and water resistance rating, suitable for daily use and protection against sweat or rain.

TROUBLESHOOTING

If you encounter any issues with your earbuds, please refer to the following common solutions:

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Earbuds not pairing/connecting	◦ Ensure earbuds are charged. ◦ Turn off and on Bluetooth on your device. ◦ Forget "BD86" from your device's Bluetooth list and re-pair. ◦ Place earbuds back in the case, close, wait a few seconds, then open again.
Only one earbud working	◦ Ensure both earbuds are charged. ◦ Place both earbuds back in the case, close the lid, and then open it again. ◦ Try resetting the earbuds (refer to manufacturer's website if specific reset steps are not in manual).
Low volume or poor sound quality	◦ Adjust volume on both your device and the earbuds. ◦ Clean the earbud mesh to remove any obstructions. ◦ Ensure earbuds are properly seated in your ears. ◦ Move closer to your connected device to avoid interference.
Charging case not charging	◦ Check the USB-C cable and power adapter. Try a different cable or adapter. ◦ Ensure the charging port is clean and free of debris.

SPECIFICATIONS

Feature	Detail
Model Name	BD86
Connectivity Technology	Wireless (Bluetooth 5.3)
Wireless Communication Technology	Bluetooth
Charging Time	Approx. 1 Hour (Earbuds)
Battery Average Life (Earbuds)	6-7 Hours
Total Playtime with Charging Case	Up to 30 Hours
Water Resistance Level	IP7 Waterproof
Frequency Range	20 Hz - 20,000 Hz
Maximum Operating Distance	15 Meters
Ear Placement	In Ear
Noise Control	Sound Isolation, ENC Noise Cancelling Mic

Feature	Detail
Control Type	Touch Control, Voice Control
Material	Plastic

WARRANTY AND SUPPORT

Jesebang offers a **2-year warranty** for the BD86 Wireless Earbuds, covering manufacturing defects and ensuring the quality of your product. If you encounter any issues or have questions regarding your earbuds, please contact Jesebang customer support. For support, please visit the official Jesebang store page or contact their customer service through the platform where you purchased the product.

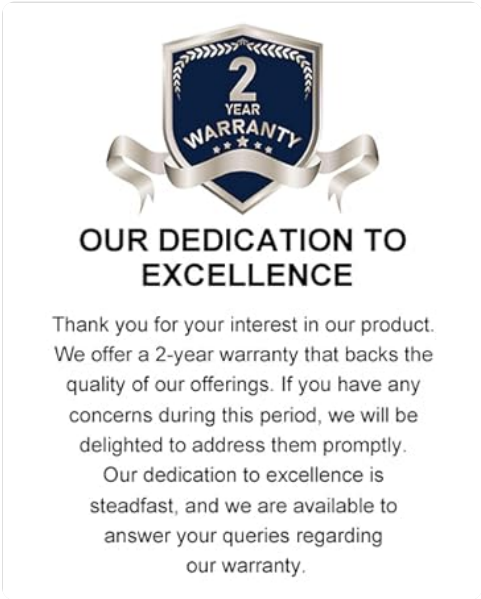


Image: A graphic displaying "2 YEAR WARRANTY" and text emphasizing Jesebang's dedication to excellence and customer support for product concerns.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question