

MELISSA 16220008

MELISSA 16220008 Electric Potato Peeler and Salad Spinner User Manual

Model: 16220008

1. INTRODUCTION

Thank you for choosing the MELISSA 16220008 Electric Potato Peeler and Salad Spinner. This versatile kitchen appliance is designed to simplify your food preparation by efficiently peeling potatoes and drying salad. With its powerful 85W motor, it can peel up to 1 kg of potatoes in just 2 to 4 minutes. The integrated salad spinner function adds further convenience, making it a valuable addition to any kitchen.

Please read this instruction manual carefully before using the appliance for the first time to ensure safe and optimal operation. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before use.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the motor base, cord, or plug in water or other liquids.
- Keep hands and utensils away from moving parts during operation to prevent injury.
- Always unplug the appliance from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Use the appliance only for its intended household purpose.
- Do not use outdoors.
- The appliance features a safety switch; ensure all parts are correctly assembled before operation.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your MELISSA 16220008 appliance:

- **Base with Electrical Connection:** Contains the motor and power cord storage.
- **Peeling Bowl:** The main container for potatoes during peeling.
- **Peeling Blade (Grater):** Located at the bottom of the peeling bowl, responsible for peeling.
- **Transparent Lid:** Allows observation of the peeling process and ensures safety.
- **Salad Spinner Basket:** Insert for drying salad.



Image 3.1: The MELISSA 16220008 Electric Potato Peeler with the transparent lid open, revealing potatoes inside the peeling bowl, ready for operation.



Image 3.2: The MELISSA 16220008 with the salad spinner basket in place, filled with fresh salad, demonstrating its dual functionality.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or disposal.
2. **Clean:** Before first use, wash the peeling bowl, transparent lid, and salad spinner basket in warm, soapy

water. Rinse thoroughly and dry. The motor base should only be wiped with a damp cloth.

3. **Placement:** Place the motor base on a stable, flat, and dry surface. The robust silicone feet will ensure stability.
4. **Assemble for Peeling:** Place the peeling bowl onto the motor base, ensuring it is securely seated. The peeling blade is integrated into the bowl.
5. **Assemble for Salad Spinning:** If using the salad spinner, place the salad spinner basket inside the peeling bowl, then place the peeling bowl onto the motor base.
6. **Power Connection:** Unwind the power cord from the convenient cable storage in the base and plug the appliance into a suitable 220-240V power outlet.

5. OPERATING INSTRUCTIONS

5.1. Potato Peeling

1. Ensure the appliance is correctly assembled for peeling (peeling bowl on base, no salad spinner basket).
2. Wash the potatoes thoroughly to remove any dirt. Do not peel more than 1 kg of potatoes at a time.
3. Place the washed potatoes into the peeling bowl.
4. Securely place the transparent lid on top of the peeling bowl. The appliance will not operate if the lid is not properly closed due to the safety switch.
5. Switch the appliance ON using the power switch located on the front of the base.
6. The potatoes will be peeled in approximately 2 to 4 minutes, depending on their size and freshness. You can observe the process through the transparent lid.
7. Once peeling is complete, switch the appliance OFF and unplug it from the power outlet.
8. Carefully remove the lid and then the peeled potatoes. Be cautious of any remaining water and potato skins.



Image 5.1: The potato peeler in action, showing potatoes ready for peeling in a kitchen environment.

5.2. Salad Spinning

1. Ensure the appliance is correctly assembled for salad spinning (salad spinner basket inside peeling bowl, peeling bowl on base).
2. Wash your salad leaves thoroughly.
3. Place the washed salad into the salad spinner basket. Do not overfill.
4. Securely place the transparent lid on top of the peeling bowl. The appliance will not operate if the lid is not properly closed.
5. Switch the appliance ON using the power switch.
6. Allow the appliance to run for a short period (e.g., 30-60 seconds) to effectively dry the salad.
7. Once the salad is dry, switch the appliance OFF and unplug it from the power outlet.
8. Carefully remove the lid and then the salad spinner basket with the dried salad.



Image 5.2: The appliance configured for salad spinning, showing fresh salad leaves within the basket.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your appliance.

1. **Always unplug** the appliance before cleaning.
2. **Disassemble:** Remove the transparent lid, salad spinner basket (if used), and peeling bowl from the motor base.
3. **Wash Removable Parts:** The peeling bowl, transparent lid, and salad spinner basket can be washed in warm, soapy water. Rinse thoroughly and dry completely before reassembly or storage.
4. **Clean Motor Base:** Wipe the exterior of the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
5. **Stubborn Stains:** For stubborn stains, use a mild non-abrasive cleaner. Avoid abrasive pads or harsh chemicals that could damage the surfaces.
6. **Storage:** Store the appliance in a dry place, away from direct sunlight and out of reach of children. Use the

integrated cable storage for neat organization.

7. TROUBLESHOOTING

If you encounter issues with your MELISSA 16220008, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not start.	<ul style="list-style-type: none">◦ Not plugged in.◦ Lid not properly secured.◦ Power outage or faulty outlet.	<ul style="list-style-type: none">◦ Ensure the power cord is securely plugged into a working outlet.◦ Check that the transparent lid is correctly and firmly placed on the peeling bowl. The safety switch prevents operation if not secured.◦ Test the outlet with another appliance.
Potatoes are not peeling effectively.	<ul style="list-style-type: none">◦ Overloaded with potatoes.◦ Potatoes are too large or irregularly shaped.◦ Peeling blade is worn or dirty.	<ul style="list-style-type: none">◦ Reduce the quantity of potatoes to a maximum of 1 kg.◦ Ensure potatoes are of a manageable size. Cut larger potatoes if necessary.◦ Clean the peeling blade thoroughly. If peeling performance significantly degrades over time, the blade may need replacement (contact support).
Salad is not drying properly.	<ul style="list-style-type: none">◦ Overloaded with salad.◦ Insufficient spinning time.	<ul style="list-style-type: none">◦ Do not overfill the salad spinner basket. Process in smaller batches if needed.◦ Increase the spinning time slightly.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	16220008
Brand	MELISSA
Power	85 W
Power Supply	220-240 V
Capacity (Potatoes)	Up to 1 kg
Peeling Time	2-4 minutes (approx.)
Color	White
Dimensions (H x W x D)	25.5 x 27 x 27 cm (approx.)
Weight	1.6 kg

Feature	Detail
Cable Length	100 cm
Special Features	Anti-slip feet, Compact design, Safety switch, Cable storage, Transparent lid



Image 8.1: Dimensional overview of the appliance.

9. WARRANTY AND SUPPORT

This MELISSA appliance is designed and manufactured to the highest quality standards. In the unlikely event of a defect due to faulty materials or workmanship, the product is covered by a standard warranty as per local consumer protection laws.

For warranty claims, technical support, or spare parts, please contact your retailer or the MELISSA customer service department. Please have your model number (16220008) and proof of purchase ready when contacting support.

For more information, please visit the official MELISSA website or refer to the contact details provided with your purchase documentation.