

Amazon Kindle Scribe 64GB

Amazon Kindle Scribe 64GB User Manual

Model: Kindle Scribe 64GB with Premium Pen

1. INTRODUCTION

The Amazon Kindle Scribe is a digital notebook and e-reader designed for reading, writing, and document management. It features a large, glare-free display and a Premium Pen for a natural writing experience. This manual provides essential information for setting up, operating, and maintaining your device.

2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- Wi-Fi enabled Kindle Scribe device
- Premium Pen
- USB-C charging cable
- 5 replacement tips for the Premium Pen
- Tip replacement tool
- Built-in rechargeable battery (integrated into the device)

3. DEVICE OVERVIEW

The Kindle Scribe features a 10.2-inch Paperwhite display and a sleek design. The Premium Pen allows for precise writing and navigation.

kindle scribe

Your dedicated
thinking space



Built-in
notebook



AI notebook
tools



Paper-like
feel



Distraction
free

Image: The Kindle Scribe device with its Premium Pen, displaying a digital notebook. The device is thin and designed for comfortable holding.

The device includes a power button, a USB-C port for charging and data transfer, and a front-lit display for reading in various lighting conditions.

4. SETUP

Follow these steps for initial setup:

1. **Charge the Device:** Connect the Kindle Scribe to a power source using the provided USB-C cable. A full charge from a computer takes approximately 7 hours, or 2.5 hours with a 9W USB-C power adapter.
2. **Power On:** Press and hold the power button until the screen activates.
3. **Language Selection:** Choose your preferred language from the on-screen options.
4. **Connect to Wi-Fi:** The device supports 2.4 GHz and 5.0 GHz networks. Use Amazon Wi-Fi simple setup to automatically connect to your home network or manually select and enter credentials.
5. **Register Your Device:** Sign in with your Amazon account or create a new one to access Kindle content and cloud services.

No computer is required to download content after initial setup; the device is fully wireless.

5. BASIC OPERATION

5.1 Reading

The 10.2-inch glare-free, 300 ppi front-lit display is optimized for comfortable reading in various environments. Tap the sides of the screen to turn pages, or swipe. Adjust font size, font face, line spacing, and margins through the reading menu.




Read in comfort

With a large 10.2" glare-free
front-lit display

Image: A person comfortably reading on the Kindle Scribe, highlighting the large, glare-free display.

5.2 Writing and Note-Taking

Use the Premium Pen to write directly on the screen. The screen technology provides a tactile experience that simulates writing on paper. The pen does not require charging or setup.

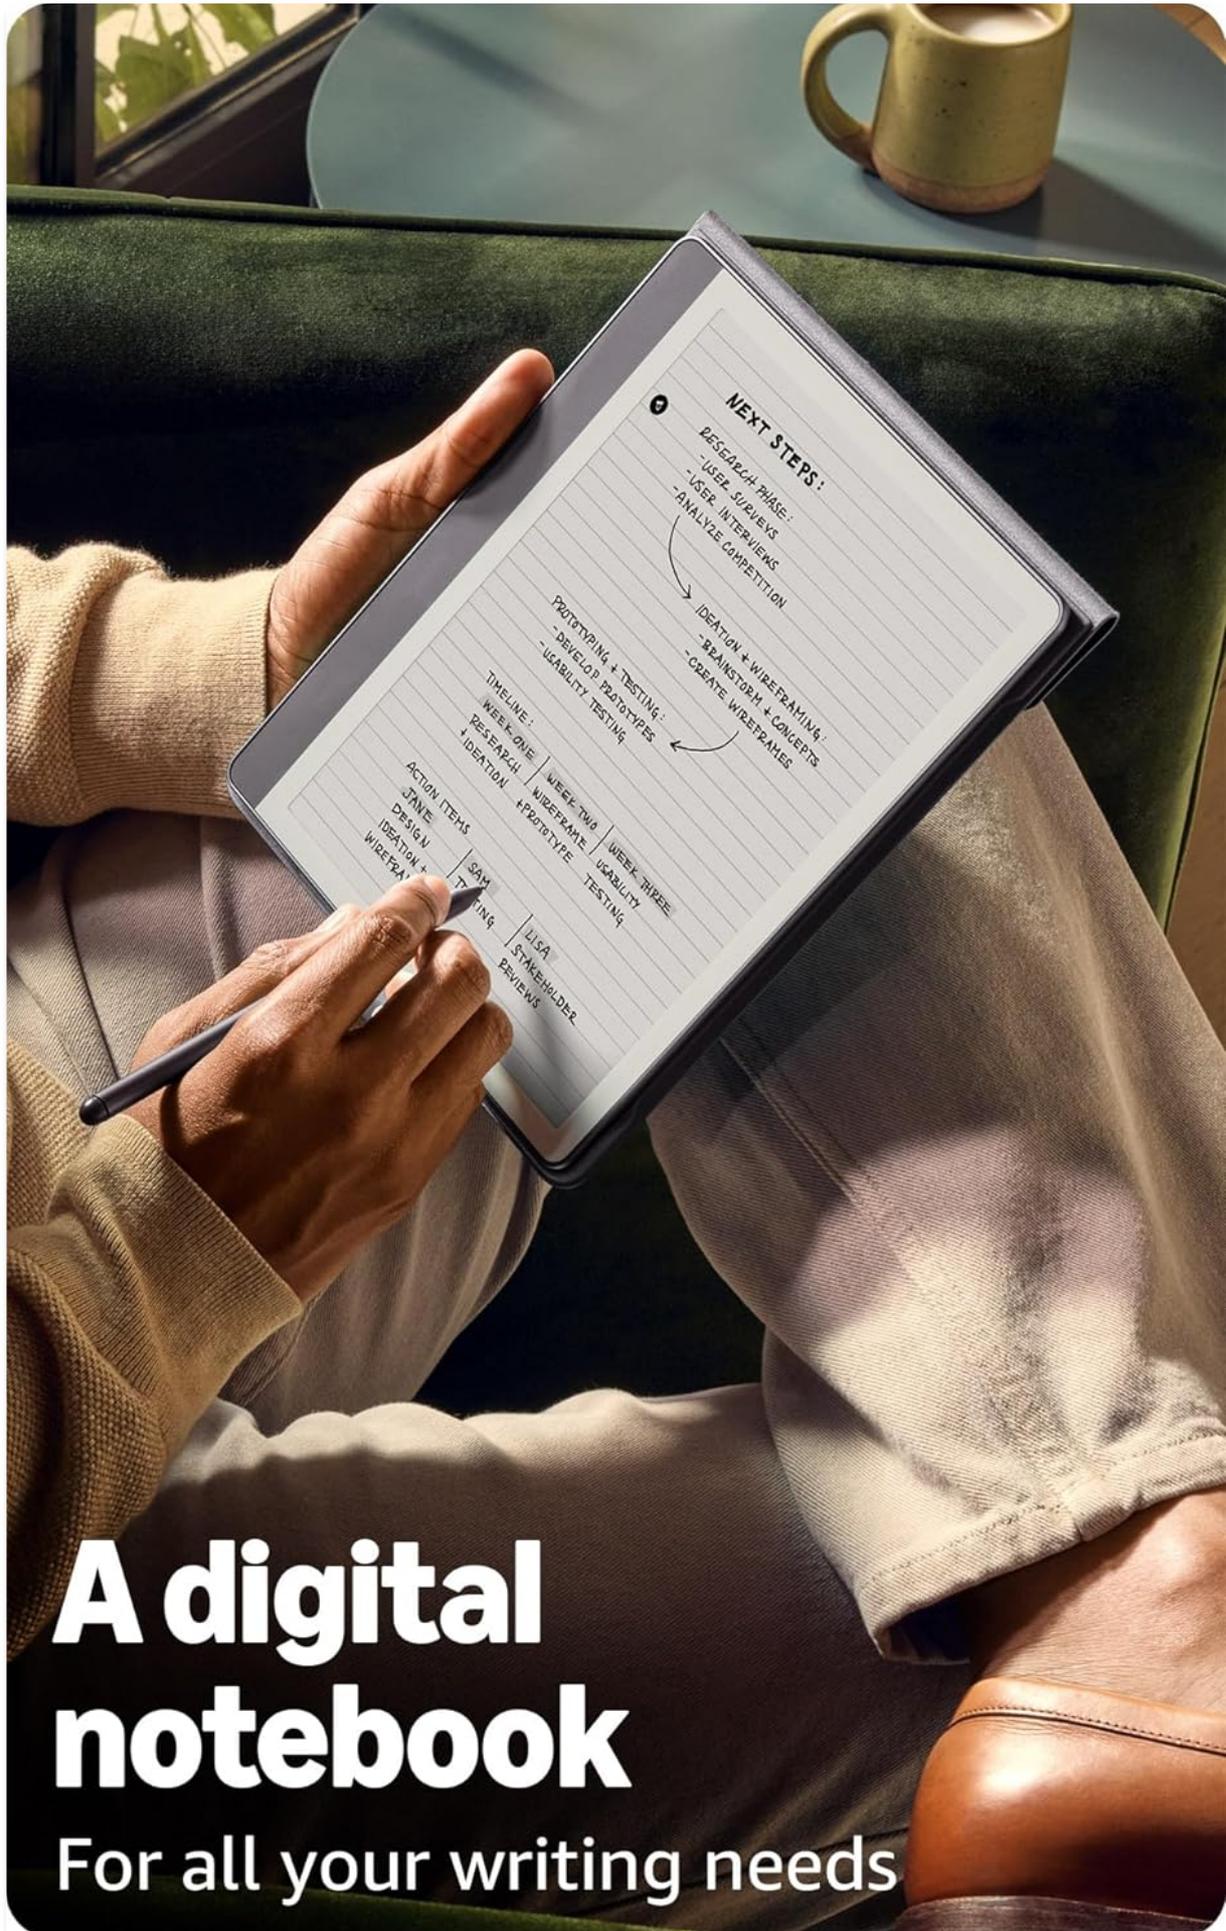

A digital notebook

For all your writing needs

Image: A user actively writing notes on the Kindle Scribe with the Premium Pen, demonstrating its use as a digital notebook.

5.3 Navigation

Navigate the device using touch gestures on the screen or the Premium Pen. The home screen displays your library and notebooks. Access settings and other features through the top menu bar.

6. ADVANCED FEATURES

6.1 AI Notebook Tools

The Kindle Scribe includes built-in AI tools to enhance your notes. These tools can convert handwritten notes into readable text, summarize content, and adjust the length or tone of your notes.




Summarize and refine your notes

AI notebook tools built-in

Image: The Kindle Scribe screen showing refined and summarized notes, illustrating the AI notebook tools.

6.2 Document Import and Markup

Import documents and PDFs to your Kindle Scribe using the Send to Kindle feature. Once imported, you can mark up these documents directly on the page with your Premium Pen.

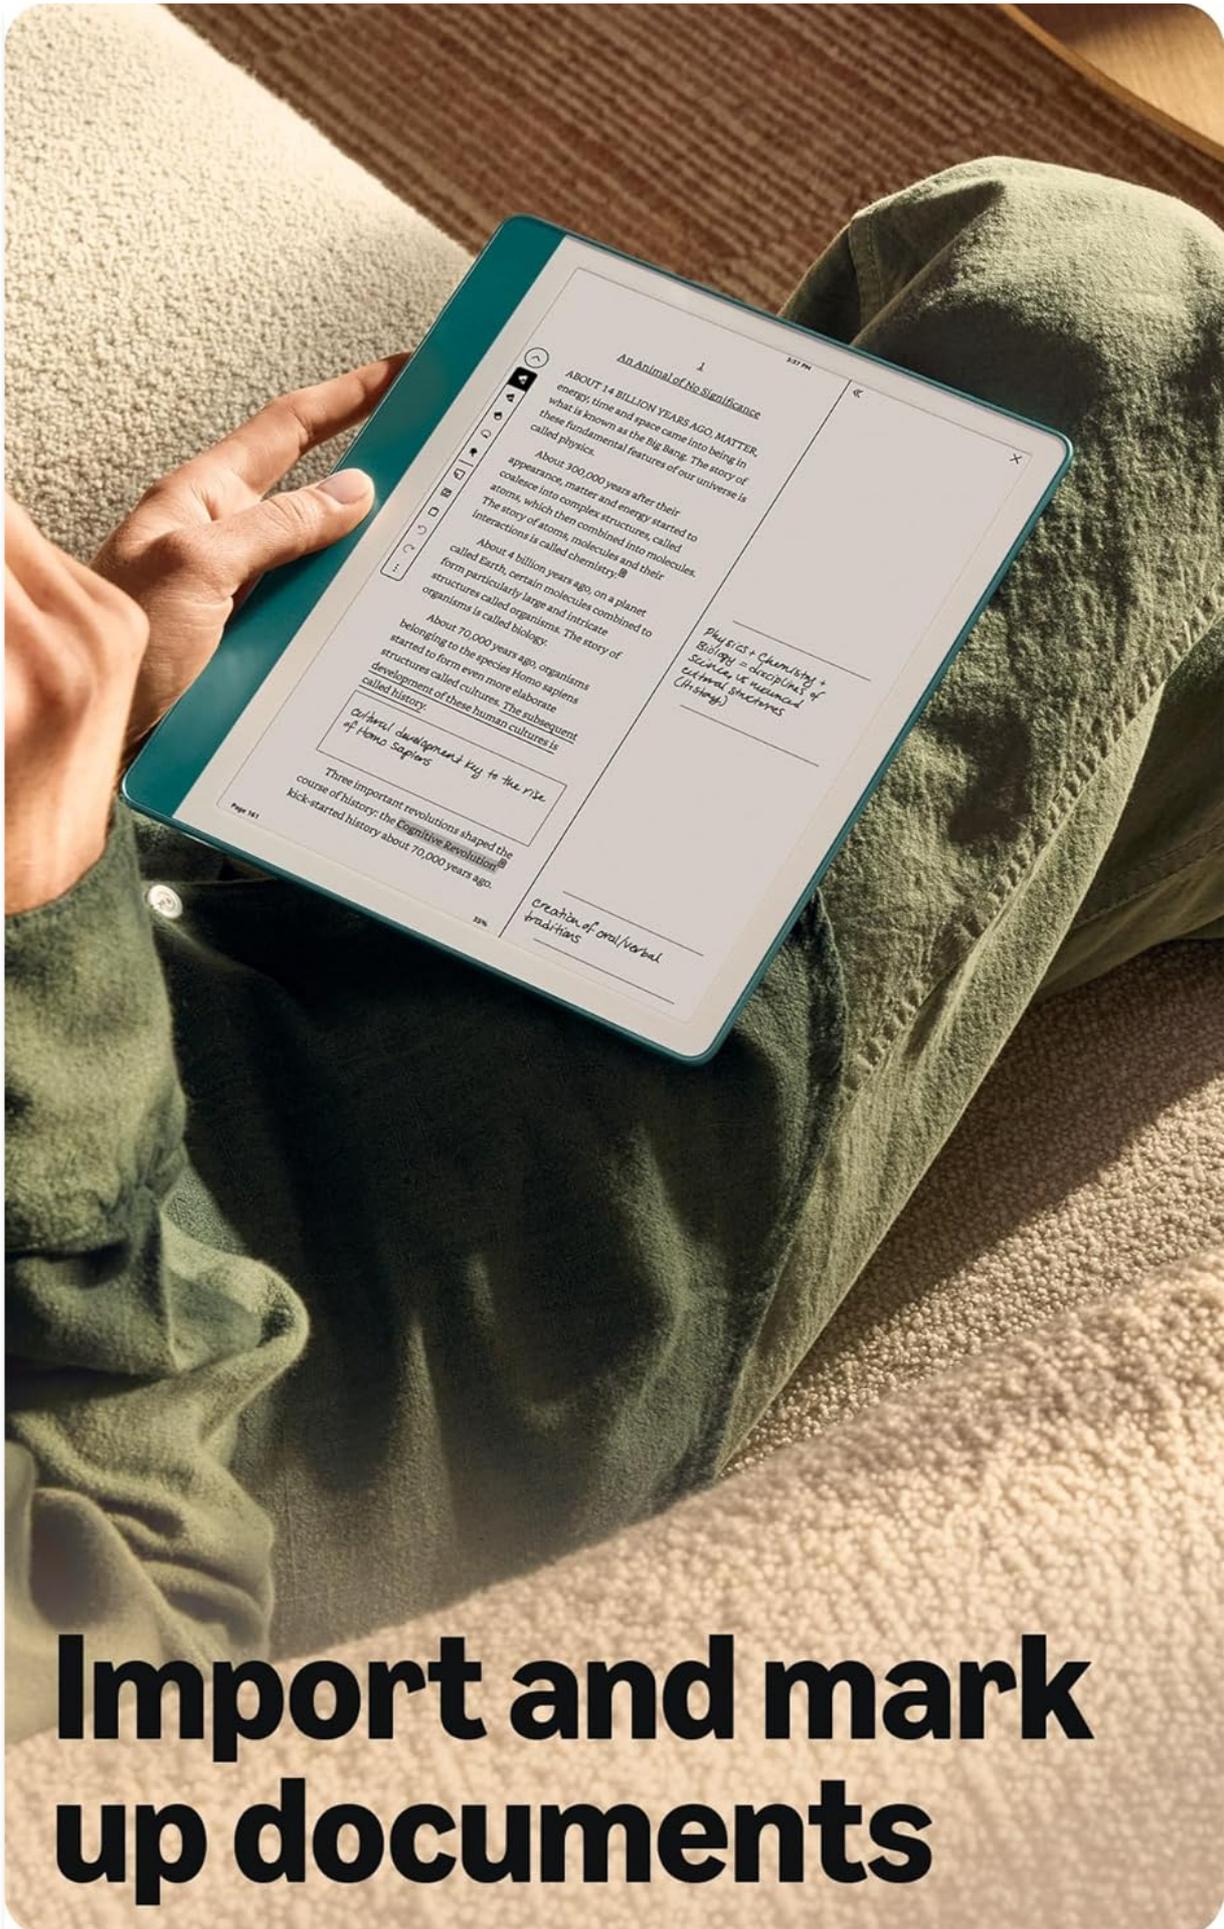

Import and mark up documents

Image: A user holding the Kindle Scribe, displaying a document with handwritten annotations, demonstrating the import and markup feature.

6.3 Active Canvas

When reading, you can start writing notes directly on a book's page. Active Canvas will create space for your notes. You can expand the margins to add more extensive notes or collapse them to view the original page content without distractions.

7. CHARGING AND BATTERY

The Kindle Scribe is equipped with a long-lasting rechargeable battery.

- **Battery Life:** For reading, a single charge can last up to 12 weeks (based on 30 minutes of reading per day with wireless off and light setting at 13). For writing, a single charge can last up to 3 weeks (based on 30 minutes of writing per day with wireless off and light setting at 13). Actual battery life varies based on usage.
- **Charging:** Use the included USB-C cable. Charge time is approximately 7 hours from a computer or 2.5 hours with a 9W USB-C power adapter.

8. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and device body. Avoid abrasive materials or harsh chemicals.
- **Pen Tips:** Replace the Premium Pen tip when it shows significant wear. Use the provided tip replacement tool and replacement tips.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Software Updates:** Ensure your device software is up to date for optimal performance and new features. Updates are typically downloaded automatically when connected to Wi-Fi.

9. TROUBLESHOOTING

- **Device Not Responding:** Press and hold the power button for 7 seconds to restart the device.
- **Cannot Connect to Wi-Fi:** Verify your Wi-Fi password and ensure the device is within range of your router. Restarting your router may resolve connection issues.
- **Pen Not Writing:** Ensure the pen tip is properly seated. If worn, replace the tip.
- **Battery Drains Quickly:** Reduce screen brightness, turn off Wi-Fi when not in use, and ensure no background processes are consuming excessive power.

10. SPECIFICATIONS

Feature	Description
Display	Amazon's 10.2" Paperwhite display technology with built-in light, 300 ppi, optimized font technology, 16-level gray scale.
Device Size	7.7" x 9.0 x .22" (196 x 230 x 5.7mm excluding feet)
Premium Pen Size	6.4" x .35" x .33" (162 x 8.8 x 8.4 mm)
On-Device Storage	64 GB

Device Weight	15.3 oz (433g device only)
Premium Pen Weight	.60 oz (17g)
Wi-Fi Connectivity	Supports 2.4 GHz and 5.0 GHz networks with WEP, WPA, WPA2, WPA3 security. Does not support ad-hoc networks.
Content Formats Supported	Kindle Format 8 (AZW3), Kindle (AZW), TXT, PDF, unprotected MOBI, PRC natively; PDF, DOCX, DOC, HTML, EPUB, TXT, RTF, JPEG, GIF, PNG, BMP through conversion; Audible audio format (AAX).
Battery Life (Reading)	Up to 12 weeks (30 min/day, wireless off, light 13)
Battery Life (Writing)	Up to 3 weeks (30 min/day, wireless off, light 13)
Charge Time	Approx. 7 hours (computer USB-C); 2.5 hours (9W USB-C adapter)
Generation	Kindle Scribe 1st generation - 2024 release

11. WARRANTY AND SUPPORT

Your Kindle Scribe includes a 1-year limited warranty and service. Optional extended warranties (1-year, 2-year, or 3-year) are available for U.S. customers and sold separately.

For detailed information regarding your warranty, service, and terms of use, please refer to the official Amazon documentation or visit the Amazon support website. Additional resources, including a Quick Start Guide and Kindle User Guide, are available online.

Use of Kindle devices is subject to Amazon's Conditions of Use.