

Intex 64417FL

Intex Dura-Beam Deluxe Comfort-Plush Air Mattress

Instruction Manual

Model: 64417FL | Brand: Intex

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before using this product. Failure to follow these warnings may result in injury or product damage.

- Do not use this air mattress as a flotation device.
- Keep away from sharp objects, heat sources, and open flames.
- Ensure the area around the mattress is clear of obstructions during inflation and deflation.
- Do not jump on the air mattress.
- This product is not intended for use by children without adult supervision.
- Do not overinflate.
- Maximum weight capacity for the Queen size is 600 lbs (272 kg). Do not exceed this limit.
- Unplug the pump when not in use and before cleaning.

2. PRODUCT OVERVIEW

The Intex Dura-Beam Deluxe Comfort-Plush Air Mattress is designed for comfort and durability, featuring Fiber-Tech construction and a built-in electric pump for easy inflation and deflation. Its unique design provides superior stability and support.



Image: The Intex Dura-Beam Deluxe Comfort-Plush Air Mattress, Queen size, in blue and grey, featuring the built-in electric pump on the side.

 
Key Features:

- **Dura-Beam Deluxe Series:** Enhanced stability and durability.
- **Fiber-Tech Construction:** Thousands of high-strength polyester fibers provide improved support and strength.
- **Built-in Electric Pump:** For rapid inflation and deflation.
- **Dual-Layer Comfort Top:** Soft, velvety surface for a smooth sleeping experience.
- **Unique Edge and Bottom Ring Construction:** Provides superior stability and prevents sagging.
- **Raised Height:** 22 inches (56 cm) for ease of getting in and out of bed.
- **Carry Bag Included:** Convenient for storage and transport.

 


Image: A woman sleeping peacefully on the inflated Intex Dura-Beam Deluxe Comfort-Plush Air Mattress, demonstrating its comfort.

Incredible Strength Luxurious Comfort

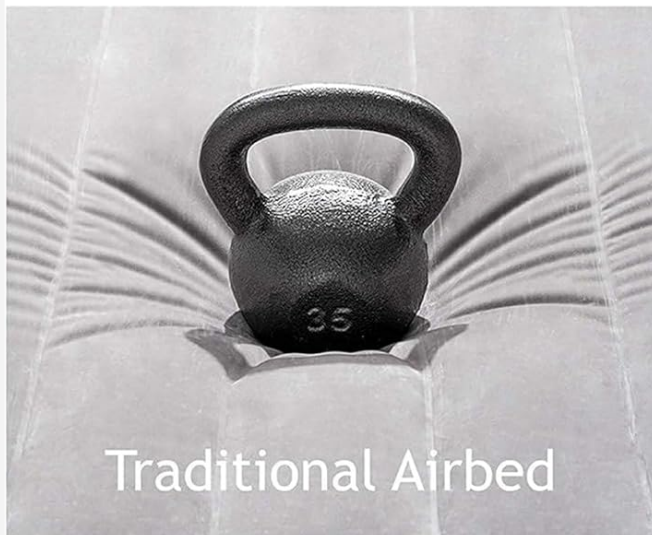

Traditional Airbed

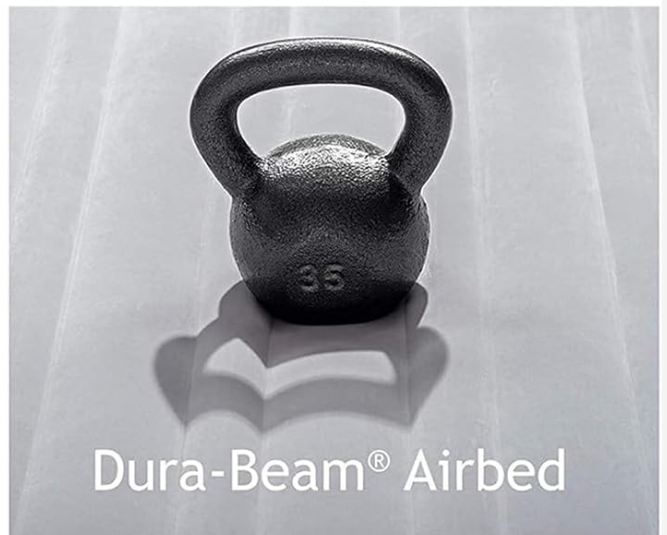

Dura-Beam® Airbed

Image: Visual comparison showing a kettlebell sinking into a traditional airbed versus resting firmly on a Dura-Beam airbed, illustrating superior strength.



Image: Diagram comparing Fiber-Tech Construction with traditional airbed construction, showing how Fiber-Tech provides more strength and support with suspended weights.

Key Features



**QuickFill Plus
Internal Pump**

Use or stow your air mattress efficiently with powerfully fast inflation and deflation.



**Fiber-Tech
Construction**

Relax, knowing thousands of fiber strands are supporting your rest and reinforcing your air mattress.



**Top and Bottom
Edge Support**

Stay securely in place on the sleeping surface, thanks to raised support around the top and bottom edges of the air mattress.



**Horizontal Support
Beams**

Enjoy support and contouring where you need it the most.

Image: Diagram illustrating how traditional air mattresses may sink under body weight, while Dura-Beam mattresses maintain a flat, supportive surface.

3. SETUP AND INFLATION

Setting up your Intex air mattress is quick and easy with the built-in electric pump.

1. **Unpack:** Remove the air mattress from its carry bag and unroll it on a clean, flat surface free of sharp objects.
2. **Locate Pump:** Identify the built-in electric pump on the side of the mattress.
3. **Plug In:** Plug the pump's power cord into a standard electrical outlet.
4. **Inflate:** Turn the pump dial to the "Inflate" position. The mattress will begin to inflate.
5. **Monitor Inflation:** Allow the mattress to inflate until it reaches your desired firmness. The approximate inflation time for a Queen size is 4 ¾ minutes. Do not overinflate.
6. **Turn Off & Unplug:** Once inflated, turn the pump dial to the "Off" position and unplug the power cord. Securely store the cord in its compartment.


Important Note on Material Stretching:

It is normal for the air mattress material to stretch during its first few uses. This stretching can cause a perceived loss of air pressure, which is often misinterpreted as a leak. This is not a defect.

- If the mattress feels soft after initial inflation, simply re-inflate it to your desired firmness.
- The material will fully settle within 2-3 nights of use.

INTEX®


Relax. It's not leaking.

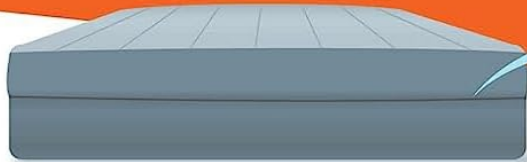


When you first inflate your airbed, the material will

STRETCH

which is sometimes misinterpreted as leaking.

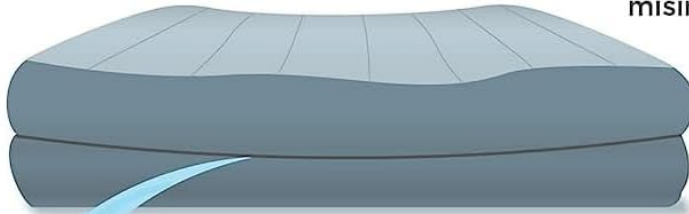

You will sense a loss of pressure, that's just the bed stretching.

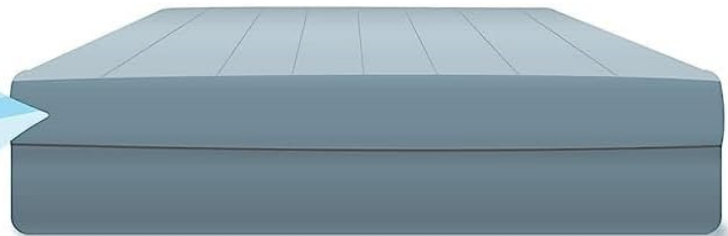

Simply re-inflate the bed again.

Do so as needed until the bed fully settles, usually in 2-3 nights.



BEFORE RETURNING TO STORE PLEASE READ THE FOLLOWING

Image: Graphic explaining that initial air loss is due to material stretching, not leaking, and advises re-inflation until the bed settles.

4. OPERATING INSTRUCTIONS

Once inflated, your Intex Dura-Beam Deluxe Comfort-Plush Air Mattress is ready for use. For optimal comfort and longevity:

- Ensure the mattress is placed on a smooth, clean surface.

- Avoid placing heavy or sharp objects on the mattress.
- For best sleep, adjust the firmness to your personal preference by adding or releasing small amounts of air.

Deflation:

To deflate the mattress for storage or transport:

1. **Plug In:** Plug the pump's power cord into a standard electrical outlet.
2. **Deflate:** Turn the pump dial to the "Deflate" position. The mattress will begin to deflate rapidly.
3. **Assist Deflation:** Gently press on the mattress to help expel air, especially towards the end of the process.
4. **Turn Off & Unplug:** Once fully deflated, turn the pump dial to the "Off" position and unplug the power cord.
5. **Fold & Store:** Fold the deflated mattress neatly and place it back into the included carry bag.

5. MAINTENANCE AND STORAGE

Proper care and maintenance will extend the life of your air mattress.

Cleaning:

- Clean the mattress surface with a damp cloth and mild soap.
- Do not use harsh chemicals or abrasive cleaners.
- Ensure the mattress is completely dry before storing.

Storage:

- Store the deflated mattress in a cool, dry place, away from direct sunlight and extreme temperatures.
- Keep it away from sharp objects or pests that could puncture the material.
- Always store the mattress in its original carry bag to protect it.

6. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Mattress loses air quickly (first few uses)	Material stretching (normal phenomenon)	Re-inflate the mattress to desired firmness. This will settle after 2-3 nights of use.
Mattress continues to lose air after several uses	Small puncture or leak	Locate the leak by applying soapy water to the surface (bubbles will appear). Use a repair patch kit (not included) to seal the puncture. Ensure the area is clean and dry before patching.
Pump not working	No power, clogged intake/exhaust, motor issue	Check power connection. Ensure pump vents are clear. If issues persist, contact Intex customer support.
Mattress not inflating fully	Insufficient power, pump setting incorrect, small leak	Verify power supply. Ensure pump dial is set to "Inflate". Check for leaks as described above.


7. SPECIFICATIONS

Detailed specifications for the Intex Dura-Beam Deluxe Comfort-Plush Air Mattress (Queen size).

Feature	Detail
Model Name	Dura-Beam: Comfort-Plush Air Mattress 22" Queen - BLUE EXCLUSIVE
Model Number	64417FL
Size	Queen
Product Dimensions (Inflated)	80"L x 60"W x 22"Th (203 cm x 152 cm x 56 cm)
Max Weight Capacity	600 lbs (272 kg)
Approximate Inflation Time	4 ¾ minutes (Queen)
Material	Fiber-Tech Construction
Color	Blue
Included Components	Carry Bag
Item Weight	21.4 pounds (9.7 kg)
UPC	078257329755

Dura-Beam® Deluxe **Comfort-Plush**

 HIGH-RISE AIR MATTRESS

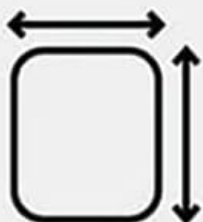

Mattress Size

Queen: 60" x 80" x 22"



Inflating Time

Queen: 4 ³/₄ mins.



Max Weight Capacity

Queen: 600 lbs., 272 kg.

*Inflating time varies by mattress size and desired firmness.

Image: Graphic detailing mattress size (Queen: 60" x 80" x 22"), inflating time (Queen: 4 ³/₄ mins), and max weight capacity (Queen: 600 lbs, 272 kg).

8. WARRANTY AND SUPPORT

Intex stands behind the quality of its products.

Warranty Information:

This Intex Dura-Beam Deluxe Comfort-Plush Air Mattress comes with a **1-Year Manufacturer Limited Warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support:

For further assistance, troubleshooting, or warranty claims, please visit the official Intex website or contact their customer service department. Contact information can typically be found on the product packaging or the Intex official website.

Note: Do not return the product to the store without first contacting Intex customer support for guidance.

© 2025 Intex. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question