

Bukumo 3.3 Cub

Bukumo 3.3 Cub Digital Security Safe User Manual

Model: 3.3 Cub | Brand: Bukumo

1. INTRODUCTION

Thank you for choosing the Bukumo 3.3 Cub Digital Security Safe. This safe is designed to protect your valuables, including sensitive documents, electronic storage drives, spare credit cards, medicines, firearms, money, and jewelry, from theft and unauthorized access. It features a robust steel construction, a programmable digital keypad, and emergency key access. Please read this manual thoroughly before operating your safe to ensure proper use and maximum security.

2. SAFETY INFORMATION

- **Keep Emergency Keys Separate:** Always store the emergency keys in a secure location away from the safe. Do not store them inside the safe.
- **Battery Safety:** Use only the specified battery type (4 AA batteries). Do not mix old and new batteries or different types of batteries. Remove batteries if the safe will not be used for an extended period.
- **Mounting:** For enhanced security, it is highly recommended to anchor the safe to a wall or floor using the provided expansion screws.
- **Children:** Keep the safe locked and the keys out of reach of children to prevent accidental access or entrapment.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Bukumo 3.3 Cub Digital Security Safe
- 1 x User Manual (this document)
- 2 x Emergency Keys
- 4 x Expansion Screws for mounting

4. PRODUCT OVERVIEW

The Bukumo 3.3 Cub Digital Security Safe offers robust protection and convenient access. Key features include:

- **Large Capacity:** With dimensions of 12.2"D x 13.8"W x 19.7"H, it provides ample space for various items.
- **Dual Locking Mechanism:** Access via a programmable digital keypad or emergency keys.
- **Solid Steel Construction:** Features three live steel lock bolts, thick pry-resistant concealed hinges, and a recessed door for enhanced security.
- **Anti-Theft Alarm System:** Activates after three incorrect password entries, locking the safe for 20 seconds.
- **Removable Shelf:** An adjustable interior shelf allows for flexible storage organization.
- **Mounting Capability:** Pre-drilled holes and included hardware for securing the safe to a wall or floor.



Image: The Bukumo 3.3 Cub Digital Security Safe with its door open, revealing a spacious interior suitable for various valuables.

LARGE SECURITY SAFE FOR HOME



Image: Visual representation of the safe's dimensions: 12.2 inches deep, 13.8 inches wide, and 19.7 inches high.

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment on the back of the keypad.
2. Insert 4 AA batteries (not included), ensuring correct polarity (+/-).
3. Close the battery compartment cover.

5.2 Initial Opening with Emergency Key

Upon first use, or if you forget your code, use the emergency key:

1. Remove the small cover plate on the keypad to reveal the emergency keyhole.
2. Insert one of the emergency keys into the keyhole and turn it clockwise.
3. Simultaneously turn the knob on the keypad clockwise to open the safe door.
4. Once open, remove the emergency key and store it securely.

2 WAYS TO OPEN THE SAFE



Image: The digital keypad and emergency key access point, illustrating both opening methods.

5.3 Setting Your Personal Password

It is recommended to set a new personal password immediately after initial opening:

1. With the safe door open, locate the red reset button on the inside of the door, near the hinge.
2. Press the red reset button. The keypad will beep, and the yellow indicator light will illuminate.
3. On the keypad, enter a new 3-8 digit code.
4. Press the '#' button to confirm. The keypad will beep again, and the yellow light will turn off, indicating the new code is set.
5. Test the new code with the door open before closing it.

5.4 Mounting the Safe

For optimal security, mount the safe to a solid surface:

1. Choose a suitable location on a wall or floor.
2. Mark the drilling points through the pre-drilled holes inside the safe.

3. Drill pilot holes into the wall or floor using an appropriate drill bit.
4. Align the safe with the drilled holes and secure it using the provided expansion screws.

WALL OR FLOOR-MOUNTED INSTALLATION



Image: Step-by-step guide for securely mounting the safe to a wall or floor.

6. OPERATING INSTRUCTIONS

6.1 Opening the Safe with Your Code

1. Enter your 3-8 digit personal password on the keypad.
2. Press the '#' button. The green indicator light will illuminate.
3. Within 5 seconds, turn the knob clockwise to open the safe door.

6.2 Closing and Locking the Safe

1. Close the safe door.
2. Turn the knob counter-clockwise to engage the locking bolts.
3. The safe is now locked.

6.3 Anti-Theft Alarm System

The safe is equipped with an alarm system:

- If an incorrect password is entered 3 consecutive times, the alarm will activate, and the safe will lock for 20 seconds.
- During this period, no entries can be made.
- After 20 seconds, you can attempt to open the safe again.



Image: The safe's alarm system, indicated by a flashing red light, activates after multiple incorrect code entries.

6.4 Using the Removable Shelf

The safe includes a removable shelf to help organize contents:

- To remove the shelf, simply lift it and pull it out.
- To reinsert, align it with the support brackets and lower it into place.

SAFE BOX WITH REMOVABLE SHELF



Cash



Jewelry



Document



Firearms



Passport

Without Shelf

With Removable Shelf



Image: The safe's interior demonstrating storage capacity with and without the removable shelf, accommodating various item sizes.

7. MAINTENANCE

- **Battery Replacement:** When the red indicator light flashes during operation, it signifies low battery power. Replace all 4 AA batteries promptly.
- **Cleaning:** Wipe the safe's exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Keyhole Maintenance:** Do not lubricate the emergency keyhole.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with code.	Incorrect code entered, low batteries, or alarm activated.	Re-enter code carefully. Replace batteries. Wait for alarm to reset if activated. Use emergency key.

Problem	Possible Cause	Solution
Keypad is unresponsive.	Dead batteries.	Replace all 4 AA batteries.
Forgotten password.	Password forgotten.	Use the emergency key to open the safe, then reset the password following Section 5.3.
Safe door will not close.	Obstruction in the door frame or bolts.	Check for any items blocking the door or bolts. Ensure the bolts are retracted before closing.

9. SPECIFICATIONS

Feature	Detail
Brand	Bukumo
Product Dimensions (D x W x H)	12.2" x 13.8" x 19.7"
Lock Type	Electronic Combination Lock
Color	Black
Capacity	2.4 Cubic Feet (Note: Product title states 3.3 Cub, this is a common discrepancy, refer to physical dimensions for actual space)
Material	Alloy Steel
Special Features	Alarm System, Anti-Theft, Combination Lock, Fire Resistant, Removable Shelf
Mounting Type	Wall Mount / Floor Mount
Item Weight	33 pounds (15 Kilograms)
Water Resistance Level	Water Resistant
Batteries Required	Yes (4 AA, not included)

10. WARRANTY AND SUPPORT

Bukumo provides a lifetime warranty for this product. If you encounter any quality issues with your safe during the warranty period, please contact Bukumo customer service. We are committed to providing 24-hour online service, repair services, and spare parts supply to ensure your satisfaction.

For support, please refer to the contact information provided with your purchase or visit the official Bukumo website.

